

**1133, 1144, 1155,  
1157 and 1158  
Combines**



**John Deere Werke Zweibrücken  
TM4476**

Printed in Germany (English)

# Combines 1133, 1144, 1155, 1157 and 1158 TECHNICAL MANUAL TM-4476 (JAN-90)

## CONTENTS OF SECTIONS

### SECTION 10 – GENERAL

Group 05 – Specifications

### SECTION 20 – ENGINE REPAIR

Group 05 – Removal and installation, 4-cyl. engine  
Group 10 – Removal and installation, 6-cyl. engine

### SECTION 30 – FUEL AND AIR REPAIR

Group 05 – Fuel filter with water trap and electrical fuel transfer pump

### SECTION 40 – ELECTRICAL SYSTEM REPAIR

Group 05 – Connectors  
Group 10 – Electrical system components  
Group 15 – Starting motor  
Group 20 – Alternator  
Group 25 – Low shaft speed monitor system  
Group 30 – Electromagnetic transmission brake

### SECTION 50 – POWER TRAIN REPAIR

Group 05 – Variable ground speed drive  
Group 10 – Engine clutch and mechanical clutch operation (3-speed transmission)  
Group 15 – Engine clutch operation (4-speed transmission)  
Group 20 – Engine clutch (4-speed transmission)  
Group 25 – Three-speed transmission  
Group 30 – Four-speed transmission with differential  
Group 35 – Final drives, differential (3-speed transmission)  
Group 40 – Final drives (4-speed transmission)  
Group 45 – Final drive on rice combine (4-speed transmission)

*COPYRIGHT © 1990 DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION™ Manual*

### SECTION 60 – BRAKES, REAR AXLE AND STEERING REPAIR

Group 05 – Parking brake (3-speed transmission)  
Group 10 – Parking brake (4-speed transmission)  
Group 15 – Brake operation  
Group 20 – Foot brakes (3-speed transmission)  
Group 25 – Foot brakes (4-speed transmission)  
Group 30 – Foot brakes with integrated slave cylinder  
Group 35 – Hydrostatic steering unit  
Group 40 – Rear axle  
Group 45 – V-support for wide rear axle  
Group 50 – Steering cylinder

### SECTION 70 – HYDRAULIC SYSTEM REPAIR

Group 05 – Hydraulic oil reservoir and lines  
Group 10 – Hydraulic pump  
Group 15 – 4-spool control valve with flow divider  
Group 20 – Hydraulic cylinders  
Group 25 – Hydraulic system diaphragm-type accumulator

### SECTION 80 – MISCELLANEOUS

Group 05 – Bearings and shafts  
Group 10 – Drive belts  
Group 15 – Drive chains

### SECTION 90 – OPERATOR'S PLATFORM WITH CAB

Group 05 – Safe handling of refrigerants  
Group 10 – Air conditioning compressor  
Group 15 – Air conditioning system components  
Group 20 – Air conditioning system service and tests  
Group 25 – Cab ventilation system  
Group 30 – Cab heating system  
Group 35 – Operator's cab  
Group 40 – Control levers  
Group 45 – Operator's seat

### SECTION 100 – CUTTING PLATFORM AND CORN HEAD

INHA-ZI81AE-111189

## CONTENTS OF SECTIONS – CONTD.

### SECTION 110 – FEEDER HOUSE

- Group 05 – Feeder house drive
- Group 10 – Feeder house with compact cutting platform
- Group 15 – Feeder house with quick-tach cutting platform

### SECTION 120 – SEPARATOR AND CLEANING UNIT

- Group 05 – Stone trap
- Group 10 – Separator drive
- Group 15 – Variable cylinder drive
- Group 20 – Threshing cylinder
- Group 25 – Concave
- Group 30 – Beater variable drive
- Group 35 – Beater
- Group 40 – Cross shaker
- Group 45 – Straw walkers
- Group 50 – Cleaning shoe, grain return pan and auger housing
- Group 55 – Fan and variable speed drive

### SECTION 130 – GRAIN PROCESSING

- Group 05 – Clean grain and tailings augers
- Group 10 – Clean grain elevator
- Group 15 – Tailings elevator
- Group 20 – Upper tailings auger
- Group 25 – Grain tank leveling auger
- Group 30 – Grain tank center fill auger
- Group 35 – Inner grain tank unloading auger
- Group 40 – Outer grain tank unloading auger
- Group 45 – Discharge tube

### SECTION 140 – SPECIAL EQUIPMENT

- Group 05 – Straw chopper drive
- Group 10 – Straw chopper rotor bearings

### SECTION 220 – ENGINE OPERATION

### SECTION 230 – FUEL AND AIR INTAKE SYSTEM OPERATION

- Group 05 – General information, fuel filter and fuel transfer pump

### SECTION 240 – ELECTRICAL SYSTEM – OPERATION AND TESTS

- Group 05 – General information
- Group 10 – Circuit plan, wiring diagram and wiring harnesses
- Group 15 – Checking indicator lights
- Group 20 – Checking low shaft speed monitor system
- Group 25 – Checking straw warning device
- Group 30 – Checking electromagnetic transmission brake

### SECTION 250 – POWER TRAIN – OPERATION AND TESTS

- Group 05 – Engine clutch and operation (3-speed)
- Group 10 – Engine clutch and operation (4-speed)
- Group 15 – Three-speed transmission
- Group 20 – Four-speed transmission

### SECTION 260 – BRAKES, REAR AXLE AND STEERING – OPERATION AND TESTS

- Group 05 – Brake operation
- Group 06 – Foot brake and brake operation (combines with rice equipment)
- Group 10 – Operation and flow diagram – hydrostatic steering
- Group 15 – Diagnosing steering system malfunctions
- Group 20 – Primary (steering) circuit testing

### SECTION 270 – HYDRAULIC SYSTEM – OPERATION AND TESTS

- Group 05 – Hydraulic circuit symbols
- Group 10 – Hydraulic lift circuit
- Group 15 – Lifting system - diagnosing malfunctions
- Group 20 – Hydraulic lift circuit – testing

INHA-ZIB2AE-111189

## CONTENTS OF SECTIONS – CONTD.

### **SECTION 290 – OPERATOR'S PLATFORM AND CAB – OPERATION AND TESTS**

- Group 05 – Cab ventilation system
- Group 10 – Air conditioning system
- Group 15 – Safe handling of refrigerants
- Group 20 – Testing air conditioning system
- Group 25 – Cab heating system

INHA-Z183AE-111189