

TM109819 - XUV550, XUV550 S4, XUV560, and XUV560 S4 XUV Gator Utility Vehicle

Foreword

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



CAUTION:

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.


Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

TM109819 - XUV550, XUV550 S4, XUV560, and XUV560 S4 XUV Gator Utility Vehicle

Recognize Safety Information

Recognize Safety Information

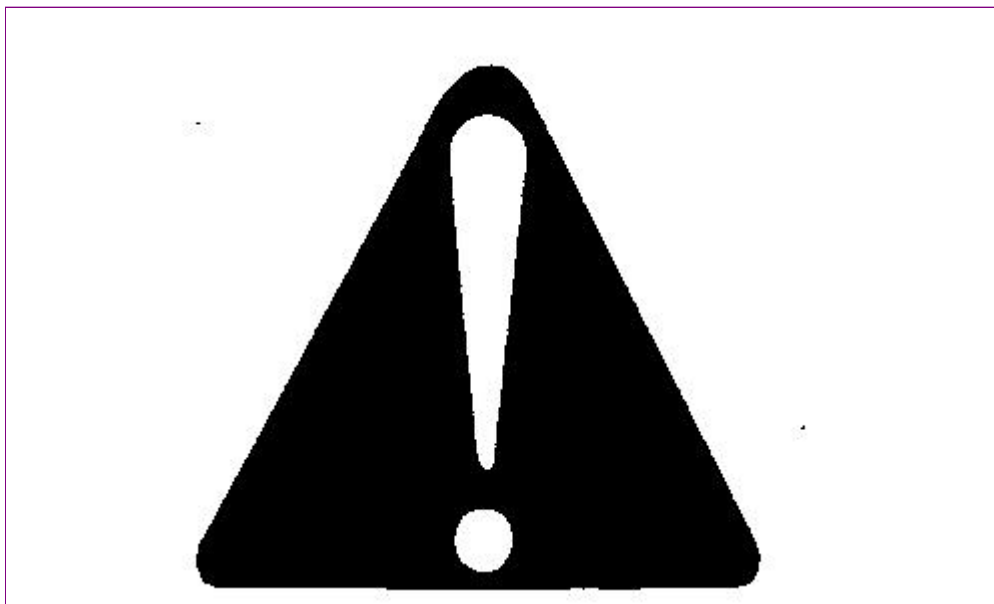

T81389-UN: Safety-alert symbol

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

TM109819 - XUV550, XUV550 S4, XUV560, and XUV560 S4 XUV Gator Utility Vehicle

Understand Signal Words

Understand Signal Words



TS187-19: Signal Words


A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

TM109819 - XUV550, XUV550 S4, XUV560, and XUV560 S4 XUV Gator Utility Vehicle

Follow Safety Instructions

Follow Safety Instructions

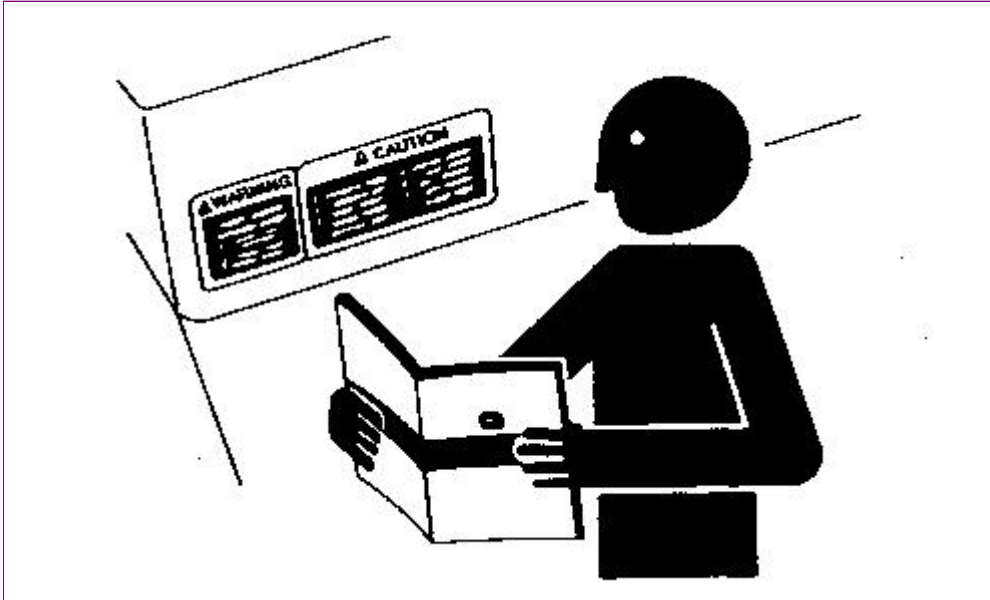

TS201-UN: Safety Messages

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

**TM109819 - XUV550, XUV550 S4, XUV560, and XUV560 S4 XUV Gator
Utility Vehicle
Practice Safe Maintenance**

Practice Safe Maintenance



TS218-UN: Keep Area Clean

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

TM109819 - XUV550, XUV550 S4, XUV560, and XUV560 S4 XUV Gator Utility Vehicle

Use Proper Tools

Use Proper Tools



TS779-UN: Proper Tools

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.

TM109819 - XUV550, XUV550 S4, XUV560, and XUV560 S4 XUV Gator Utility Vehicle

Handle Fluids Safely—Avoid Fires

Handle Fluids Safely—Avoid Fires



TS227-UN: Avoid Fires

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.

TM109819 - XUV550, XUV550 S4, XUV560, and XUV560 S4 XUV Gator Utility Vehicle

Drain Gasoline When Storing Machine

Drain Gasoline When Storing Machine



TS227-UN: Storing Gasoline

Gasoline stored in fuel tank can explode.

Never store equipment with gasoline in the tank inside a building where fumes may reach an open flame or spark.


Always drain gasoline from fuel tank and carburetor bowl when storing machine. Allow engine to cool before storing.

**TM109819 - XUV550, XUV550 S4, XUV560, and XUV560 S4 XUV Gator
Utility Vehicle
Handling Batteries Safely**

Handling Batteries Safely



TS204-UN: Caution

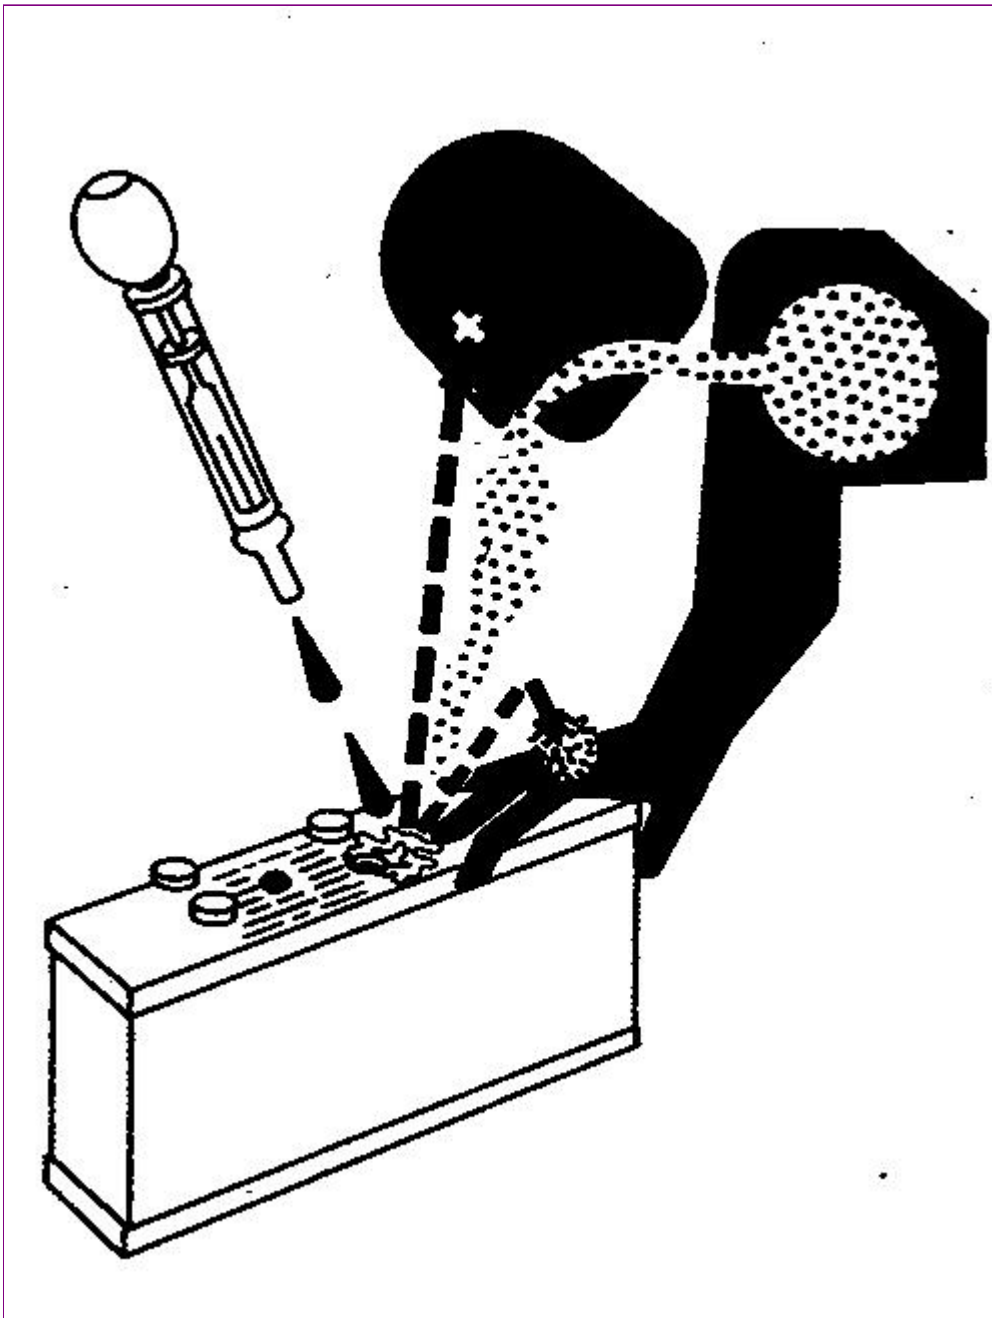

TS203-UN: Caution

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves

Thank you very much for your reading. Please Click Here. Then Get COMPLETE MANUAL. NO WAITING



NOTE:

If there is no response to click on the link above, please download the PDF document first and then click on it.

- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.

If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:


1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

TM109819 - XUV550, XUV550 S4, XUV560, and XUV560 S4 XUV Gator Utility Vehicle

Prepare for Emergencies

Prepare for Emergencies

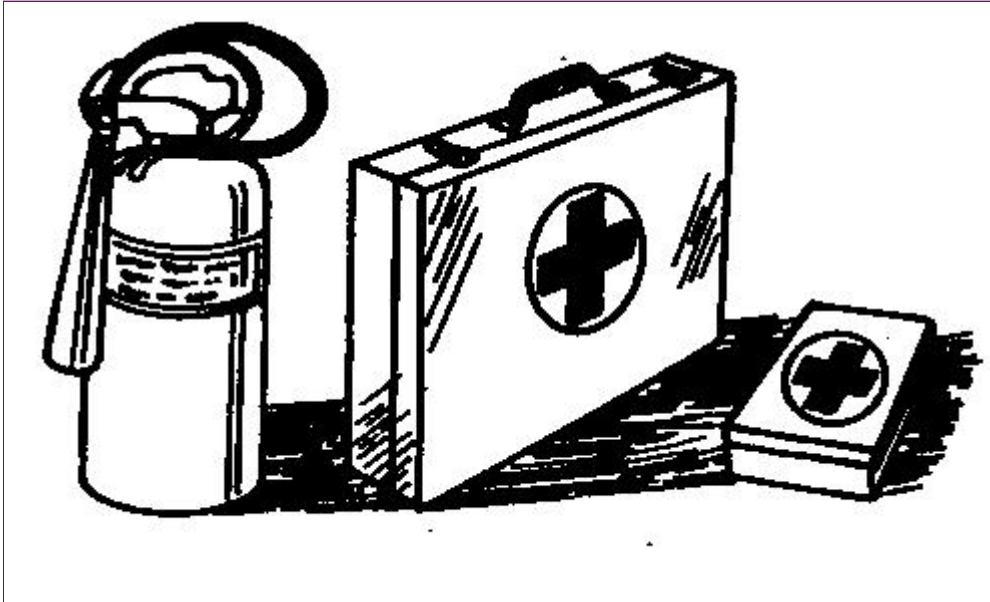

TS291-UN: First Aid Kit

Be prepared if a fire starts.


Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

TM109819 - XUV550, XUV550 S4, XUV560, and XUV560 S4 XUV Gator Utility Vehicle

Park Machine Safely

Park Machine Safely

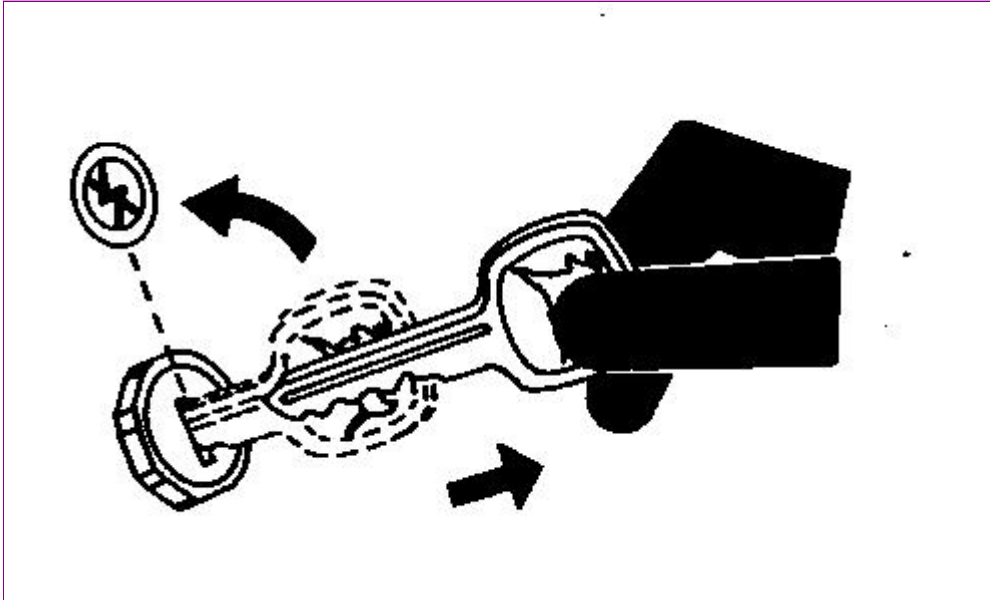

TS230-UN: Remove the Key

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.