

# Tractors 6405 and 6605 Repair



D C G

**TECHNICAL MANUAL**  
**Tractors 6405 and 6605 Repair**  
TM4866 02APR02 (ENGLISH)

**John Deere Brasil**  
Impresso no Brasil



T M 4 8 6 6 0 2 A P R 0 2

# Contents

## SECTION 05—Safety

Group 00—Norms of Safety

## SECTION 50—SyncroPlus Transmission

Group 00—Separating and Installing Transmission Components

Group 05—Transmission Activation

Group 10—Clutch, Oil Pump and Valves

Group 15—Transmission box

Group 20—Slow-speed Transmission

Group 30A—Group Box — Series 10

Group 30B—Group Box — Series 20

## SECTION 55—PowrQuad Transmission

Group 00—Separating and Installing the PowrQuad Module

Group 10—PowrQuad Box

## SECTION 56—Power Transmission

Group 00—Separating and Installing Components

Group 05—Transmission Shaft and Torsion Damper

Group 05—MFWD clutch from series 161067

Group 16—Differential

Group 20—Hydraulic Pump Transmission

Group 25—Final reductions

Group 30—Power Take-Off

## SECTION 60—Steering and Brakes

Group 05—Hydrostatic Steering

Group 15—Brake Valve

Group 20—Brakes

## SECTION 70—Hydraulic system

Group 05—RCV Controls

Group 10—Hydraulic Pump and Charge Pump

Group 11—Gear pump — (Eaton)

Group 13—Gear Pump — (Albarus)

Group 15—Hydraulic Control Valves

Group 20—Hydraulic Lift and Lift Cylinder

Group 22—Traction/Sensitivity Sensor

Group 25—Remote Control Connections and Valves

## SECTION 80—Front axle

Group 00—Special Tools

Group 05—Technical Data and Adjustment Values

Group 10—Disassembly

Group 15—Assembling the differential

Group 20—Pinion depth

Group 25—Adjusting the play between the teeth

Group 30—Assembling the Bridges

Group 35—Assembling the Universal Joint

Group 40—PTO

Group 45—Assembling the Hydraulic Cylinder

Group 50—Convergence Regulation

Group 55—Separating and Installing the Front Shaft/Components

Group 60—Front Axle Support

Group 65—Front Axle 4 x 2

Group 66—Steering Cylinder — 4x2 shaft

Group 70—Front and Rear Wheels

Group 75—Main Chassis

Group 80—Traction bar

## SECTION 90—Operator Platform and Cab

Group 00—Removing and Installing the Operator Platform

Group 15—Air-conditioning System

Group 20—Heating System

Group 25—Cab

Group 30—Various

## SECTION 99—Special Tools Made By the Dealer

Group 05—Custom-made Tools

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2001  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual

# Section 05 Safety

## Contents

	Page
<b>Group 00—Norms of Safety</b>	
Acknowledge the safety Information . . . . .	.05-00-1
Observe the Safety Messages . . . . .	.05-00-1
Replace the Safety Stickers . . . . .	.05-00-1
Safe Handling of Liquids and fuels . . . . .	.05-00-2
Avoiding the Explosion of Battery Gasses . . . . .	.05-00-2
Be Prepared in Case of Emergency . . . . .	.05-00-2
Remove the Paint Before Welding or Applying Heat . . . . .	.05-00-3
Leaks in High Pressure Lines . . . . .	.05-00-3
Safe Maintenance of the Radiator . . . . .	.05-00-4
Avoid accidentally starting the machine. . . . .	.05-00-4
Avoid applying heat near the pressurized fluid lines . . . . .	.05-00-4
Work in a well ventilated area . . . . .	.05-00-4
Wear Appropriate Clothing . . . . .	.05-00-5
Safe Maintenance . . . . .	.05-00-5
Parking the Tractor . . . . .	.05-00-6
Use Adequate Lifting Devices . . . . .	.05-00-6
Supporting the Machine Safely . . . . .	.05-00-6
Perform clean work . . . . .	.05-00-7
Adequate Lighting for the Working Area . . . . .	.05-00-7
Avoid Accidents. . . . .	.05-00-7
Use the Tools Correctly. . . . .	.05-00-8
Tire Installation . . . . .	.05-00-8
Safe Front Wheel Drive Maintenance . . . . .	.05-00-9
Roll Over Protection Structure. . . . .	.05-00-9
Correct Disposal of Waste Material . . . . .	.05-00-9
Safety Live with It . . . . .	.05-00-10

### Acknowledge the safety Information

This is the Safety prevention symbol. When you see this on your machine or in this publication, always be aware of the risk of injury or accidents related to operating the equipment.



T81389 -UN-07DEC88

CQ.SGALERTA -19-14JUL98-1/1

### Observe the Safety Messages

Read the safety information in this publication and on your tractor carefully. Maintain the corresponding decals in good condition. Replace worn or missing decals. Get to know the operation of your Tractor and its Controls.

Always keep your tractor in good working condition. Any unauthorized modification to the tractor could result in reduced performance and/or safety, in addition to reducing its working life.




TS201 -UN-23AUG88

CQ.SGMENSEG -19-01OCT98-1/1

### Replace the Safety Stickers

Replace worn or missing stickers. Refer to the Operation Manual for their correct positions.

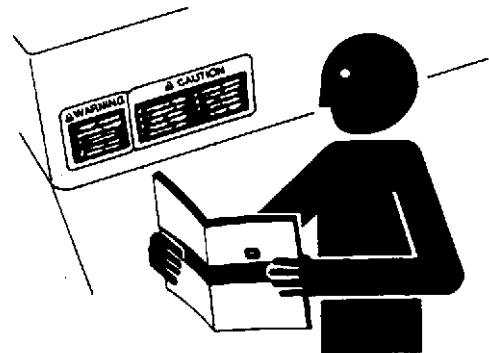

TS201 -UN-23AUG88

AG.LT04177,255 -19-29SEP98-1/1

### Safe Handling of Liquids and fuels

Handle fuels with caution as they are highly flammable. Do not smoke while refueling nor get near flames or sparks.

Turn the engine off before refueling. Refuel in an appropriate place and clean up any fuel that may have spilled. Do not puncture or incinerate any pressurized containers.

Do not store oil impregnated rags. They could spontaneously ignite.



TS227 -UN-23AUG88

CQ.SGLIQ -19-01OCT98-1/1

### Avoiding the Explosion of Battery Gasses

The gas released from the battery when opened or damaged is explosive. Always store them in a safe place far from any area where flames or sparks may occur.

Never test the battery charge by putting a metallic object across the terminals. Use a high discharge voltmeter or a densimeter.




TS204 -UN-23AUG88

CQ.SGBAT -19-01OCT98-1/1

### Be Prepared in Case of Emergency

Be Prepared in Case of Emergency Have a first aid kit and a fire extinguisher close at hand.

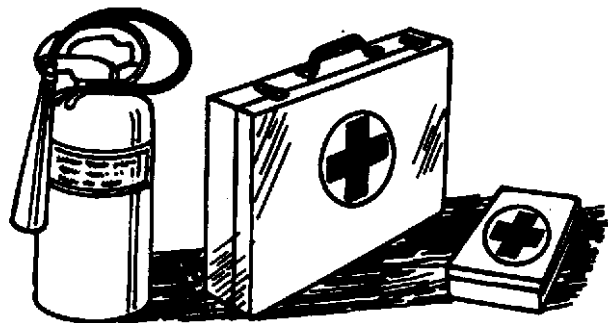

TS291 -UN-23AUG88

CQ.SGEMERG -19-01OCT98-1/1

## Remove the Paint Before Welding or Applying Heat.


Avoid the inhalation of gasses and dust as they are potentially toxic.

Noxious gasses can be generated due to paint heating up while welding, either arc or oxyacetylene.

Carry out all work outdoors or in a well ventilated area. Store paint and solvent in an appropriate place.

Remove the Paint Before Applying Heat.

- When using a sand blaster or sander, avoid the inhalation of dust.
- If solvent has been used, clean the surface to be welded with soap and water before welding. Remove all solvent containers and any remaining inflammable materials. Ventilate the work area for 15 minutes before welding or applying heat.

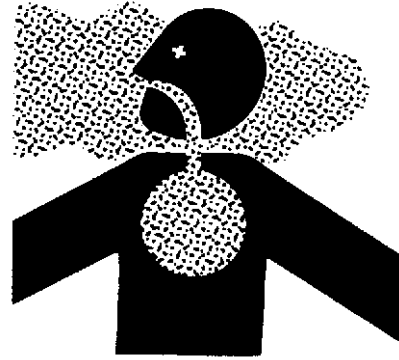


TS220 -UN-23AUG88

CQ,SGPINT -19-01OCT98-1/1

## Leaks in High Pressure Lines

Fluids under pressure that vent from the hydraulic system can have sufficient pressure to penetrate the skin causing serious injury. Therefore, it is essential to evacuate the pressure from the system before loosening or disconnecting any lines and to make sure that all connections and adapters are well tightened before pressurizing the system. Keep the body and hands clear of any high pressure leaks. It is difficult to find an hydraulic fluid leak if the hole is small. Use a piece of cardboard.

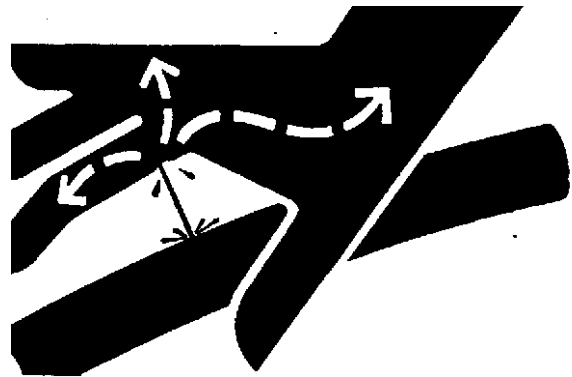

X9811 -UN-23AUG88


If, in spite of this precaution, the escaping high pressure fluid penetrates the skin, seek medical help immediately as these injuries can cause serious infection.

CQ,SGFUGAS -19-01OCT98-1/1

### Safe Maintenance of the Radiator

Danger of burns!

With the engine turned off, loosen the expansion tank cap to the first stage to release the pressure before removing it completely.

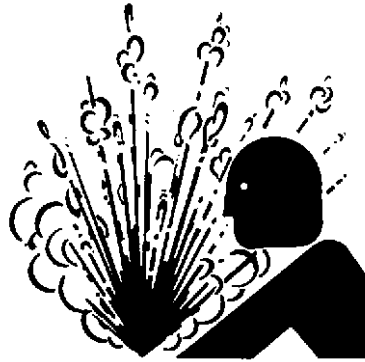

CQ.SGRADIAD -19-01OCT98-1/1


TS281 -JUN-23AUG88

### Avoid accidentally starting the machine.

Avoid possible accidents or death by accidentally starting the machine.

Do not start the machine by short circuiting the terminals.

NEVER start the engine while standing beside the machine. Start the engine only from the operator seat and with the transmission in neutral or park.

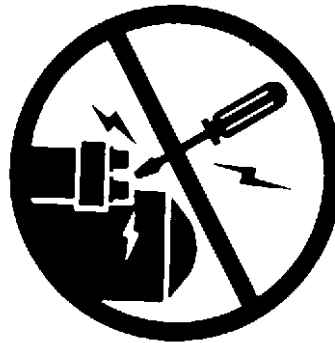

CQ.STBYPASS -19-11SEP98-1/1

TS177 -JUN-11JAN89

### Avoid applying heat near the pressurized fluid lines

Exposed flames close to the pressurized fluid lines can cause a flammable cloud of steam to develop, which, if ignited, can cause serious burns to anyone close by. Avoid applying heat with either arc or oxyacetylene near the pressurized fluid lines or any other line containing inflammable fluid. The lines can be accidentally cut by excessive heat given off by the welding torch.




CQ.SGCALOR -19-01OCT98-1/1

TS953 -JUN-15MAY90

### Work in a well ventilated area

The ingestion of exhaust fumes can cause damage or death. If it is necessary to carry out work on the engine with it running, remove the exhaust gasses from the area with a extension pipe connected to the exhaust pipe.

If you do not have an extension pipe, open the doors and let the outside air circulate inside the work area.

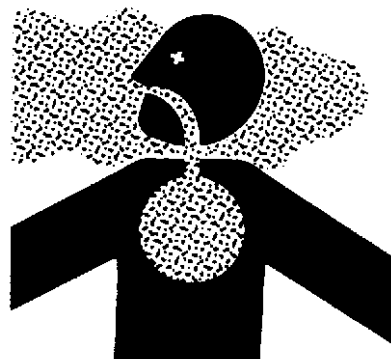


CQ.SGAR -19-14JUL98-1/1

TS220 -JUN-23AUG88

### Removing the clutch box

50  
00  
4

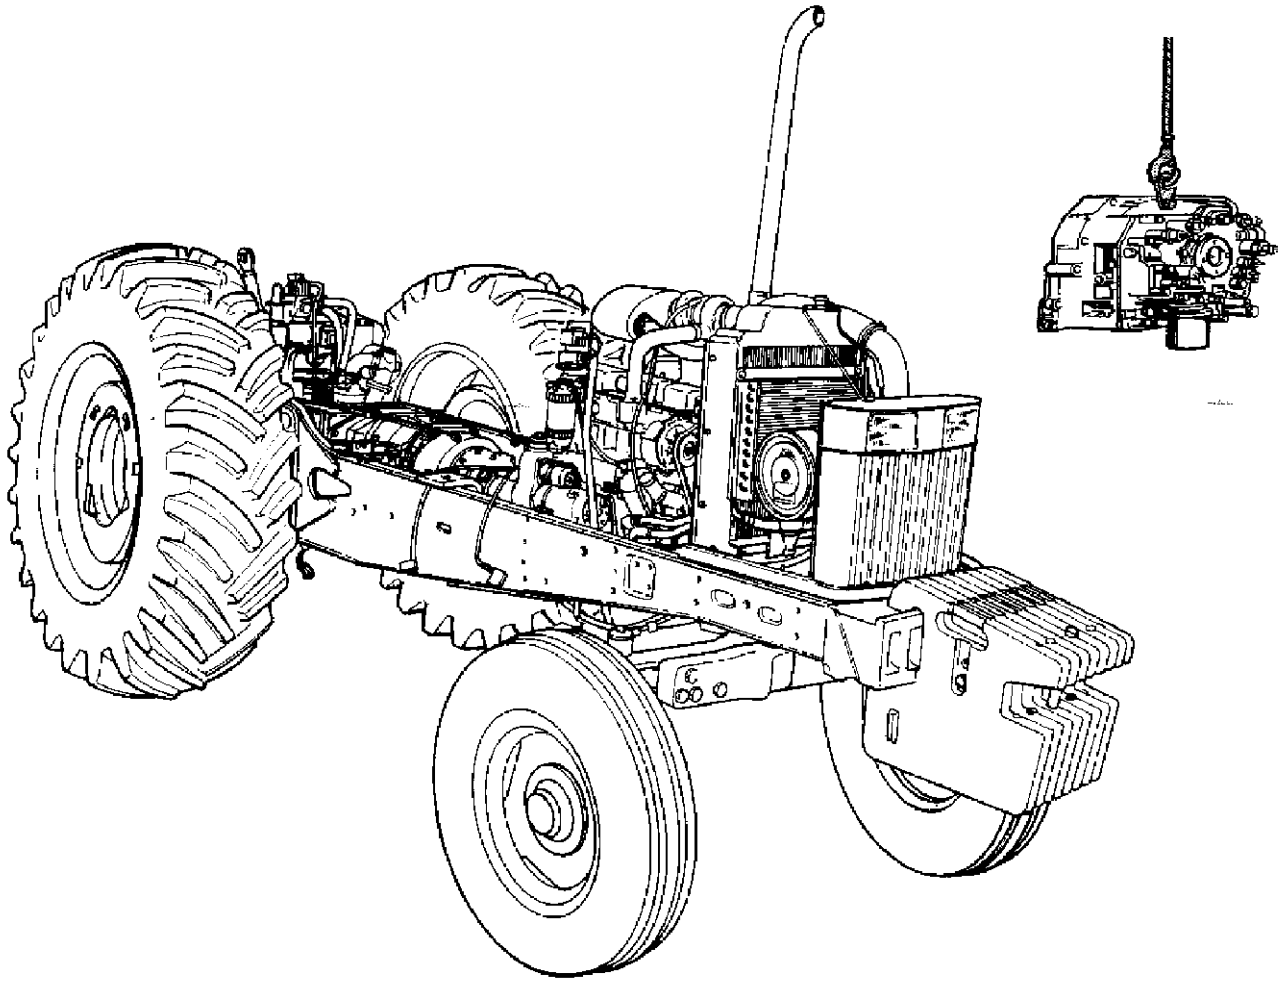

CQ168140

CQ168140 -UN-02DEC98

AG,LT04177,359 -19-09NOV98-1/2

**IMPORTANT:** The removal of the clutch and the gear box can be done sequentially from under the tractor without removing the operation platform. For the group box, removal can be done by moving the carcass forwards after having removed the clutch and the gear box.

To remove the operation platform, see Section 90, Group 00.



CQ168060

CQ168060 -UN-02DEC98


AG,LT04177,359 -19-09NOV98-2/2



### Removing the Transmission (without removing the platform)

Remove the bolts of the platform floorboard.

Remove the central plate of the floorboard.

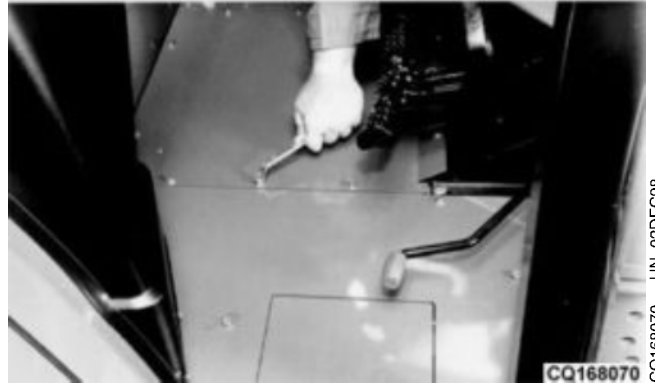

AG,LT04177,360 -19-09NOV98-1/10

CQ168070 -UN-02DEC98


CQ168070

Move the swaying draw bar backwards.

Remove the oil drainage bolts (A) and (B) and put the transmission oil in a suitable container.

Capacity:

Oil change with filter..... 52 L. approx.

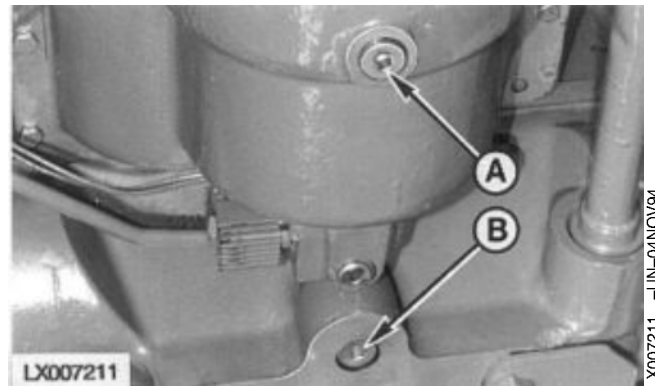


AG,LT04177,360 -19-09NOV98-2/10

LX007211 -UN-04NOV94

LX007211

**CAUTION:** Perform this operation with the tractor on level ground, shift box in PARK and the engine turned off.

Remove the plug (A).

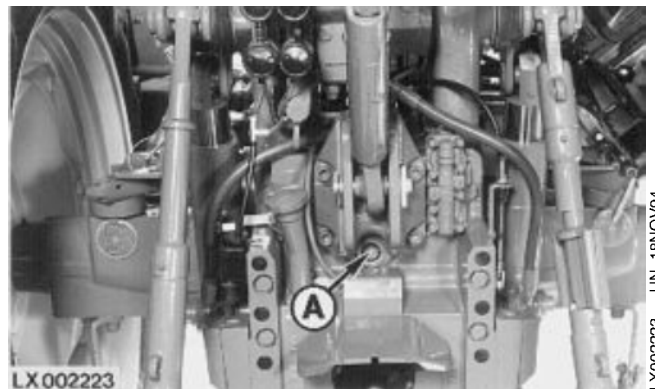


AG,LT04177,360 -19-09NOV98-3/10

LX002223 -UN-18NOV94

LX002223

Remove the PTO drive shaft (A) and then remove the pump drive shaft out of the box using the extractor KJD10173 (B).

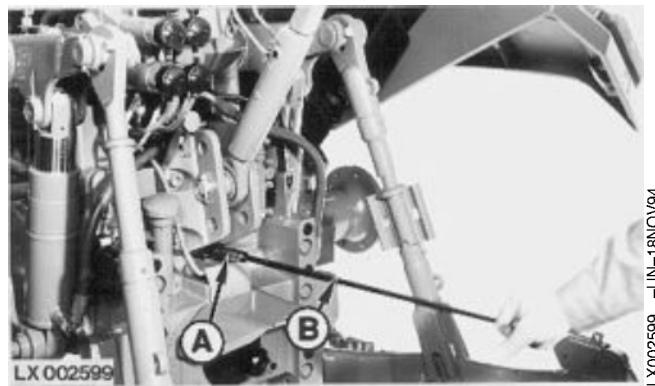

AG,LT04177,360 -19-09NOV98-4/10


LX002599 -UN-18NOV94

LX002599

Continued on next page

## Separating and Installing Transmission Components


Remove the clutch cable and the clutch spring (B) as well as the spring support (A) to free the set.

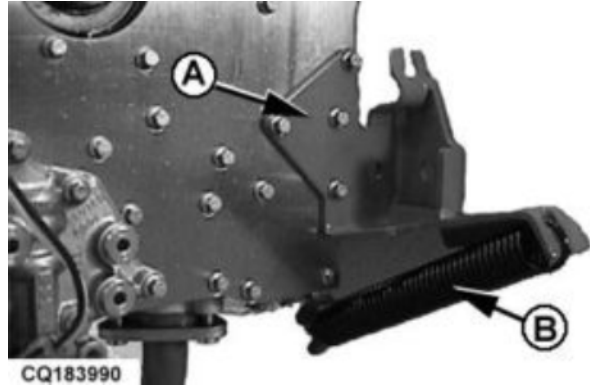

CQ183990 -UN-12APR99

AG,LT04177,360 -19-09NOV98-5/10


Separate the articulate transmission cardan shaft (see Section 56-05A).

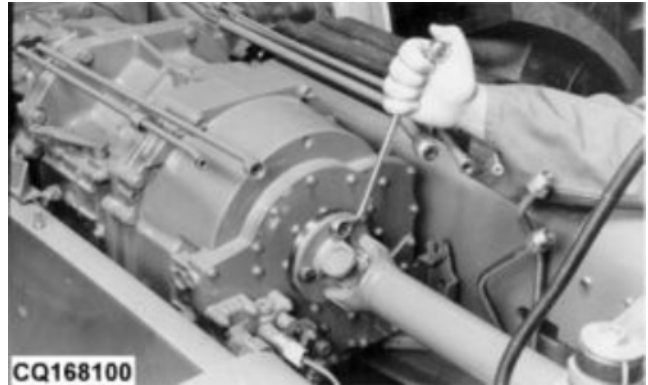

CQ168100 -UN-02DEC98

AG,LT04177,360 -19-09NOV98-6/10

Disconnect the connector from the oil filter blockage sensor.

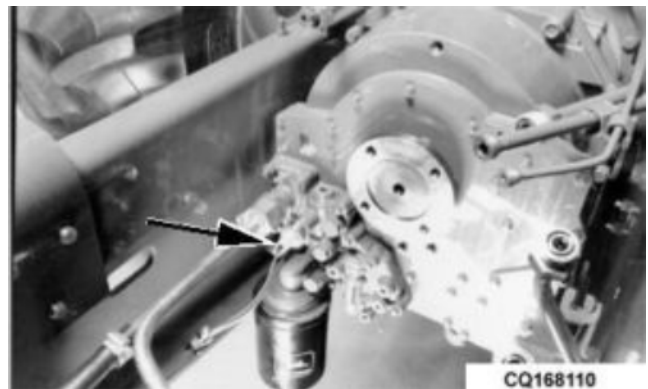


CQ168110 -UN-09DEC98

AG,LT04177,360 -19-09NOV98-7/10

Remove the three Allen bolts.

Disconnect the aspiration tubing (A) from the transmission oil pump on the clutch carcass.

Remove the tube by pulling it forward.

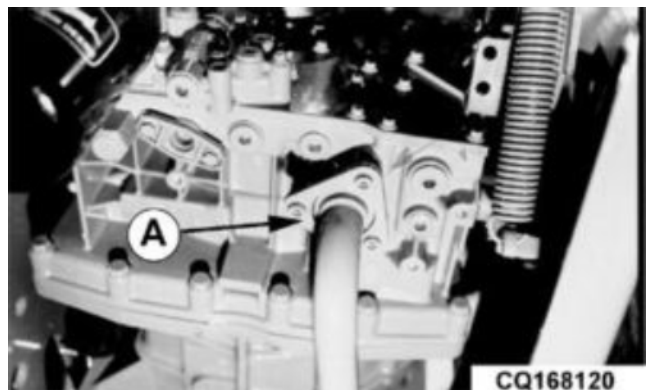

CQ168120 -UN-02DEC98


Continued on next page

AG,LT04177,360 -19-09NOV98-8/10

## Separating and Installing Transmission Components

50  
00  
7


Disconnect the input and output tubing (A) and (B) to the oil cooler from the clutch box.

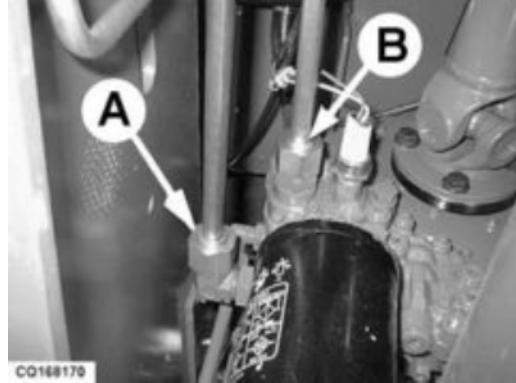

AG,LT04177,360 -19-09NOV98-9/10

Connect the lift ring JD244-1 (A) to the clutch carcass.  
Connect an adequate lifting device.  
Remove the bolts and then remove the clutch carcass.

**⚠ CAUTION: The clutch is heavy and difficult to handle. Therefore an adequate lifting device (tackle) is required, and when removing it from the tractor, get help from another person.**

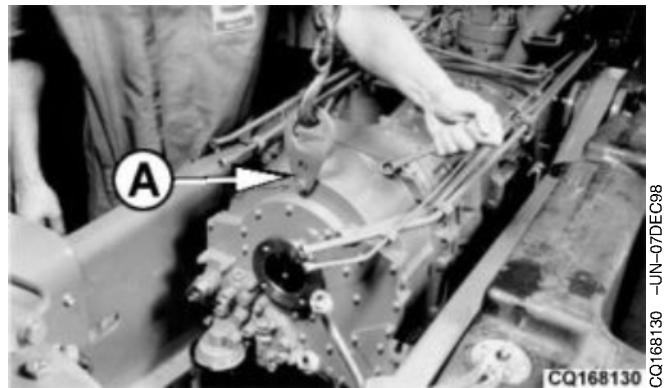

AG,LT04177,360 -19-09NOV98-10/10


### Installing the Clutch Box

Install a new seal (A) on the clutch box. Place the clutch box (B) on the gear box by applying even pressure.

To help with the coupling operation, turning the cardan shaft coupling flange might be required.

*NOTE: Do not use the bolts to force closing when assembling. Closing must be done only by hand pressure.*

*NOTE: Using the two stud bolts assembled on the lower part of the gear box as a guide is possible.*

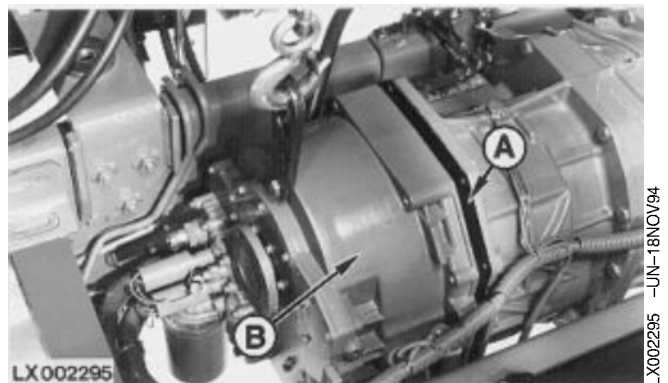


Continued on next page

AG,LT04177,362 -19-09NOV98-1/6

## Separating and Installing Transmission Components


Place the bolts (A) and tighten to 5.0 Kg.m (50 N.m, 35 lb-ft).

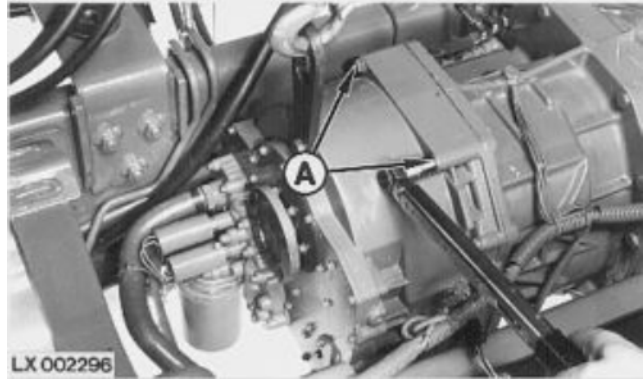

AG,LT04177,362 -19-09NOV98-2/6

Place the aspiration tubing in the differential box and the clutch carcass using a new "O" ring.

Tighten the three Allen bolts (A) on the aspiration tubing to 2.5 Kg.m (25 N.m, 18 lb-ft).

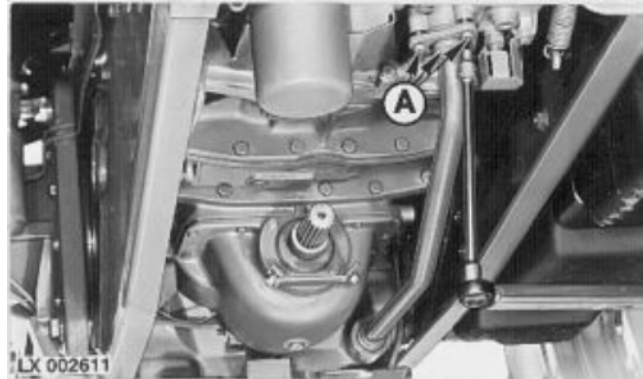

AG,LT04177,362 -19-09NOV98-3/6

Reinstall the articulate transmission cardan shaft (see Section 56, Group 05A).



AG,LT04177,362 -19-09NOV98-4/6

**NOTE:** To finish the installation, invert the sequence of the separation steps.

Reinstall the platform (see Section 90, Group 00).




Continued on next page

AG,LT04177,362 -19-09NOV98-5/6

## Separating and Installing Transmission Components

Fill the transmission with oil. Check the level and add more oil if needed. (See the Operator Manual).

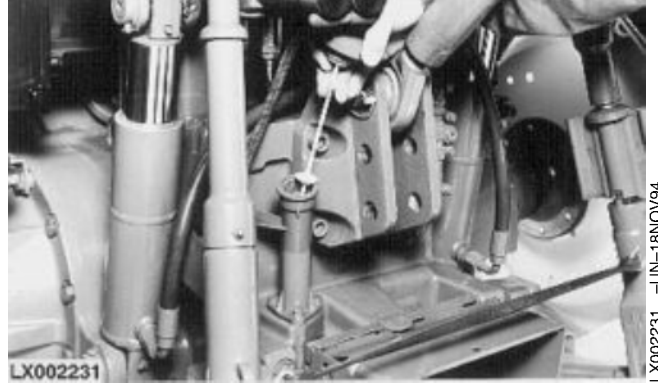


AG.LT04177,362 -19-09NOV98-6/6

50  
00  
9

## Removing the SyncroPlus Transmission Box

50  
00  
10

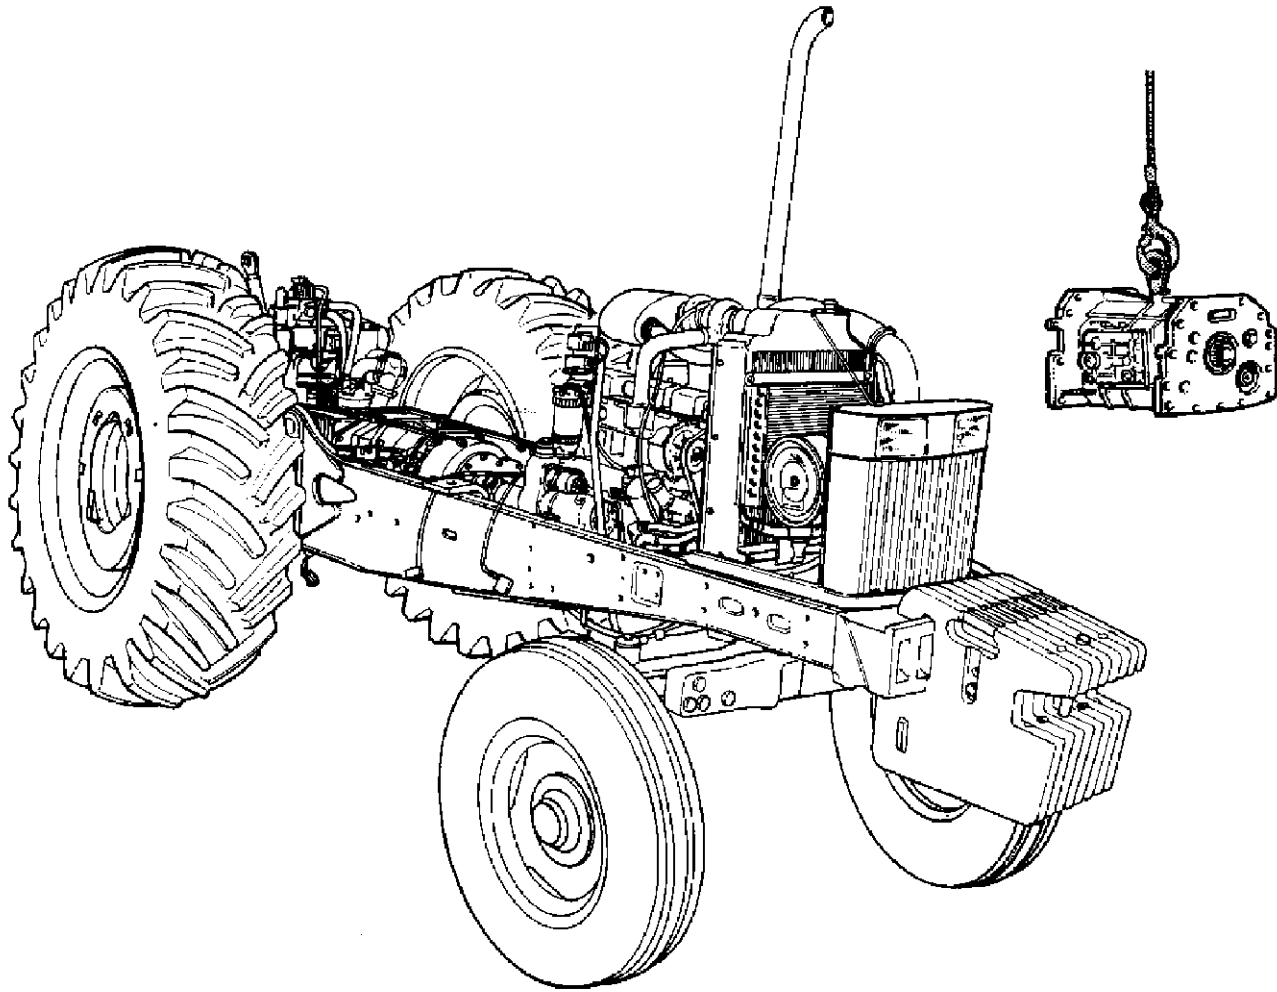

CQ168150

CQ168150 -JUN-02DEC98

AG.LT04177,363 -19-09NOV98-1/1

## Separating the Clutch Box

Separate the clutch box, see "Separating the Syncroplus clutch box".

Continued on next page

AG.LT04177,364 -19-09NOV98-1/4


## Separating and Installing Transmission Components

Disconnect the return tubing (A) and the gearshift cover (B).



AG.LT04177.364 -19-09NOV98-2/4

Fix the JD244-2 (A) lifting ring to the gearshift box with a bolt.

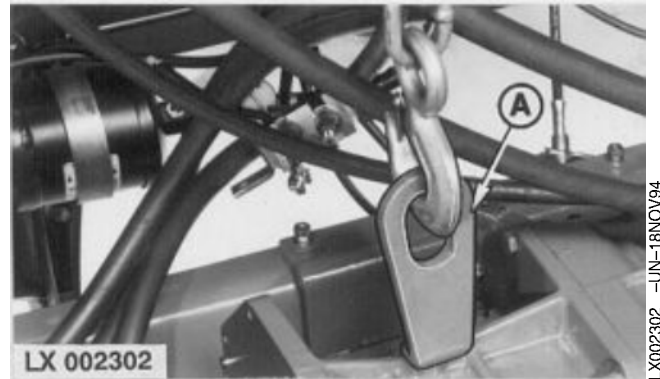


AG.LT04177.364 -19-09NOV98-3/4

**NOTE:** If the operation platform has not been removed, use either a chain or a rope to lower the shift box for there is an interference between the chain and the operation platform.

Connect the gear box to an adequate lifting device.

Remove the Bolts (A).

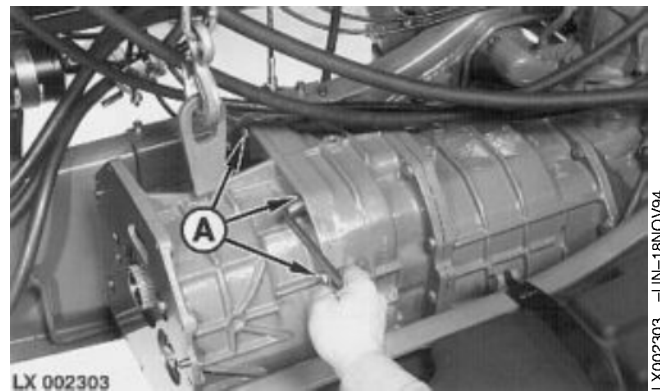

AG.LT04177.364 -19-09NOV98-4/4



### Installing the SyncroPlus Transmission Box

*NOTE: Check and adjust (if needed) first the axial clearance of the coupling collar (A) (see Section 50, Group 15).*

**IMPORTANT: Use Vaseline paste to fix the 3rd gear synchronizing ring on the synchronizing set to keep it from falling during the assembly operation.**

Install a new joint on the shift box.

Apply even pressure to fit the shift box on the group box, never use the bolts to force closing.

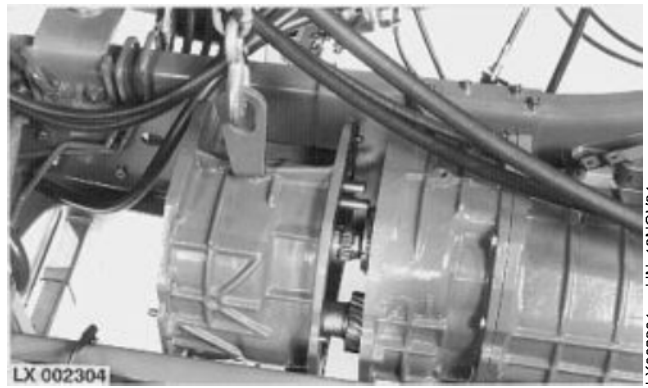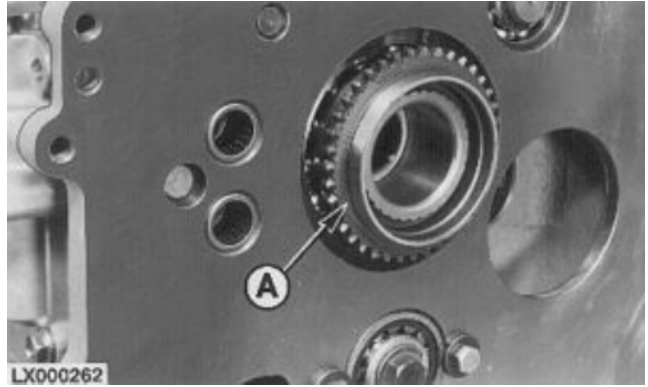


AG,LT04177,365 -19-10NOV98-1/5

Thread the bolts (A) and tighten them to the specified torque.


*NOTE: Pay attention when using the bolts with the indicated resistance grade.*

Resistance grade 8.8 5.5 Kg.m (55 N.m, 40 lb-ft)  
Resistance grade 10.9 7.0 Kg.m (70 N.m, 50 lb-ft)

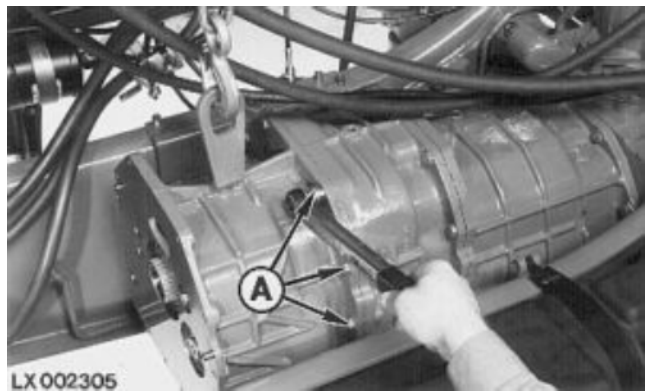

AG,LT04177,365 -19-10NOV98-2/5

Adjusting the gear mechanism (see Section 50, Group 15).

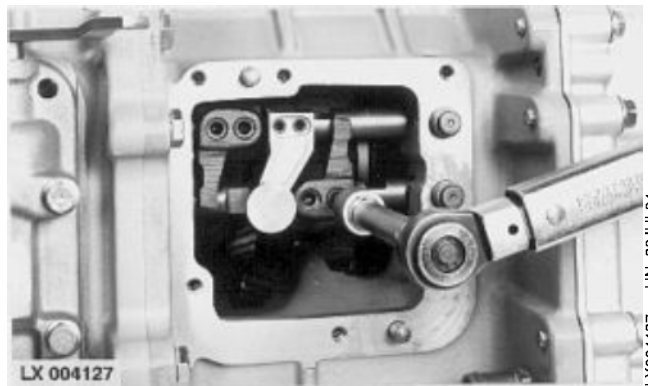

Continued on next page


AG,LT04177,365 -19-10NOV98-3/5



## Separating and Installing Transmission Components

Put a new joint (A) on the gearshift box cover and install the gearshift cover. Tighten the bolts to 3.0 Kg.m (30 N.m, 22 lb-ft).


Then adjust the engine starter safety switch (see Section 50, Group 15 ).

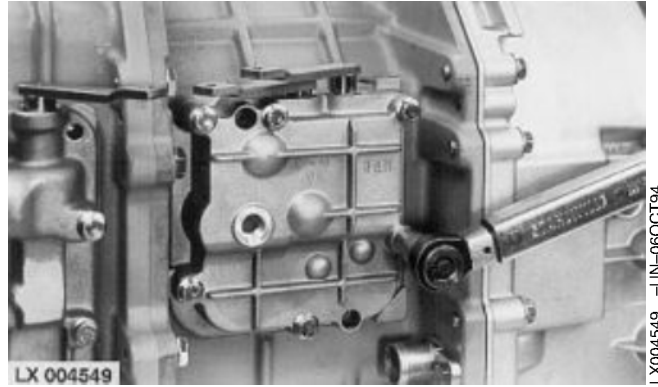

AG.LT04177,365 -19-10NOV98-4/5

Connect the transmission box return tubing.


Install the clutch box. See "Installing the Synchroplus clutch box".

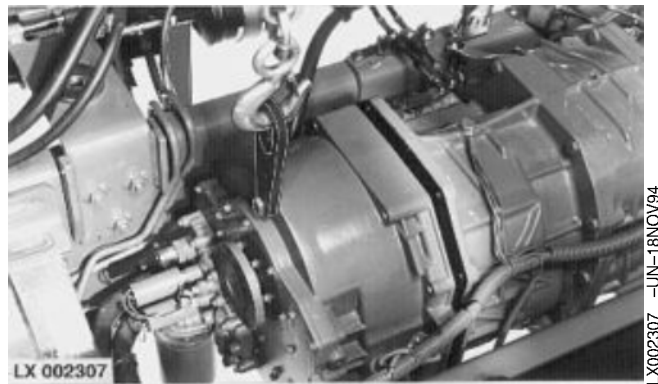

AG.LT04177,365 -19-10NOV98-5/5

50  
00  
13

## Removing the Group Box

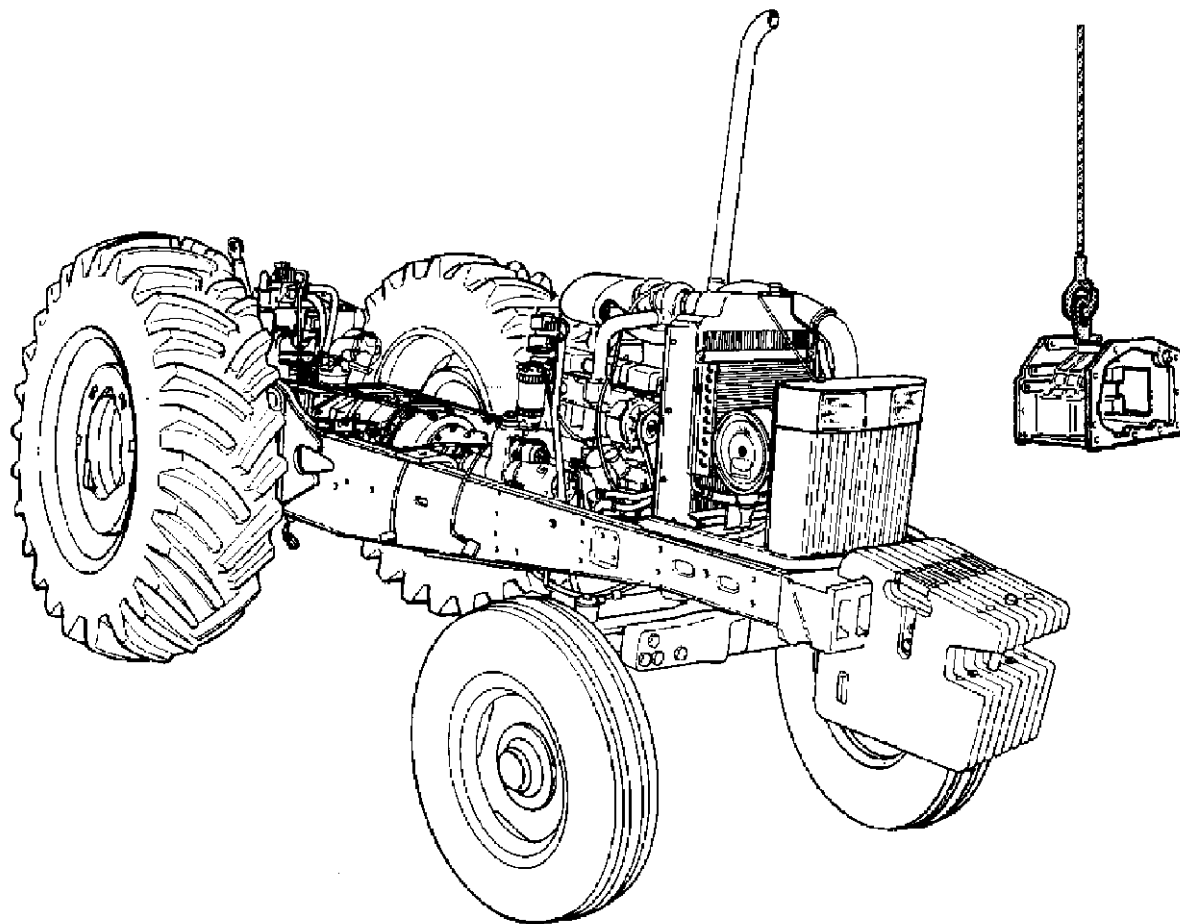

**CQ168160**

CQ168160 -UN-09DEC98

AG,LT04177,366 -19-10NOV98-1/1

## Removing the Group Box

Remove the gear box. See "Removing the Syncroplus Transmission Box" .

*NOTE: The group box removal operation is made easier by first removing the operation platform.*

Continued on next page

AG,LT04177,367 -19-10NOV98-1/2

Remove the front wheel drive clutch. See “Removing the front wheel drive clutch” in Section 56, Group 00.




AG.LT04177,367 -19-10NOV98-2/2

### Removing the Activating Cables

Disconnect the activating cables from the gearshift box cover levers.

- A - Support
- B - PARK cables
- C - Groups A and B
- D - Groups C and D

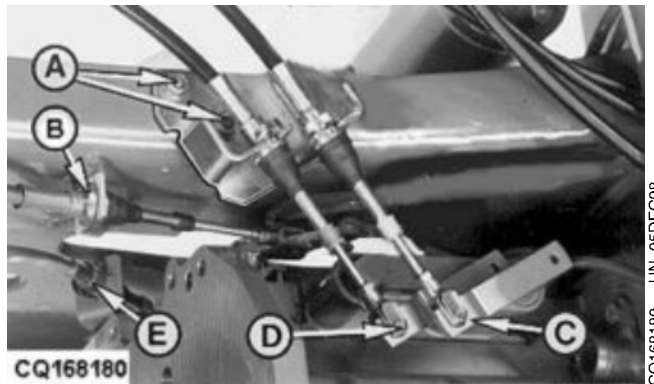

AG.LT04177,368 -19-10NOV98-1/3


Remove the gearshift cover (A) and loosen the shift fork Allen bolts.



AG.LT04177,368 -19-10NOV98-2/3

Fix the JD244-2 (A) lifting ring to the group box with bolt. Remove the bolts (B) and remove the box forward.

**⚠ CAUTION:** The group box is heavy and difficult to handle. Therefore an adequate lifting device (tackle) is required, and when removing it from the tractor, get help from another person.

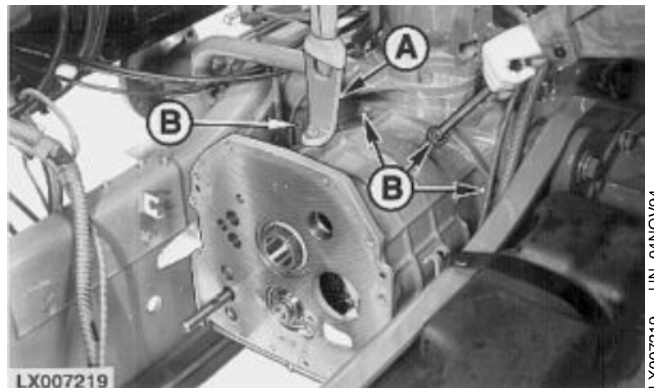

AG.LT04177,368 -19-10NOV98-3/3

**Thank you very much for your reading. Please Click Here. Then Get COMPLETE MANUAL. NO WAITING**



**NOTE:**

**If there is no response to click on the link above, please download the PDF document first and then click on it.**

## Installing the Group Box

Thoroughly clean the sealing surfaces. Put a new joint (A).


*NOTE: Before reinstalling the group box it is recommended that the front wheel drive clutch flange be cleaned*

Using an adequate lifting device, move the group box towards the differential box.

Apply even pressure and push the differential box center pins (B) into the corresponding housings on the group box.



LX002632 -JUN-18NOV94

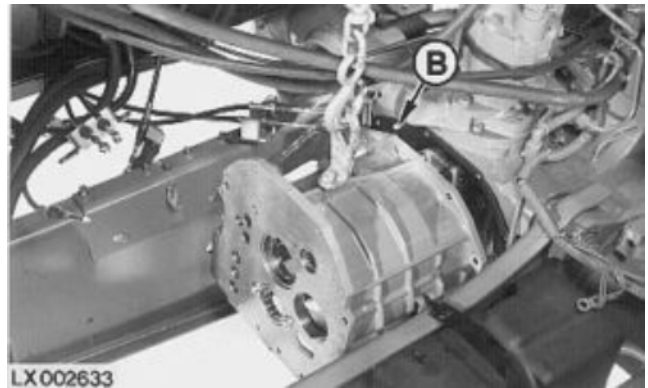

LX002633 -JUN-18NOV94


AG,LT04177,372 -19-11NOV98-1/2

Thread the bolts (A) and tighten them to the specified torque.

*NOTE: Pay attention when using the bolts with the indicated resistance grade.*

Resistance grade 8.8.....5.5 Kg.m (55 N.m, 40 lb-ft)

Resistance grade 10.9 7.0.....Kg.m (70 N.m, 50 lb-ft)

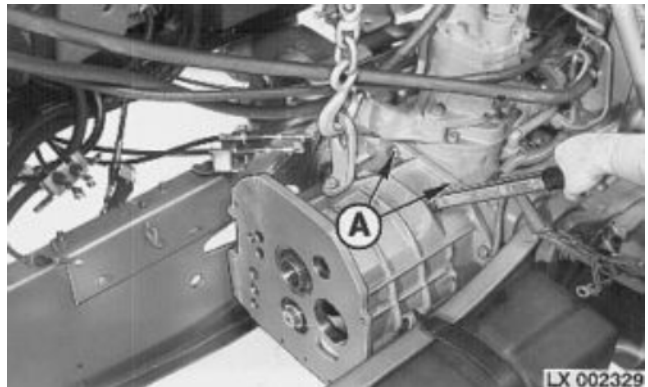

LX002329 -JUN-18NOV94

AG,LT04177,372 -19-11NOV98-2/2

## Gearshift Forks

To adjust the gearshift shafts and forks (see Group 30 in this section).

Continued on next page


AG,LT04177,373 -19-11NOV98-1/4

## Separating and Installing Transmission Components

Install a new joint (A) for the gearbox gearshift cover.

Install the shift cover. Tighten the bolts to 3.0 kg.m (30 N.m, 22 lb-ft).

**NOTE:** Look through the open window on the front wheel drive clutch box and see if the control shaft pivots are correctly housed in the spaces provided on the group box forks.

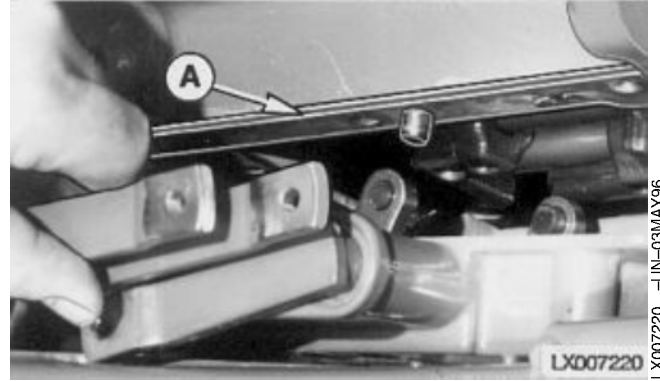

AG.LT04177.373 -19-11NOV98-2/4

Install the gear box. See “Installing the Synchromus Transmission Box” .



AG.LT04177.373 -19-11NOV98-3/4

Install the front wheel drive (MFWD) shaft, if fitted. See Section 56, Group 00).

**NOTE:** Use LOCTITE 574 liquid sealant.

**IMPORTANT: Do not use silicone glue to seal between the parts.**

To finish the installation, invert the sequence of the separation steps.

The tightening torque for the MFWD clutch bolts to the group box is of 40 Nm (4 Kg.m; 30 lb-ft).



AG.LT04177.373 -19-11NOV98-4/4