

300 SERIES OEM ENGINES

Technical Manual
TM-1190 (Dec-84)


SECTIONAL CONTENTS OF THIS MANUAL

| | |
|--------------------------------------|----|
| Section I - General Information | 1 |
| Section 4 - Engine | 4 |
| Section 5 - Engine Auxiliary Systems | 5 |
| Section 16 - Electrical Systems | 16 |
| Section 19 - Sheet Metal and Styling | 19 |
| Section 40 - PTO Drive | 40 |
| Section 90 - System Testing | 90 |

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's Policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

Copyright© 1984
DEERE & COMPANY
Moline, Illinois
All Rights Reserved
Previous Editions
Copyright© 1982 Deere & Company
Copyright© 1980 Deere & Company
Copyright© 1978 Deere & Company
Copyright© 1977 Deere & Company

INTRODUCTION

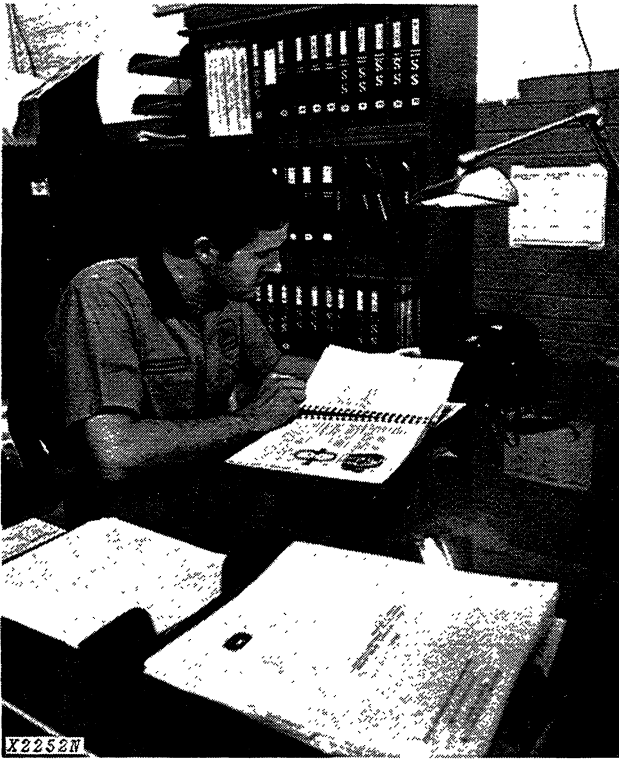

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

•FOS Manuals—for reference

Fundamentals of Service (FOS) Manuals cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced service technicians.



When a service technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

•Technical Manuals—for actual service

Technical Manuals are *concise* service guides for a *specific* machine. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.



Use Technical Manuals for Actual Service

This technical manual was planned and written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Some features of this manual:

- Inside front cover - "Table of Contents".
- Section I - Contents
- Sections 4 through 40 - Removal, repair, testing (components removed), installation, and adjustment.
- Section 90 - Detailed explanation of system operation, diagnosis, visual inspection, testing, and adjustments.
- Specifications grouped and illustrated at the end of each section.

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

Group I - Contents

SECTION 4 - ENGINE

Group 0400 - Removal and Installation
Group 0401 - Crankshaft and Main Bearings
Group 0402 - Camshaft and Valve Actuating Means
Group 0403 - Connecting Rods and Pistons
Group 0404 - Cylinder Block
Group 0407 - Oiling System
Group 0408 - Ventilating System
Group 0409 - Cylinder Head and Valves
Group 0410 - Exhaust Manifold
Group 0413 - Fuel Injection System
Group 0414 - Intake Manifold
Group 0415 - Engine Balancer
Group 0416 - Turbocharger
Group 0417 - Water Pump
Group 0418 - Thermostats, Housing and Piping
Group 0419 - Engine Oil Cooler
Group 0420 - Fuel Filter
Group 0421 - Fuel Transfer Pump
Group 0422 - Starting Motor and Fastening
Group 0423 - Alternator and Generator Mountings
Group 0429 - Fan Drive
Group 0433 - Flywheel, Housing and Fastenings
Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

Group 0510 - Cooling Systems
Group 0515 - Speed Controls
Group 0520 - Intake Systems
Group 0599 - Specifications and Special Tools

SECTION 16 - ELECTRICAL SYSTEMS

Group 1672 - Alternator, Regulator and Charging System Wiring
Group 1674 - Wiring Harness and Switches
Group 1676 - Instruments and Indicators
Group 1699 - Specifications and Special Tools

SECTION 19 - SHEET METAL AND STYLING

Group 1910 - Hood or Engine Enclosure

SECTION 40 - PTO DRIVE

Group 4052 - PTO Clutch
Group 4099 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

Group 9010 - Engine
Group 9015 - Electrical System
Group 9035 - Specifications and Special Tools

OEM ENGINES SERVICED BY THIS TECHNICAL MANUAL

3-164D
3-179D
4-219D
4-239D
4-239T
4-276D

4-276T
6-329D
6-359D
6-359T
6-414D
6-414T

Accessible Hardware Torque Values

The table below gives correct torque values for various bolts and cap screws. The table lists torques in the U.S. unit of measure (lb-ft), SI metrics (Nm) and conventional metrics (kg/m). Most hardware used is high-strength (note dashes on hex. heads).




The types of bolts and cap screws are identified by head markings as follows:

Plain Head: regular machine bolts and cap screws.

3-Dash Head: tempered steel high-strength bolts and cap screws.

6-Dash Head: tempered steel extra high-strength bolts and cap screws.

Machine bolts and cap screws 7/8-inch (22.2 mm) and larger are sometimes formed hot rather than cold, which accounts for the lower torque.

| RECOMMENDED TORQUE - COARSE AND FINE THREADS | | | | | | | | | | | |
|---|------------|----------|---|--------------|------|---|------------|------|------|--|--|
| B | | | D | | | F | | | | | |
|  | | |  | | |  | | | | | |
| BOLT DIAMETER | PLAIN HEAD | | | THREE DASHES | | | SIX DASHES | | | | |
| | LB-FT | Nm | Kg-m | LB-FT | Nm | Kg-m | LB-FT | Nm | Kg-m | | |
| 1/4 | NOT USED | NOT USED | NOT USED | 10 | 14 | 1 | 14 | 19 | 2 | | |
| 5/16 | NOT USED | NOT USED | NOT USED | 20 | 27 | 3 | 30 | 41 | 4 | | |
| 3/8 | NOT USED | NOT USED | NOT USED | 35 | 47 | 5 | 50 | 68 | 7 | | |
| 7/16 | 35 | 47 | 5 | 55 | 75 | 8 | 80 | 108 | 11 | | |
| 1/2 | 55 | 75 | 8 | 85 | 115 | 12 | 120 | 163 | 17 | | |
| 9/16 | 75 | 102 | 10 | 130 | 176 | 18 | 175 | 237 | 24 | | |
| 5/8 | 105 | 142 | 15 | 170 | 230 | 24 | 240 | 325 | 33 | | |
| 3/4 | 185 | 251 | 26 | 300 | 407 | 42 | 425 | 576 | 59 | | |
| 7/8 | 160 | 217 | 22 | 445 | 603 | 62 | 685 | 929 | 95 | | |
| 1 | 250 | 339 | 35 | 670 | 908 | 93 | 1030 | 1396 | 142 | | |
| 1-1/8 | 330 | 447 | 46 | 910 | 1234 | 126 | 1460 | 1979 | 202 | | |
| 1-1/4 | 480 | 651 | 66 | 1250 | 1695 | 173 | 2060 | 2793 | 285 | | |

T43720

ALPHABETICAL INDEX

| | |
|---|---------|
| A | |
| Air cleaner | 0520-1 |
| Alternator and generator mounting | 0423-1 |
| Alternator, regulator and charging system wiring | 1672-3 |
| Amp meter | 1676-2 |
| B | |
| Balancer shafts | 0415-1 |
| C | |
| Camshaft and valve actuating means | 0402-1 |
| Charging circuit testing (Delco-Remy alternator) | 9015-8 |
| Charging circuit testing (Motorola alternator) | 9015-5 |
| Connecting rods and pistons | 0403-1 |
| Cooling manifold | 0418-1 |
| Cooling system, engine | 0510-3 |
| Crankshaft and main bearings | 0401-1 |
| Crankshaft front oil seal | 0402-3 |
| Crankshaft front wear ring | 0401-6 |
| Crankshaft gear | 0401-5 |
| Crankshaft rear oil seal | 0401-6 |
| Crankshaft rear wear ring | 0401-6 |
| Crankshaft pulley | 0429-2 |
| Cylinder block | 0404-1 |
| Cylinder head and valves | 0409-1 |
| D | |
| Delco-Remy alternator | 1672-3 |
| Delco-Remy starting motor | 0422-1 |
| Diagnosing malfunctions: | |
| Engine system testing | 9010-5 |
| Dipstick | 0407-18 |
| E | |
| Electrical schematic | 9015-11 |
| Electrical system | 1672-1 |
| Electrical system testing | 9015-1 |
| Charging circuit | 9015-5 |
| Starting circuit | 9015-1 |
| Engine: | |
| Alternator and generator mounting | 0423-1 |
| Camshaft and valve actuating means | 0402-1 |
| Connecting rods and pistons | 0403-1 |
| Crankshaft and main bearings | 0401-1 |
| Cylinder block | 0404-1 |
| Cylinder head and valves | 0409-1 |
| Engine balancer | 0415-1 |
| Exhaust manifold | 0410-1 |
| Fan drive | 0429-1 |
| Flywheel, housing and fastenings | 0433-1 |
| Engine:—Continued | |
| Fuel filter | 0420-1 |
| Fuel injection system | 0413-1 |
| Fuel transfer pump | 0421-1 |
| Intake manifold | 0414-1 |
| Oil cooler | 0419-1 |
| Oiling system | 0407-1 |
| Removal and installation | 0400-5 |
| Starting motor and fastenings | 0422-1 |
| Thermostats, housings and water piping | 0418-1 |
| Turbocharger | 0416-1 |
| Ventilating system | 0408-1 |
| Water pump | 0417-1 |
| Engine auxiliary systems: | |
| Cooling system | 0510-3 |
| Intake system | 0520-1 |
| Speed controls | 0515-1 |
| Engine removal and installation | 0400-5 |
| Engine system testing and adjustments: | |
| Compression pressure test | 9010-9 |
| Engine cooling system test | 9010-11 |
| Engine oil pressure test | 9010-10 |
| Engine performance test using turbocharger boost pressure | 9010-14 |
| Fuel transfer pump pressure test | 9010-11 |
| Governor speed droop adjustment | 9010-11 |
| Injection pump cam advance | 9010-13 |
| Speed control linkage adjustment | 9010-12 |
| Exhaust manifold | 0410-1 |
| F | |
| Fan belt | 0429-1 |
| Fan drive | 0429-1 |
| Filter, fuel | 0420-1 |
| Flywheel, housing and fastenings | 0433-2 |
| Fuel filter | 0420-1 |
| Fuel injection nozzles | 0413-20 |
| Fuel injection pump | 0413-1 |
| Fuel transfer pump | 0421-1 |
| G | |
| Gauge, pressure | 1676-3 |
| Gauge, temperature | 1676-3 |
| H | |
| Hood | 1910-3 |
| Hour meter | 1676-2 |

I

Instruments and indicators 1676-1
Amp meter 1676-2
Hour meter 1676-2
Pressure gauge 1676-3
Safety switch 1676-4
Tachometer 1676-1
Temperature gauge 1676-3
Intake manifold 0414-1
Intake system 0520-1

J

John Deere starting motor 0422-11

M

Malfunctions, diagnosing:
Engine system testing 9010-5
Manifold, exhaust 0410-1
Manifold, intake 0414-1
Motorola alternator 1672-9

N

Nozzle, fuel injection 0413-11

O

Oil bypass valve 0407-4
Oil cooler, engine 0419-1
3-164D, 4-219D, 4-239D, 4-239T, 6-329D,
6-359D and 6-359T engines 0419-1
4-276D, 4-276T, 6-414D and
6-414T engines 0419-3
Oil filter 0407-1
Oil filter nipple 0407-2
Oiling system, engine 0407-1
Oil pan 0407-4
Oil pressure control valve 0407-5
Oil pump 0407-10

P

Pressure gauge 1676-3
PTO clutch 4052-3
Pump, engine oil 0407-1
Pump, engine water 0417-1
Pump, fuel injection 0413-1
Pump, fuel transfer 0421-1

R

Radiator 0510-3
Rocker arms and push rods 0402-17
Rods and pistons 0403-1

S

Safety switch 1676-4
Special tools:
Camshaft and valve actuating means 0499-94
Connecting rods and pistons 0499-96
Crankshaft and main bearings 0499-93
Cylinder block 0499-97
Cylinder head and valves 0499-99
Electrical system 1699-4
Electrical system testing 9035-8
Engine balancer 0499-103
Engine removal and installation 0499-92
Engine system testing 9035-4
Fuel injection system 0499-101
Oiling system, engine 0499-98
Starting motor and fastenings 0499-106
Turbocharger 0499-104
Water pump 0499-105
Specifications and torque values:
Camshaft and valve actuating means 0499-4
Connecting rods and pistons 0499-11
Crankshaft and main bearings 0499-2
Cylinder block 0499-15
Cylinder head and valves 0499-23
Electrical system 1699-1
Electrical system testing 9035-6
Engine balancer 0499-79
Engine break-in 0499-1
Engine cooling system 0599-1
Engine system testing 9035-1
Fan drive 0499-90
Flywheel, housing and fastenings 0499-90
Fuel injection system 0499-27
Intake manifold 0499-78
Oil cooler, engine 0499-84
Oiling system, engine 0499-17
PTO clutch 4099-1
Starting motor and fastenings 0499-85
Thermostats, housings and water
piping 0499-83
Turbocharger 0499-80
Water pump 0499-81
Speed controls, engine 0515-1
Starting circuit testing 9015-1
Starting motor, Delco-Remy 0422-1
Starting motor, John Deere 0422-11
Switch, safety 1676-4

T

Tachometer 1676-1
Temperature gauge 1676-3
Tests and adjustments:
 Alternator components 1672-14
 Electrical system 9015-1
 Engine system 9010-9
 Starting motor, Delco-Remy 0422-1
 Starting motor, John Deere 0422-12
 Turbocharger 0416-2
Thermostats, housings and water
 piping 0418-1
Timing gear 0402-9
Timing gear cone 0402-2
Turbocharger 0416-1

V

Ventilating system 0408-1
Vertical tachometer drive 0433-1
Vibration damper 0401-8

W

Water pump 0417-1
Wiring harness and switches 1674-1
Wiring diagram 9015-12



Section 4 ENGINE

CONTENTS OF THIS SECTION

| | Page | | Page |
|--|---------|---|---------|
| GROUP 0400 - REMOVAL AND INSTALLATION | | GROUP 0402 - CAMSHAFT AND VALVE ACTUATING MEANS—Continued | |
| General Information | 0400-5 | Timing Gear | 0402-9 |
| Removal | 0400-7 | Removal | 0402-9 |
| Installation | 0400-10 | Repair | 0402-11 |
| GROUP 0401 - CRANKSHAFT AND MAIN BEARINGS | | Installation | 0402-12 |
| Crankshaft and Main Bearings | 0401-1 | Rocker Arms and Push Rods | 0402-17 |
| Removal | 0401-1 | Removal | 0402-17 |
| Crankshaft End Play | 0401-1 | Repair | 0402-17 |
| Repair | 0401-2 | Installation | 0402-18 |
| Installation | 0401-3 | Valve Clearance Adjustment | 0402-19 |
| Crankshaft gear | 0401-5 | GROUP 0403 - CONNECTING RODS AND PISTONS | |
| Removal | 0401-5 | Removal | 0403-1 |
| Repair | 0401-5 | Repair | 0403-3 |
| Crankshaft Front Wear Ring | 0401-6 | Installation | 0403-9 |
| Removal | 0401-6 | GROUP 0404 - CYLINDER BLOCK | |
| Installation | 0401-6 | Removal | 0404-1 |
| Crankshaft Front Oil Seal | 0401-6 | Repair | 0404-3 |
| Crankshaft Rear Oil Seal and Wear Ring | 0401-6 | Installation | 0404-6 |
| Removal | 0401-6 | GROUP 0407 - OILING SYSTEM | |
| Repair | 0401-6 | Oil Filter | 0407-1 |
| Installation | 0401-7 | Removal | 0407-1 |
| Vibration Damper | 0401-8 | Installation | 0407-1 |
| Installation | 0401-8 | Oil Filter Nipple | 0407-1 |
| Valve Lift Check | 0402-1 | Removal | 0407-2 |
| Timing Gear Cover | 0402-2 | Installation | 0407-3 |
| Removal | 0402-2 | Oil Pan | |
| Repair | 0402-2 | Removal | 0407-4 |
| Installation | 0402-3 | Repair | 0407-4 |
| Crankshaft Front Oil Seal | 0402-3 | Installation | 0407-4 |
| Removal | 0402-3 | Oil Bypass Valve | |
| Installation | 0402-3 | Removal | 0407-4 |
| Camshaft | 0402-3 | Repair | 0407-4 |
| Removal | 0402-3 | Installation | 0407-4 |
| Repair | 0402-6 | Oil Pressure Control Valve | |
| Installation | 0402-7 | 3-164D, 3-179D, 4-219D, 4-239D, 4-239T, 6-329D, 6-359D, or 6-359T Engine | 0407-5 |
| | | Removal | 0407-5 |
| | | Repair | 0407-5 |
| | | Installation | 0407-6 |

CONTENTS OF THIS SECTION—Continued

| | Page | | Page |
|--|---------|--|---------|
| GROUP 0407 - OILING SYSTEM—Continued | | GROUP 0413 - FUEL INJECTION SYSTEM | |
| Oil Pressure Control Valve—Continued | | Fuel Injection Pump | 0413-1 |
| 4-276D, 4-276T, 6-414D | | Removal | 0413-1 |
| or 6-414T Engine | 0407-7 | Repair | 0413-6 |
| Removal | 0407-7 | Installation | 0413-9 |
| Disassembly | 0407-7 | Bleeding | 0413-19 |
| Repair | 0407-8 | Fuel Injection Nozzles | 0413-20 |
| Assembly | 0407-8 | Removal | 0413-20 |
| Installation | 0407-9 | Repair | 0413-21 |
| Oil Pump | | Installation | 0413-22 |
| 3-164D, 3-179D, 4-219D, | | | |
| 6-329D, or 6-359D Engine | 0407-10 | GROUP 0414 - INTAKE MANIFOLD | |
| Removal | 0407-10 | Removal | 0414-1 |
| Inspection and Disassembly | 0407-10 | Repair | 0414-1 |
| Repair | 0407-12 | Installation | 0414-1 |
| Assembly | 0407-12 | | |
| Installation | 0407-13 | GROUP 0415 - ENGINE BALANCER | |
| 4-239T, 4-276D, 4-276T, 6-359T, | | General Information | 0415-1 |
| 6-414D, or 6-414T Engine | 0407-14 | Removal | 0415-1 |
| Removal | 0407-14 | Repair | 0415-2 |
| Inspection and Disassembly | 0407-14 | Installation | 0415-3 |
| Repair | 0407-16 | | |
| Assembly | 0407-16 | GROUP 0416 - TURBOCHARGER | |
| Installation | 0407-17 | General Information | 0416-1 |
| Dipstick and Dipstick Nipple | 0407-18 | Removal | 0416-1 |
| Removal | 0407-18 | Testing | 0416-2 |
| Repair | 0407-18 | Radial Bearing Movement | 0416-2 |
| Installation | 0407-19 | Axial Bearing Movement | 0416-2 |
| | | Repair | 0416-2 |
| GROUP 0408 - VENTILATING SYSTEM | | Installation | 0416-8 |
| General Information | 0408-1 | | |
| Removal | 0408-1 | GROUP 0417 - WATER PUMP | |
| Repair | 0408-1 | Removal | 0417-1 |
| Installation | 0408-1 | Disassembly | |
| | | 3-164, 3-179D, 4-219D, 4-239D, | |
| GROUP 0409 - CYLINDER HEAD AND VALVES | | 4-276D, or 6-329D Engine | 0417-2 |
| Removal | 0409-1 | 4-239T, 4-276T, 6-359D, | |
| Disassembly | 0409-2 | 6-359T, 6-414D, or 6-414T Engine | 0417-3 |
| Repair | 0409-2 | Repair | 0417-4 |
| Assembly | 0409-7 | Assembly | 0417-5 |
| Installation | 0409-7 | Installation | 0417-7 |
| | | | |
| GROUP 0410 - EXHAUST MANIFOLD | | GROUP 0418 - THERMOSTATS, HOUSINGS, AND | |
| General Information | 0410-1 | WATER PIPING | |
| Removal | 0410-1 | Thermostat | 0418-1 |
| Repair | 0410-1 | Removal | 0418-1 |
| Installation | 0410-1 | Repair | 0418-2 |
| | | Installation | 0418-2 |

Contents continued on next page

CONTENTS OF THIS SECTION—Continued

| Page | Page |
|---|---|
| GROUP 0419 - OIL COOLER | GROUP 0429 - FAN DRIVE |
| 3-164D, 3-179D, 4-219D and 6-329D Engines: | Fan Belt 0429-1 |
| Removal 0419-1 | Removal 0429-1 |
| Repair 0419-2 | Repair 0429-1 |
| Installation 0419-2 | Installation 0429-1 |
| 4-276D, 4-276T, 6-414D and | Crankshaft Pulley 0429-2 |
| 6-414T Engines: | Removal 0429-2 |
| Removal 0419-3 | Repair 0429-2 |
| Repair 0419-3 | Installation 0429-3 |
| Installation 0419-5 | |
| GROUP 0420 - FUEL FILTER | GROUP 0433 - FLYWHEEL, HOUSING, AND FASTENINGS |
| General Information 0420-1 | Vertical Tachometer Drive 0433-1 |
| Removal 0420-1 | Removal 0433-1 |
| Installation 0420-1 | Repair 0433-1 |
| | Installation 0433-1 |
| GROUP 0421 - FUEL TRANSFER PUMP | Flywheel 0433-2 |
| General Information 0421-1 | Removal 0433-2 |
| Removal 0421-1 | Repair 0433-2 |
| Repair 0421-1 | Installation 0433-3 |
| Installation 0421-2 | Flywheel Ring Gear 0433-4 |
| | Removal 0433-4 |
| GROUP 0422 - STARTING MOTOR AND FASTENINGS | Installation 0433-4 |
| General Information 0422-1 | Flywheel Housing 0433-4 |
| Delco-Remy Starting Motor 0422-1 | Removal 0433-4 |
| Removal 0422-1 | Repair 0433-5 |
| Testing and Diagnosis 0422-1 | Installation 0433-5 |
| Testing Pull-in Windings 0422-1 | |
| Testing Hold-in Windings 0422-1 | GROUP 0499 - SPECIFICATIONS AND SPECIAL TOOLS |
| No Load Starting Motor Test 0422-2 | Specifications and Torque Values: |
| Repair 0422-4 | Engine Break-In 0499-1 |
| Assembly 0422-8 | Crankshaft and Main Bearings 0499-2 |
| Installation 0422-10 | Camshaft and Valve Actuating Means 0499-4 |
| John Deere Starting Motor 0422-11 | Connecting Rods and Pistons 0499-11 |
| Removal 0422-11 | Cylinder Block 0499-15 |
| Tests 0422-12 | Oiling System 0499-17 |
| Solenoid Pull-in Test 0422-12 | Cylinder Head and Valves 0499-23 |
| Solenoid Return Test 0422-12 | |
| No Load Test 0422-13 | |
| Repair 0422-15 | |
| Assembly 0422-20 | |
| GROUP 0423 - ALTERNATOR AND GENERATOR MOUNTING | |
| General Information 0423-1 | |
| Removal 0423-1 | |
| Installation 0423-1 | |

Contents continued on next page

CONTENTS OF THIS SECTION—Continued

| | Page | | Page |
|---|----------|---|----------|
| GROUP 0499 - SPECIFICATIONS AND SPECIAL TOOLS—Continued | | GROUP 0499 - SPECIFICATIONS AND SPECIAL TOOLS—Continued | |
| Specifications and Torque Values—Continued | | Specifications and Torque Values—Continued | |
| Fuel Injection System | 0499-27 | Fuel Injection Nozzle: | |
| Test Stand | 0499-27 | 19762 - AR56290 | 0499-67 |
| Fuel Injection Pump: | | 20500 - AR56290 | 0499-68 |
| R3432F900 - RE12266 | 0499-28 | 20291 - AR68364 | 0499-69 |
| R3432F920 - RE12267 | 0499-28A | 20504 - AR68364 | 0499-70 |
| R3448F160 - RE15699 | 0499-28B | 20631 - AR73673 | 0499-71 |
| R3448F210 - RE15697 | 0499-28C | 22042 - AR88239 | 0499-72 |
| R3462F950 - RE15698 | 0499-28D | 22205 - AR88240 | 0499-73 |
| R3462F920 - RE15700 | 0499-28E | 22044 - AR88241 | 0499-74 |
| JDB331MD2406 - AR49904 | 0499-28F | 2203 - AR89563 and AR89564 | 0499-75 |
| JDB435AL2442 - AR51747 | 0499-29 | 22265 - AR90023 and AR90024 | 0499-76 |
| JDB635AL2446 - AR51568 | 0499-30 | Injection Nozzle Torque | 0499-77 |
| JDB331CM2667 - AR66282 | 0499-31 | Intake Manifold | 0499-78 |
| DM4627MD2684 - AR66395 | 0499-32 | Engine Balancer | 0499-79 |
| JDB431CM2701 - AR66995 | 0499-33 | Turbocharger | 0499-80 |
| JDB635CM2757 - AR66996 | 0499-34 | Water Pump | 0499-81 |
| JDB435MD2793 - AR70530 | 0499-35 | Thermostats, Housings, and | |
| JDB435MD2802 - AR51747 | 0499-36 | Water Piping | 0499-83 |
| JDB435CM2819 - AR70531 | 0499-37 | Oil Cooler | 0499-84 |
| DM4627AL2824 - AR70778 | 0499-38 | Starting Motor and Fastenings | 0499-85 |
| DM4627HB2825 - AR70551 | 0499-39 | Fan Drive | 0499-90 |
| DM4627HB2826 - AR70780 | 0499-40 | Flywheel, Housing, and | |
| DM4427MD2876 - AR71421 | 0499-41 | Fastenings | 0499-90 |
| DM4427HB2915 - AR70538 | 0499-42 | Special Tools: | |
| DM4427NH2957 - AR76503 | 0499-43 | Removal and Installation | 0499-92 |
| JDB435CM2974 - AR77422 | 0499-44 | Crankshaft and Main Bearings | 0499-93 |
| JDB333CM3009 - AR79211 | 0499-45 | Camshaft and Valve Actuating | |
| JDB435CM3010 - AR79212 | 0499-46 | Means | 0499-94 |
| JDB635CM3011 - AR79213 | 0499-47 | Connecting Rods and Pistons | 0499-96 |
| JDB435MD3021 - AR78647 | 0499-48 | Cylinder Block | 0499-97 |
| DM4427MD3051 - AR80325 | 0499-49 | Oiling System | 0499-98 |
| DM4627MD3052 - AR80352 | 0499-50 | Cylinder Head and Valves | 0499-99 |
| JDB435MD3053 - AR80230 | 0499-51 | Fuel Injection System | 0499-101 |
| JDB635MD3142 - AR80603 | 0499-52 | Engine Balancer | 0499-103 |
| DM4627HB3220 - AR80353 | 0499-53 | Turbocharger | 0499-104 |
| JDB435CM3223 - AR80233 | 0499-54 | Water Pump | 0499-105 |
| DM4427HB3224 - AR80326 | 0499-55 | Starting Motor and Fastenings | 0499-106 |
| JDB635CM3243 - AR80604 | 0499-56 | | |
| DM4427NW3262 - AR87186 | 0499-57 | | |
| DM4627AL3335 - AR70778 | 0499-58 | | |
| DM4627NH3642 - AR89482 | 0499-59 | | |
| DM4427NH3776 - AR90716 | 0499-60 | | |
| DM4427HB3986 - AR99951 | 0499-60A | | |
| DM4627HB3987 - AR99952 | 0499-61 | | |
| DM4627MD4012 - AR104000 | 0499-62 | | |
| DM4627ABE4083 - AR100427 | 0499-63 | | |
| DM4627ABE4118 - AR100427 | 0499-64 | | |
| DM4427AL4299 - RE16150 | 0499-64A | | |
| DM46274444 - RE19914 | 0499-64B | | |
| Injection Pump Torque | 0499-65 | | |

Group 0400 REMOVAL AND INSTALLATION



GENERAL INFORMATION

Learn principles of operation of engines from "Basic Engine" in Fundamentals of Service Manual 30 - ENGINES.

Design Characteristics

The 3-164D, 3-179D, 4-219D, 4-239D, 4-276D, 6-329D, 6-359D, and 6-414D engines have:

1. Internal combustion
2. Four strokes per cycle
3. In-line type cylinder block
4. Diesel fueling
5. Valves in cylinder head
6. Natural aspiration
7. Liquid coolant
8. Pressure lubrication


The 4-239T, 4-276T, 6-359T, and 6-414T engines have:

1. Internal combustion
2. Four strokes per cycle
3. In-line type cylinder block
4. Diesel fueling
5. Valves in cylinder head
6. Turbocharger
7. Liquid coolant
8. Pressure lubrication

Front Reference

The water pump (Fig. 1) end is the "front" of the engine.

4

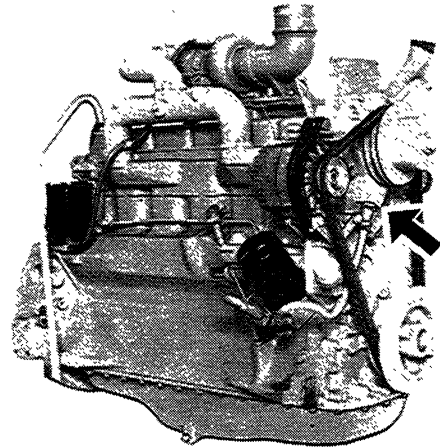


T70243

Fig. 1-Water Pump

T70243

Direction of Crankshaft Rotation

The crankshaft turns clockwise when viewed from the water pump end.

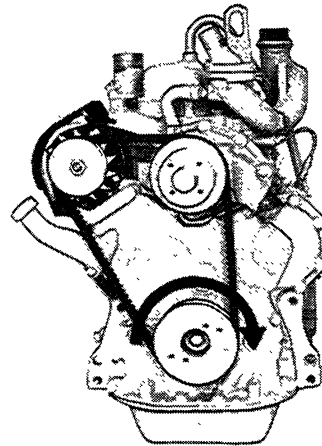

T70244

Fig. 2-Crankshaft Rotation


T70244

Firing Order

3-164 and 3-179 Engine

Firing order is:

1-2-3

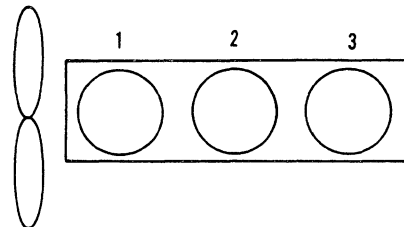

T70245


Fig. 3-Cylinder Arrangement

T70245

4-219, 4-239, and 4-276 Engines

Firing order is:

1-3-4-2

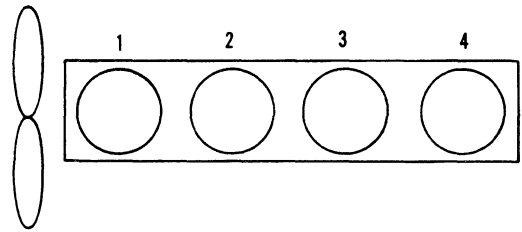


T70246

Fig. 4-Cylinder Arrangement

6-329, 6-359, and 6-414 Engines

Firing order is:

1-5-3-6-2-4

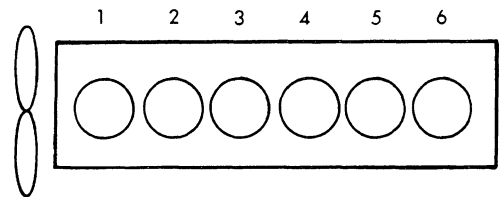

T70655

Fig. 5-Cylinder Arrangement

REMOVAL

Disconnect battery negative (-) cable. Disconnect battery positive (+) cable from starting motor.

Remove engine side shields (2, Fig. 6) (Group 1910).

Remove muffler.


Remove hood (1, Fig. 6) (Group 1910).

CAUTION: Do not drain cooling system until upper radiator tank feels cool.

Drain engine cooling system.

Drain engine oil.

Disconnect fuel inlet line at fuel transfer pump.

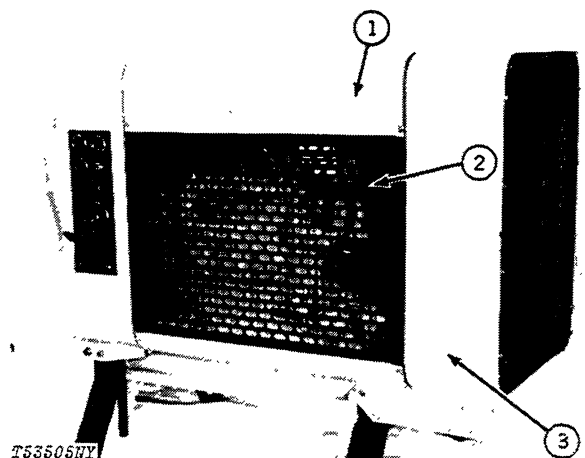

T53505HY

Fig. 6-Engine Enclosure

Disconnect tachometer drive cable (3, Fig. 7) from flywheel housing.

Disconnect air cleaner hose on right side of engine.

Remove rear panel (1, Fig. 7) with air cleaner (2) attached.

Remove front shroud (3, Fig. 6).

4

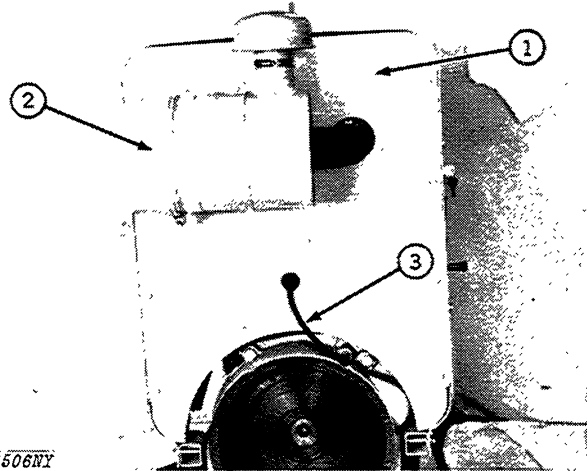


Fig. 7-Engine Enclosure Rear Panel

Disconnect speed control cable (1, Fig. 8) and bracket (2).

NOTE: Tag wires and terminals for reassembly.

Disconnect fuel shut-off wiring (3, Fig. 8) from fuel injection pump (4).

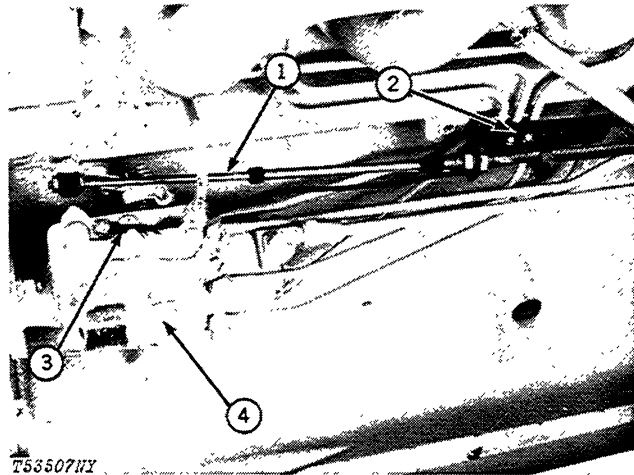


Fig. 8-Speed Control Cable and Fuel Shut-Off Wiring

Disconnect alternator wiring (1, Fig. 9) from alternator.

Disconnect solenoid wiring (2, Fig. 9) from solenoid.

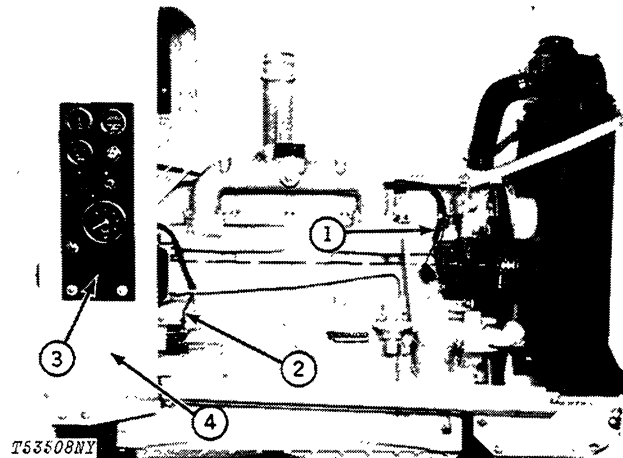


Fig. 9-Solenoid and Alternator Wiring

Disconnect temperature sending unit (1, Fig. 10) from rear of cylinder head.

Disconnect oil pressure hose (2, Fig. 10) from rear of cylinder block.

Remove rear shroud (4, Fig. 9) with instrument panel (3) attached.

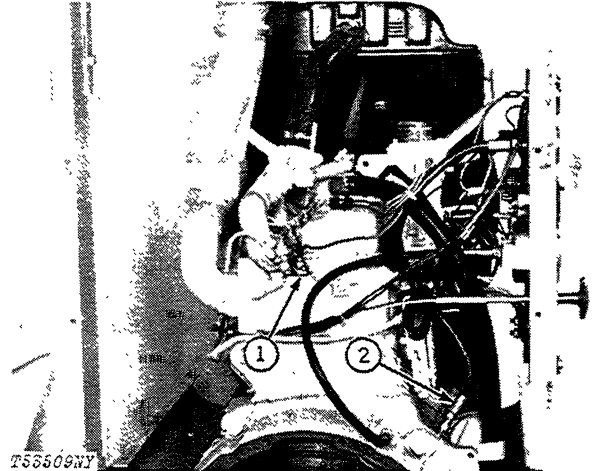


Fig. 10-Oil Pressure Hose and Temperature Sending Unit

Attach hoist with D01043AA Load-Positioning Sling (1, Fig. 11) to engine lifting eyes (2).

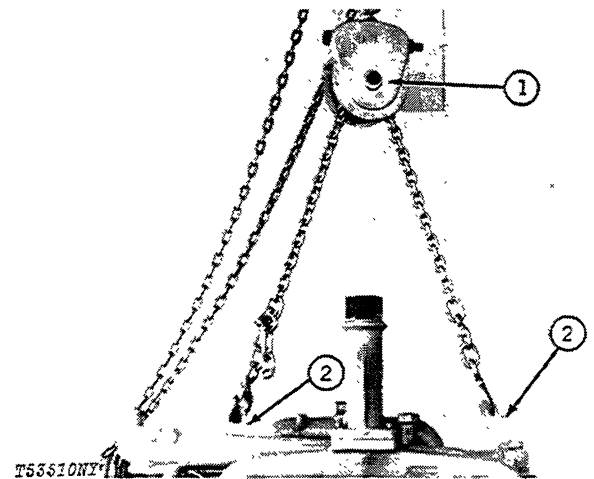


Fig. 11-D-01043AA Load Positioning Sling Attached

Remove engine mounting hardware (1, Fig. 12) at four corners of engine.

Raise hoist to remove engine.

Cap or plug air inlet tube, fuel inlet fitting, and exhaust manifold tube. Steam-clean engine thoroughly.

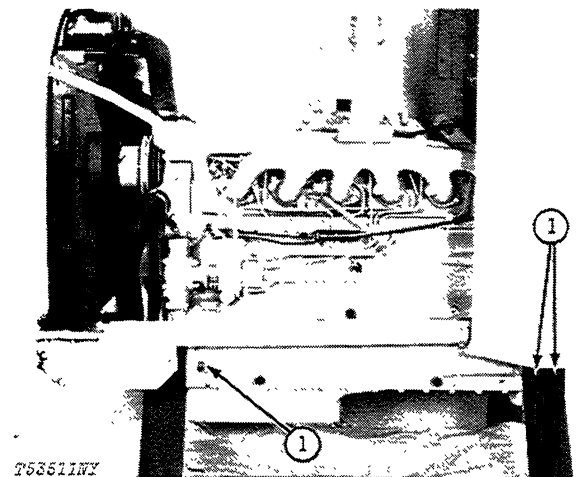


Fig. 12-Engine Mounting Hardware

Thank you very much for your reading. Please Click Here. Then Get COMPLETE MANUAL. NO WAITING



NOTE:

If there is no response to click on the link above, please download the PDF document first and then click on it.

INSTALLATION

Mounting Engine in D01003AA Stand

Attach hoist with D01043AA Load-Positioning Sling (1, Fig. 11) to engine lifting eyes (2).

Lift engine into position on D01003AA Engine Stand. Refer to Fig. 13 to mount three or four cylinder engine. Refer to Fig. 14 to mount six cylinder engine.

4

Adjust engine stand rods and install cap screws holding rod brackets to engine.

CAUTION: Tighten all engine stand mounting hardware securely before removing hoist.

Check that all engine stand mounting hardware is tight.

Remove hoist and sling (1, Fig. 11) from engine.

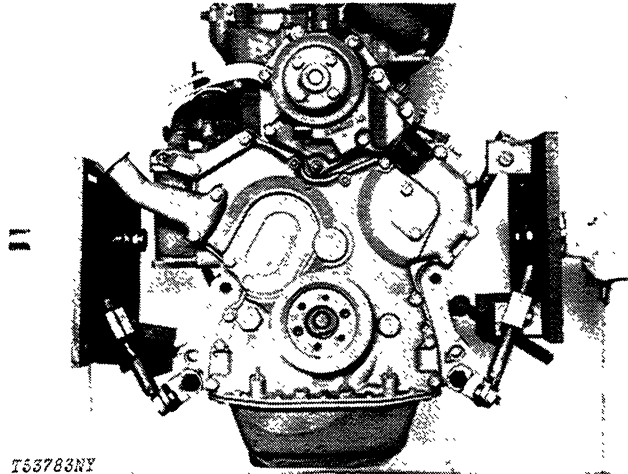


Fig. 13-Three or Four Cylinder Engine Mounted in D01003AA Engine Stand

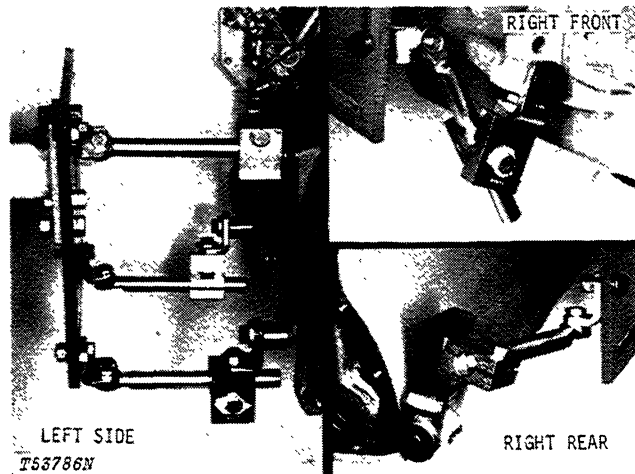


Fig. 14-Six Cylinder Engine Mounting Points

Mounting Engine in Enclosure

Attach hoist with D01043AA Load-Positioning Sling (1, Fig. 11) to engine lifting eyes (2).

Lift engine into position on enclosure mounting skid. Install engine mounting hardware (1, Fig. 12) at lower four corners of engine.

Remove load-positioning sling and hoist from engine.

Install rear shroud (4, Fig. 9) with instrument panel (3) attached.

Connect oil pressure hose (2, Fig. 10) to rear of cylinder block.

Connect temperature sending unit (1, Fig. 10) to rear of cylinder head.

Connect solenoid wiring (2, Fig. 9).

Connect alternator wiring (1, Fig. 9).

Connect fuel shut-off wiring (3, Fig. 8) to fuel injection pump (4).

Connect speed control cable (1, Fig. 8) and install bracket (2).

Install front shroud (3, Fig. 6).

Install rear panel (1, Fig. 7) with air cleaner (2) attached.

Connect air cleaner hose to intake tube on right side of engine.

Connect tachometer drive cable (3, Fig. 7) to fly-wheel housing.

Connect fuel inlet line to fuel transfer pump.

Fill crankcase to correct level using proper oil.

Fill radiator to correct level using proper coolant.

Install hood (1, Fig. 6).

Install muffler.

Install engine side shields (2, Fig. 6).

Connect battery positive (+) cable to starter.

Connect battery negative (-) cable to battery.

Adjust speed control linkage if necessary (Group 0515).