



699 Cotton Picker



JOHN DEERE

TECHNICAL MANUAL 699 Cotton Picker

TM1054 (01DEC73) English

John Deere Des Moines Works
TM1054 (01DEC73)

LITHO IN U.S.A.
ENGLISH



699 COTTON PICKER

Technical Manual
TM-1054 (Dec-73)

CONTENTS

SECTION 10 - GENERAL

- GROUP 5 - Specifications
- GROUP 10 - Tune-Up and Adjustment
- GROUP 15 - Lubrication

SECTION 20 - ENGINE

- GROUP 5 - General Information, Diagnosis and Removal
- GROUP 10 - Cylinder Head, Valves, and Camshaft
- GROUP 15 - Cylinder Block, Liners, Pistons, and Rods
- GROUP 20 - Crankshaft, Main Bearings, and Flywheel
- GROUP 25 - Lubrication System
- GROUP 30 - Cooling System
- GROUP 35 - Governor and Speed Control
- GROUP 40 - Specifications, Special Tools, and Torques

SECTION 30 - FUEL SYSTEMS

- GROUP 5 - Diagnosing Malfunctions
- GROUP 10 - Diesel Fuel System
- GROUP 15 - Gasoline and LP-Gas Fuel Systems
- GROUP 20 - Specifications, Special Tools, and Torques

SECTION 40 - ELECTRICAL SYSTEM

- GROUP 5 - General Information and Wiring Diagrams
- GROUP 10 - Charging Circuit
- GROUP 15 - Starting Circuit
- GROUP 20 - Ignition Circuit
- GROUP 25 - Specifications, Special Tools, and Torques

The specifications and design information contained in this manual were correct at the time this machine was manufactured. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and IEMC standards.

SECTION 50 - POWER TRAIN

- GROUP 5 - Clutch and Main Drive Shaft (Std. Trans.)
- GROUP 10 - Standard and Hydrostatic Transmissions
- GROUP 15 - Differential
- GROUP 20 - Auxiliary Gear Housing
- GROUP 25 - Final Drives
- GROUP 30 - Hydrostatic Drive
- GROUP 35 - Specifications, Special Tools, and Torques

SECTION 60 - STEERING AND BRAKES

- GROUP 5 - Steering
- GROUP 10 - Brakes
- GROUP 15 - Specifications and Torques

SECTION 70 - HYDRAULIC SYSTEM

- GROUP 5 - General Information, Diagnosis, and Tests
- GROUP 10 - Hydraulic Pump
- GROUP 15 - Hydraulic Valve
- GROUP 20 - Hydraulic Cylinders
- GROUP 25 - Steering
- GROUP 30 - Automatic Height Control
- GROUP 35 - Specifications, Special Tools, and Torques

SECTION 80 - PICKING UNITS, WATER SYSTEM, AND AIR SYSTEM


- GROUP 5 - Picking Units
- GROUP 10 - Air System
- GROUP 15 - Water System
- GROUP 20 - Specifications, Special Tools, and Torques

SECTION 90 - OPERATOR'S CAB

- GROUP 5 - Pressurizer System
- GROUP 10 - Air Conditioning System
- GROUP 15 - Heating System
- GROUP 20 - Specifications, Torque and Special Tools

Copyright © 1971
DEERE & COMPANY
Moline, Illinois
All Rights Reserved

INTRODUCTION

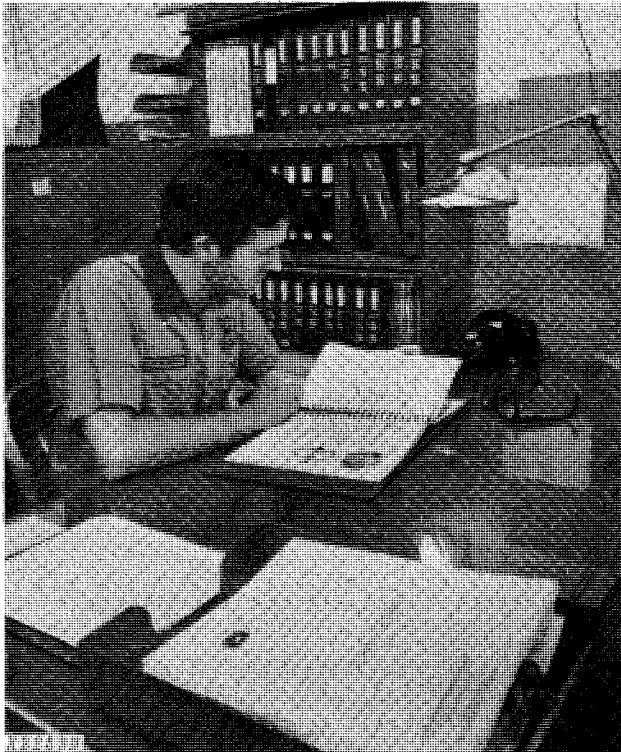

Use FOS Manuals for Reference



Use Technical Manuals for Actual Service

This technical manual is part of a twin concept of service:

- **FOS Manuals—for reference**
- **Technical Manuals—for actual service**

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover *basic* theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new men and for reference by experienced men.

Technical Manuals are *concise* service guides for a *specific* machine. Technical Manuals are on-the-job guides containing only the vital information needed by a journeyman mechanic.



When a serviceman should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

Some features of this technical manual:

- *Table of contents at front of manual*
- *Exploded views showing parts relationship*
- *Photos showing service techniques*
- *Specifications grouped for easy reference*

This technical manual was planned and written for you—a journeyman mechanic. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Section 10 GENERAL

CONTENTS OF THIS SECTION

	Page		Page
GROUP 5 - SPECIFICATIONS		Engine Tune-Up	10-1
Description	5-1	Cotton Picker Adjustment	10-4
Specifications	5-2	Standard Torque Chart	10-4
GROUP 10 - TUNE-UP AND ADJUSTMENT		GROUP 15 - LUBRICATION	
General Information	10-1	Lubrication Chart	15-1
Preliminary Engine Testing	10-1		

Group 5 SPECIFICATIONS

DESCRIPTION

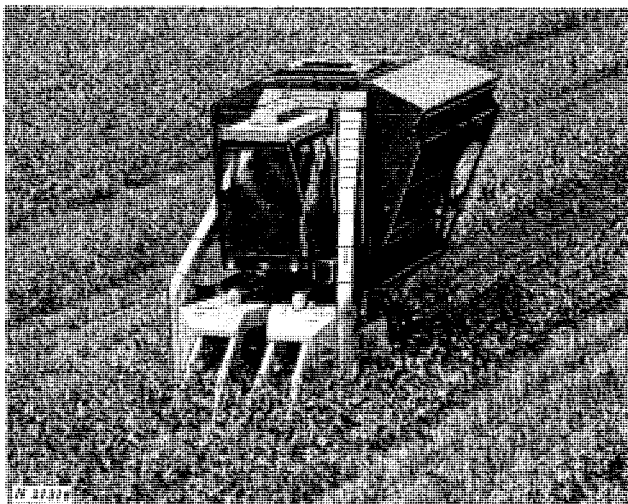


Fig. 1-699 Cotton Picker

The 699 Cotton Picker is a two-row self-propelled machine. The machine has four basic components:

1. Picking units
2. Jet-Air-Trol conveying system and basket
3. Operator's platform
4. Propelling mechanism

The picking units are either high or low drum and are adjustable from 38 to 40-inch rows. The high drum picking units have 1120 individual barbed spindles and the low drum units have 784 spindles.

The Jet-Air-Trol conveying system consists of a fan located in the engine area to convey the cotton to the basket which holds 3,000 lbs. of cotton.

The operator is right on top of the picking operation when at the controls of the cotton picker. All controls are within easy reach of the operator.

The cotton picker is propelled by a gasoline, LP-Gas, or diesel engine (Models NA303 or NB329).

All references in this manual to front, rear, left, and right are in relation to the position of the operator seated on the operator's platform.

SPECIFICATIONS

Picking Units

Number of units	2
Number of picking drums	4
Number of picker bars (per unit)	
Front drum	16
Rear drum	12
Number of spindles (per machine)	
Low drum units	784
High drum units	1120

Picking Unit Speeds

	Standard Transmission	Hydrostatic Transmission
Picking unit drive shaft		
Low range*	784 rpm	none
High range*	1046 rpm	0-1046 rpm
Picking drum		
Front drum (16 bar)		
Low range*	70.4 rpm	none
High range*	93.9 rpm	0-93.9 rpm
Rear drum (12 bar)		
Low range*	93.8 rpm	none
High range*	125.2 rpm	0-125.2 rpm
Doffer shaft		
Front drum (16 bar)		
Low range*	1135 rpm	none
High range*	1514 rpm	0-1514 rpm
Rear drum (12 bar)		
Low range*	1152 rpm	none
High range*	1537 rpm	0-1537 rpm
Spindle		
Front drum (16 bar)		
Low range*	2454 rpm	none
High range*	3274 rpm	0-3274 rpm
Rear drum (12 bar)		
Low range*	2418 rpm	none
High range*	3226 rpm	0-3226 rpm

* On Standard Transmission there is a high and low picking unit range. On Hydrostatic Transmissions there is a high range only.

Ground Speeds (Full Throttle)

	Standard Transmission	Hydrostatic Transmission
Picking speeds		
1st Gear	2.06 mph	0 - 2.65 mph (1 st)
2nd Gear	2.65 mph	0 - 3.12 mph (2nd)
3rd Gear	3.12 mph	
Transport speeds		
4th Gear	8.12 mph	0 - 10.46 mph (3rd)
5th Gear	10.46 mph	0 - 12.32 mph (4th)
6th Gear	12.32 mph	
Reverse	3.25 mph	0 - 6.16 mph

Capacities

Cotton basket	608 cu. ft. (3000 lbs. seed cotton)
Fuel tank	
Gasoline and diesel	56 U.S. gal.
LP-Gas (80% full)	46 U.S. gal.
Water tank	64 U.S. gal.
Cooling system	28 U.S. qt.
Engine crankcase	10 U.S. qt.
Hydraulic system	19 U.S. qt.
Transmission	22 U.S. qt.
Final drives (each)	2 U.S. qt.
Hydrostatic drive	27 U.S. qt.

Tires

Front drive wheels (R1, R2, and R3)	18.4 - 26, 10-ply
Rear guide wheel	11.0 - 16, 8-ply

Hydrostatic Drive

Make	
Pump	Sundstrand
Motor	Sundstrand
Type of oil filter	Full flow
Type of oil cooler	Air cooled
Type of oil	Type "F"
	Automatic transmission fluid

Weight

High drum	13,300 lbs.*
Low drum	12,700 lbs.*
* With cab add 500 lbs.	

Dimensions

Length	
High drum	22 feet 4 inches
Low drum	21 feet 3 inches
* Height	13 feet 3 inches
Width	9 feet 10 inches
Tread	6 feet 7-5/8 inches

Basket Dumping Height

Lip	9 feet 10-1/2 inches
Basket pivot	10 feet 4 inches
Under axle clearance	33 inches

Final Drive

Type	Pinion and ring gear
------	----------------------

Electrical System

Battery voltage	12-volts
Battery specific gravity at full charge (corrected to 80°F.)	1.260 (± 0.010)

Electrical System—Continued

Battery terminal grounded Negative
 Alternator regulation Voltage regulator

Engine (Gasoline and LP-Gas)

	NA303	NB329
Make	John Deere	John Deere
Model		
Gasoline	NA303G	NB329G
LP-Gas	NA303L	NB329L
No. of cylinders	6	6
Bore	3.86 in.	4.02 in.
Stroke	4.33 in.	4.33 in.
Displacement	303 cu. in.	329 cu. in.
Horsepower	90 hp.	105 hp.
Firing order	1-5-3-6-2-4	1-5-3-6-2-4
Compression ratio	7.6 to 1	8.1 to 1
Valve clearance		
Intake	0.014 in.	0.014 in.
Exhaust	0.022 in.	0.022 in.
Ignition system		
Coil voltage	12 volt	12 volt
Spark plug gap		
Gasoline	0.025 in.	0.025 in.
LP-Gas	0.015 in.	0.015 in.
	to	to
	0.018 in.	0.018 in.
Distributor point gap		
Delco	0.016 in.	0.016 in.
Prestolite	0.020 in.	0.020 in.
Engine speeds		
Fast idle (no load)		
Standard transmission	2600 rpm	2650-2700 rpm
Hydrostatic transmission	2625 rpm	2675-2725 rpm
Rated (under field load)	2500 rpm	2500 rpm
Slow idle	600-700 rpm	600-800 rpm
		LP-Gas
		600-700 rpm
		Gasoline

Engine (Diesel)

	NA303	NB329
Make	John Deere	John Deere
Model	NA303D	NB329D
No. of cylinders	6	6
Bore	3.875 in.	4.02 in.
Stroke	4.3437 in.	4.33 in.
Displacement	303 cu. in.	329 cu. in.
Horsepower	90 hp.	105 hp.
Compression ratio	16.3 to 1	16.3 to 1
Firing order	1-5-3-6-2-4	1-5-3-6-2-4
Valve clearance		
Intake	0.014 in.	0.014 in.
Exhaust	0.018 in.	0.018 in.
Injection pump timing	TDC	TDC
Engine speeds		
Fast Idle (no load)	2650-2670 rpm	2650-2670 rpm
Rated (under field load)	2500 rpm	2500 rpm
Slow idle	800 rpm	800 rpm

(Specifications and design are subject to change without notice).

Group 10

TUNE-UP AND ADJUSTMENT

GENERAL INFORMATION

Before tuning up an engine, determine if it is in tune-up. Perform the following preliminary tests. condition whereby performance can be restored by

PRELIMINARY ENGINE TESTING

Operation	Specifications	Reference
Check radiator for air bubbles and indication of oil		Section 20, Group 30
Test cylinder compression	120 psi Gasoline and LP-Gas 300 psi - Diesel	See FOS "Engine" Manual
Test engine power output (use dynamometer)	Note horsepower output and compare with output after tune-up	See FOS "Engine" Manual
Test vacuum (at air cleaner, Diesel)	8 - 25 inches of water at fast idle	See FOS "Engine" Manual
Test manifold vacuum (Gasoline or LP-Gas)	18 - 20 inches mercury at fast idle	See FOS "Engine" Manual

ENGINE TUNE-UP

Operation	Specifications	Reference
Air Intake System		
Air cleaner - clean primary element and dust cup		Section 30, Group 15
Air cleaner - clean precleaner screen		Section 30, Group 15
Check crankcase and hydraulic breather caps		See Operator's Manual
Check valve clearance	Diesel-Exhaust-0.018 in. Intake-0.014 in. Gas and LP-Gas-Exhaust-0.022 in. Intake-0.014 in.	Section 20, Group 10 Section 20, Group 10 Section 20, Group 10 Section 20, Group 10
Retorque cylinder head cap screws	110 ft-lbs.	Section 20, Group 10

Operation	Specifications	Reference
Alternator		
Check belt tension	20 lbs. at 3/4 in.	See Operator's Manual
Replace brushes	If less than 1/4 in. beyond holder
Battery		
Check electrolyte level	See Operator's Manual
Clean cables, terminals and box
Tighten cable clamps
Ignition System		
Clean, adjust, test, or replace spark plugs	0.025 in. - gasoline 0.015 to 0.018 in. - LP-Gas
Check distributor cap, rotor, and wiring	See Operator's Manual
Clean, adjust, or replace points	0.016 in. gap (Delco) 0.020 in. gap (Prestolite)	See Operator's Manual
Lubricate distributor cam	Cam lubricant
Time distributor	"TDC" mark on flywheel at 2500 rpm	See Operator's Manual
Gasoline and LP-Gas Fuel Systems		
Check fuel tank and lines for leaks or restrictions
Clean fuel pump sediment bowl
Replace fuel line filter
Adjust carburetor and check engine speed	Section 20, Group 35
Drain and clean converter (LP-Gas only)	Section 30, Group 15

Operation	Specifications	Reference
Diesel Fuel System		
Clean fuel pump sediment bowl		
Check fuel tank, lines and connections for leaks or restrictions		
Replace fuel filters		
Time injection pump		Section 30, Group 10
Check injection pump advance		Section 30, Group 10
Bleed fuel system		
Adjust throttle control linkage and check engine speed		Section 20, Group 33
Cooling System		
Check water pump for leaks		
Clean and flush cooling system		
Clean trash from radiator		
Test thermostat and pressure cap		Section 20, Group 30
Engine Lubricating System		
Check engine oil pressure	50 - 60 psi at 2500 rpm (NA303) 45 - 65 psi at 2500 rpm (NB329)	Section 20, Group 25 Section 20, Group 25

FINAL ENGINE TESTING

Use a dynamometer in final testing to determine if engine is performing at rated horsepower, (303 - 90 hp) or (329 - 105 hp).

Compare output of engine with horsepower delivered prior to tune-up.

Use a dynamometer and exhaust gas analyzer for accurate and efficient carburetor adjustment.




COTTON PICKER AND ADJUSTMENTS

Make the following cotton picker adjustments whenever the engine is tuned-up.

Operation	Specifications	Reference
Brakes		
Check brake adjustment		Section 60, Group 10
Power Steering		
Bleed steering system		Section 70, Group 25
Hydraulic System		
Test hydraulic system		Section 70, Group 5
Tires		
Check tire inflation		See Operator's Manual
TIGHTEN ACCESSIBLE BOLTS AND CAP SCREWS See torque chart below.		

STANDARD TORQUE CHART

RECOMMENDED TORQUE IN FOOT-POUNDS
 COARSE AND FINE THREADS

Bolt Diameter	 Plain Head	 Three Radial Dashes	 Six Radial Dashes
1/4	Not used	10	14
5/16	Not used	20	30
3/8	Not used	35	50
7/16	35	55	80
1/2	55	85	120
9/16	75	130	175
5/8	105	170	240
3/4	185	300	425
7/8	160	445	685
1	250	670	1030

Group 15 LUBRICATION

GENERAL INFORMATION

Carefully written and illustrated lubrication instructions are included in the operator's manual furnished with your customer's machine. Remind him to follow these instructions.

For your convenience, the following chart shows capacities and types of lubricants for the cotton picker components and systems. Specifications for lubricants follow this chart.

	Capacity	Type of Lubricant	Interval of Service
Engine crankcase	10 U.S. quarts (699)	See page 15-2	10 Hours - Check 100 Hours - Drain and refill. Change filter.
Transmission	22 U.S. quarts	SAE 90 regular type gear lubricant	30 Hours - Check 250 Hours - Drain and fill
Final drives	2 U.S. quarts (each)	SAE 90 regular type gear lubricant	100 Hours - Check 250 Hours - Drain and fill
Hydraulic System	19 U.S. quarts	See page 15-2	10 Hours - Check 200 Hours - Drain and fill hydraulic reservoir - 8 qt.
Grease fittings	John Deere SAE Multipurpose-type grease	See Operator's Manual
Distributor cam	Trace	Distributor cam lubricant	250 Hours
Hydrostatic drive	27 U.S. quarts	John Deere All Weather Hydrostatic Fluid or Texaco Type F-1876 Transmission Fluid	500 Hours - Drain and fill
Stalk lifters and doffer chains	2 or 3 drops	SAE 20W engine oil	10 Hours
Picker bar cams, cam follower bearings, sun gears, spindle drive gears	2 or 3 shots	John Deere spindle lubricant	10 Hours
Picker bars	Until grease appears at bearing caps	John Deere spindle lubricant	20 Hours
Unit stop upper rockshaft	2 or 3 drops	SAE 20W engine oil	30 Hours
Unit drive gear case	3 pounds	John Deere SAE Multipurpose-type grease	250 Hours - Clean and pack bearings

LUBRICANTS

Effective use of lubricating oils and greases is perhaps the most important step towards low upkeep cost, long cotton picker life, and satisfactory service. Use only those lubricants specified in this section; apply them at the intervals and according to the instructions in the lubrication section of the operator's manual.

Engine Lubricating Oils



We recommend John Deere Torq-Gard Supreme engine oil for use in the engine crankcase. This oil is compounded specifically for use in John Deere engines, and provides superior lubrication under all conditions. NEVER PUT ADDITIVES IN THE CRANKCASE. Torq-Gard Supreme oil was formulated to provide all the protection your engine needs. Additives could reduce this protection rather than help it.

If oil other than Torq-Gard Supreme is used, it must conform to one of the following specifications.

SINGLE VISCOSITY OILS

DIESEL ENGINES	GASOLINE AND LP-GAS ENGINES
API Service CD/SD MIL-L-2104C* Series 3*	API Service CD/SE, CD/SD, CC/SD or SD MIL-L-46152 MIL-L-2104C*

MULTI-VISCOSITY OILS

DIESEL, GASOLINE AND LP-GAS ENGINES
API Service CC/SE, CC/SD or SD MIL-L-46152

*As further assurance of quality, the oil should be identified as suitable for API Service Designation SD.

Depending on the expected prevailing temperature for the fill period, use oil of viscosity as shown in the following chart.

Air Temperature	John Deere Torq-Gard Oil	Other Oils	
		Single Viscosity Oil	Multi-Viscosity Oil
Above 32°F.	SAE 30	SAE 30	Not recommended.
-10°F. to 32°F.**	SAE 10W-20	SAE 10W	SAE 10W-30
Below -10°F.	SAE 5W-20	SAE 5W	SAE 5W-20

**SAE 5W-20 oil may also be used to insure optimum lubrication at starting, particularly when engine is subjected to -10°F., or lower temperatures for several hours.

Some increase in oil consumption may be expected when SAE 5W-20 or SAE 5W oils are used. Check oil level more frequently.

Transmission, Hydrostatic Reservoir, Final Drives, and Hydraulic System Lubricants

Unit	Viscosity
Transmission, Final Drives	*SAE 90 Regular Type Gear Lubricant
Hydrostatic Drive Oil Reservoir	**John Deere All-Weather Hydrostatic Fluid or Texaco Texamatic Type F-1876 Transmission Fluid.

Hydraulic System

Air Temperature	John Deere Torq-Gard Oil	Other Oils	
		Single Viscosity Oil	Multi-Viscosity Oil
Above 32°F.	SAE 10W-20	SAE 20	SAE 10W-30
Below 32°F.	SAE 10W-20	SAE 10W	SAE 10W-30

***IMPORTANT: Do not use gear lubricant with SCL additives in this transmission or final drive.**

****IMPORTANT: The composition of various brands of "Type F" automatic transmission fluids can and does vary, and the use of certain formulations labeled "Type F" may damage the hydrostatic drive units. Therefore, we recommend only the use of John Deere All-Weather Hydrostatic Fluid or Texaco Type F-1876 Transmission Fluid.**

The chart above shows the viscosity and type of lubricant for the transmission, hydrostatic reservoir, final drives and hydraulic system.

Greases

John Deere SAE Multipurpose-type grease is recommended for most grease fittings on your cotton picker.

Spindle and Picker Bar Lubricant

A special John Deere spindle lubricant or its equivalent must be used in lubricating spindles and picker bars. The lubricant is especially designed for use with cotton picker spindles. The John Deere lubricant has been laboratory and field-tested to fulfill all requirements needed in lubricating spindles properly.

Storing Lubricants

Your cotton picker can operate at top efficiency only if clean lubricants are used. Use clean containers to handle all lubricants. Store them in an area protected from dust, moisture and other contamination.

Section 20 ENGINE

CONTENTS OF THIS SECTION

	Page		Page
GROUP 5 - GENERAL INFORMATION, DIAGNOSIS, AND REMOVAL		GROUP 25 - LUBRICATION SYSTEM	
General Information	5-2	General Information	25-1
Diagnosis	5-2	Checking Engine Oil Pressure	25-1
Removal	5-4	Repair	25-2
GROUP 10 - CYLINDER HEAD, VALVES, AND CAMSHAFT		Installation	25-3
Cylinder Head and Valves	10-1	Adjusting Engine Oil Pressure	25-4
Camshaft	10-5	Oil Cooler	25-4
GROUP 15 - CYLINDER BLOCK, LINERS, PISTONS, AND RODS		GROUP 30 - COOLING SYSTEM	
Pistons	15-1	General Information	30-1
Piston Rings	15-1	Diagnosing Cooling System Malfunctions	30-1
Rods	15-2	Testing the System	30-2
Block	15-2	Repair	30-2
Liners	15-3	GROUP 35 - GOVERNOR AND SPEED CONTROL	
Deglazing Liners	15-3	Governor	35-1
Installation	15-4	Diagnosing Malfunctions	35-1
GROUP 20 - CRANKSHAFT, MAIN BEARINGS, AND FLYWHEEL		Repair	35-1
General Information	20-1	Installation and Assembly	35-1
Removal	20-1	Adjustment	35-3
Repair	20-1	Carburetor and Throttle Adjustment	35-3
Installation	20-3	Injection Pump and Linkage Adjustment	35-5
Timing Gear Train	20-4	Engine Break-in	35-7
		GROUP 40 - SPECIFICATIONS, TORQUES FOR HARDWARE, AND SPECIAL TOOLS	
		Specifications	40-1
		Torques for Hardware	40-4
		Special Tools	40-5

Group 5

GENERAL INFORMATION, DIAGNOSIS, AND REMOVAL

GENERAL INFORMATION

The engine is a 6-cylinder, valve-in-head, vertical in-line four-cycle engine. Three types of fuel, each with the appropriate fuel delivery devices are available—gasoline, LP-Gas, and diesel.



For basic theory of engine operation see the FOS Manual 30 - ENGINES.

DIAGNOSING MALFUNCTIONS

WILL NOT START

Fuel System Malfunction - See Section 30

- Foreign matter in fuel
- Improper fuel
- Faulty fuel pump
- Fuel shut-off at tank
- Restricted air intake system
- Faulty injection nozzles
- Carburetor malfunction
- Sticking choke

Electrical System Malfunction - See Section 40

- Corroded or loose battery connection
- Faulty or loose wiring
- Faulty key switch
- Faulty safety start switch
- Faulty ignition system

UNEVEN RUNNING OR FREQUENT STALLING

Basic Engine Problem - See This Section

- Improper valve clearance
- Cylinder head gasket leaking
- Valves sticking or burned
- Worn or broken compression rings
- Low compression
- Incorrect timing
- Coolant temperature below normal
- Engine overheating

Fuel System Malfunction - See Section 30

- Low fuel supply
- Restricted fuel lines or filters
- Faulty fuel pump
- Faulty fuel injection pump
- Faulty injection nozzles
- Exhaust system restricted
- Carburetor adjusted incorrectly
- Leaking carburetor or intake manifold gasket

Electrical System Malfunction - See Section 40

- Faulty ignition system.

ENGINE MISSES

Basic Engine Problems - See This Section

- Worn camshaft lobes
- Weak valve springs
- Incorrect valve clearance
- Burned, warped, pitted, or sticking valves
- Low compression
- Incorrect timing
- Engine overheating
- Faulty governor
- Detonation or preignition

Fuel System Malfunction - See Section 30

- Air in fuel
- Faulty injection nozzles
- Faulty injection pump
- Water in fuel
- Mixture of gasoline and diesel fuels
- Faulty fuel pump
- Faulty carburetor

Electrical System Malfunction - See Section 40

- Incorrect type spark plugs. (preignition)
- Leaks in wiring
- Faulty ignition system

LACK OF POWER

Basic Engine Problem - See This Section

- Blown cylinder head gasket
- Worn camshaft lobes
- Incorrect valve clearance
- Burned, warped, pitted, or sticking valves
- Weak valve springs
- Incorrect timing
- Low compression
- Wrong oil viscosity
- Coolant temperature above or below normal
- Engine overheating
- Incorrect throttle linkage
- Governor binds

Fuel System Malfunction - See Section 30

- Plugged fuel filters
- Improper fuel
- Faulty injection pump
- Faulty injection nozzles
- Faulty fuel pump
- Restricted air cleaner
- Restricted exhaust system
- Low intake manifold system
- Obstructed fuel line (frosted on LP-Gas engines)
- Faulty carburetor

Power Train Malfunction - See Section 50

- Clutch slipping

ENGINE OVERHEATS

Basic Engine Problem - See This Section

- Defective head gasket
- Incorrect timing
- Crankcase oil level low
- Low coolant level
- Radiator or grille screens dirty
- Loose or broke fan belt
- Faulty thermostat
- Cooling system limed up
- Defective radiator pressure cap
- Faulty water pump

Service Problems - See Section 10

- Engine overheated
- Crankcase oil level low
- Improper fuel

Fuel System Malfunction - See Section 30

- Excessive fuel delivery
- Faulty carburetor

EXCESSIVE OIL CONSUMPTION

Basic Engine Problems - See This Section

- Restricted oil passage from valve cover
- Worn valve guides or valve stems
- Oil control rings worn or broken
- Scored liners or pistons
- Excessive ring groove wear in piston
- Rings sticking in grooves of pistons
- Oil return slots in piston clogged
- Insufficient piston ring tension
- Piston ring gaps not staggered
- Worn crankshaft thrust washer (misaligned piston and rod)
- Excessive main or connecting rod bearing clearance
- Front or rear crankshaft oil seal faulty
- Crankcase oil too thin
- Oil pressure too high
- Oil level too high
- Intake valve O-ring worn or missing (Gasoline)

Service Problems - See Section 10

- Crankcase oil too thin
- Oil level too high

Fuel System Malfunction - See Section 30

- Restricted air intake

LOW OIL PRESSURE

Basic Engine Problems - See This Section

- Excessive main and connecting rod bearing clearance
- Low oil level
- Leakage in internal oil passages
- Faulty fuel pump
- Improper regulating valve adjustment
- Improper oil
- Defective oil cooler

Service Problem - See Section 10

- Low oil level
- Improper oil

Electrical System Malfunction - See Section 40

- Defective oil pressure indicator lamp
- Faulty oil pressure sending unit

HIGH OIL PRESSURE

Basic Engine Problem - See This Section

- Low compression
- Restricted air cleaner
- Faulty injection nozzles
- Faulty injection pump
- Faulty carburetor

Electrical System Malfunction - See Section 40

- Faulty ignition system

BLACK OR GREY EXHAUST SMOKE

Basic Engine Malfunction - See This Section

- Incorrect engine timing

Service Problem - See Section 10

- Improper grade of fuel
- Engine overloaded

Fuel System Malfunction - See Section 30

- Excessive fuel delivery
- Restricted air intake
- Defective muffler
- Faulty injection nozzle
- Faulty carburetor

WHITE EXHAUST SMOKE

Basic Engine Problem - See This Section

- Low compression
- Incorrect timing

Fuel System Malfunction - See Section 30

- Faulty injection nozzles
- Improper fuel

SLOW ACCELERATION

Fuel System Malfunction - See Section 30

- Faulty injection pump
- Faulty injection nozzles
- Faulty carburetor

Electrical System Malfunction - See Section 40

- Faulty ignition system

DETONATION OR PREIGNITION

Basic Engine Problem - See This Section

- Carbon buildup in compression
- Fuel System Malfunction - See Section 30*
- Oil picked up by air intake stream
- Faulty fuel injection

ENGINE BACKFIRES

Fuel System Malfunction - See Section 30

- Faulty carburetor

Electrical System Malfunction - See Section 40

- Faulty ignition system

DIAGNOSING MALFUNCTION— Continued

ABNORMAL ENGINE NOISE

Basic Engine Problem - See This Section

- Excessive valve clearance
- Worn cam followers
- Bent push rods
- Worn rocker arm shafts
- Worn main or connecting rod bearings
- Foreign material in combustion chamber
- Worn piston pins and pin bushings
- Scored pistons
- Incorrect timing
- Excessive crankshaft end play
- Loose main bearing caps
- Worn gears
- Broken oil pump shaft
- Low engine oil level

REMOVAL

Whenever it is necessary to remove the engine from the 699 Cotton Picker for servicing, you first must remove the basket or raise basket and block firmly. Remove or disconnect the following items.

Also, identify each item removed or disconnected to facilitate assembly when the engine is reinstalled.

1. Remove hood.
2. Standard transmission—
Disconnect main drive shaft.
Disconnect clutch linkage.
3. Hydrostatic transmission—
Disconnect U-joint and drive shaft.
Disconnect throttle linkage.

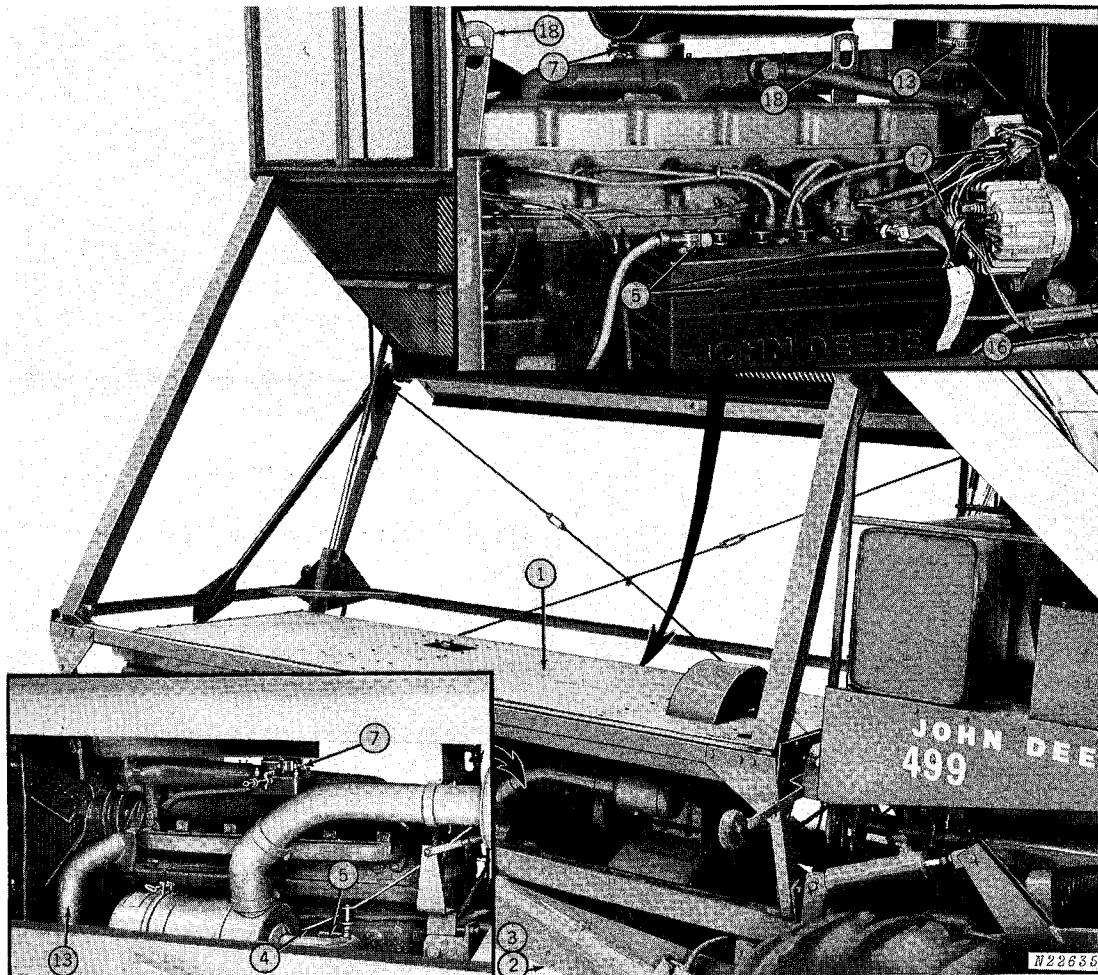


Fig. 1-Engine Removal and Installation

4. Disconnect choke cable at carburetor.
5. Disconnect battery cables at battery and remove battery.
6. Disconnect air intake hose.
7. Remove muffler.
8. Drain engine, block, and radiator.
9. Drain oil.
10. Disconnect fuel line at fuel pump.
11. Disconnect fuel return line at injection pump (diesel).
12. Disconnect fuel line at fuel lock (LP-Gas).
13. Disconnect upper and lower radiator hose.
14. Standard transmission—
Clutch housing and sheaves.
15. Hydrostatic transmission—
Sheaves.
16. Remove pump. Do not disconnect hoses. Wire pump to frame.
17. Disconnect electrical wires at terminal points on engine.
18. Connect a chain or cable to the engine hoisting brackets.
Attach the chain to hoist and take up slack.
Remove engine mounting bolts.
Raise engine up and to the front slightly to clear fan shroud. Then raise straight up and away from picker.

INSTALLING ENGINE

Check condition of bonded rubber engine-mounting pads in engine frame. If replacement is necessary, soap outside of mounts and press into engine frame.

Position engine in engine frame and tighten bolts to specified torque.

STANDARD TRANSMISSION: Install clutch housing and sheaves. Install drive belt at this time.

HYDROSTATIC TRANSMISSION: Install sheaves and drive belt.

Connect all wires at correct terminal points on the engine.

Install upper and lower radiator hoses.

Connect fuel line at fuel lock on the LP-Gas engine only.

Connect fuel line at fuel pump on Gas and Diesel engines. Connect fuel return line at fuel injection pump on the Diesel engine only.

Install muffler.

Connect air intake hose from air cleaner to engine manifold (diesel) or carburetor (gas or LP Gas).

Install battery and battery cables.

Install choke cable at carburetor.

STANDARD TRANSMISSION: Connect throttle linkage and clutch linkage. Connect drive shaft at clutch housing.

HYDROSTATIC TRANSMISSION: Connect throttle linkage. Connect U-joint at engine drive shaft.

Install engine hood.

Fill crankcase with recommended oil. See Operator's Manual.

Fill radiator as recommended in operator's Manual.

Remove safety braces and lower basket.

Group 10

CYLINDER HEAD, VALVES, AND CAMSHAFT

GENERAL INFORMATION

Cylinder heads on cotton picker power units contain intake and exhaust valves, intake and exhaust passages, and coolant passages. Valve guide ports are integral with the cylinder head. Valve seats are ground directly into the cylinder head casting, except where seat inserts are used.

Diesel engines are equipped with hardened valve stem caps that reduce wear on the valves, valve guides and rocker arms.

On gasoline engines, the exhaust valves are equipped with valve rotators.

Valve seat inserts on exhaust valves of LP-Gas engines are replaceable.

Valves are opened by rocker arms assembled on a rocker arm shaft mounted on top of the cylinder head. These rocker arms are actuated by the camshaft through the cam followers and push rods. Valves are closed by springs, held in place with keepers and caps.

DIAGNOSIS

See Group 5 for diagnosing malfunctions.

REMOVAL

Drain coolant from both radiator and engine block.

The engine need not be removed from the cotton picker to service cylinder head, valves, and related parts.

Detach and remove water outlet elbow from cylinder head.

Remove exhaust manifold attaching cap screws and lift it off.

Disconnect coolant temperature wire from sending unit.

On diesel engines, disconnect fuel injection lines and identify each line for assembly. Disconnect injection leak-off line and remove injection nozzles (see Section 30). Detach fuel inlet and outlet lines at fuel filter and remove fuel filters from cylinder head. Plug all fuel lines and fuel openings to keep dirt out of system.

On gasoline and LP-Gas engines, disconnect wires from ignition coil and spark plugs.

Remove vent tube from rocker arm cover.

Remove rocker arm cover and gasket.

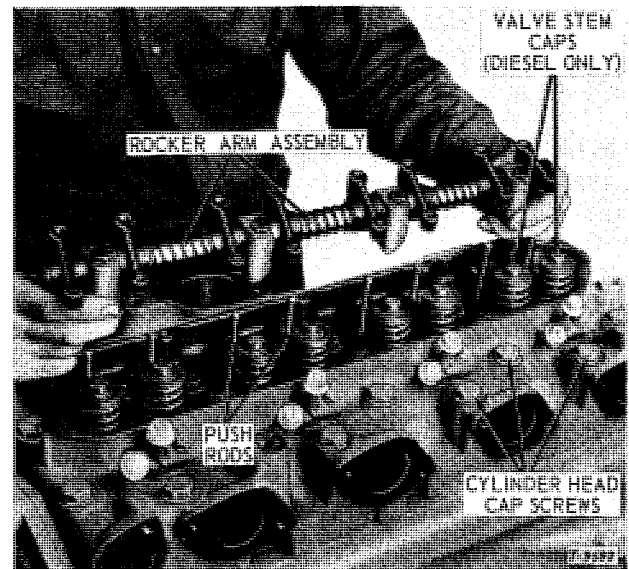


Fig. 1-Removing Rocker Arm Assembly

Remove rocker arm assembly (Fig. 1). On diesel engines, remove valve stem caps.

Remove push rods and identify for reassembly.

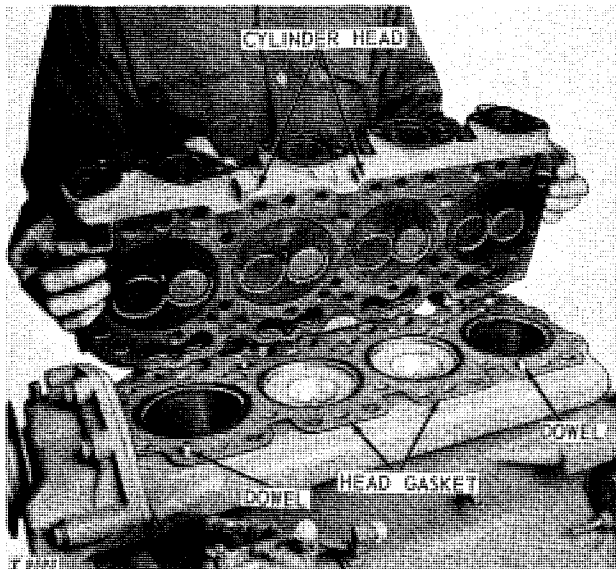


Fig. 2-Removing Cylinder Head

Remove cylinder head bolts, cylinder head and gasket (Fig. 2).

NOTE: On diesel engines, remove injection nozzles before removing cylinder head. If nozzles have not been removed, do not set head down on protruding nozzles.

IMPORTANT: Do not rotate crankshaft with cylinder head removed unless all cylinder liners are bolted down.

DISASSEMBLY

Rocker Arm Assembly

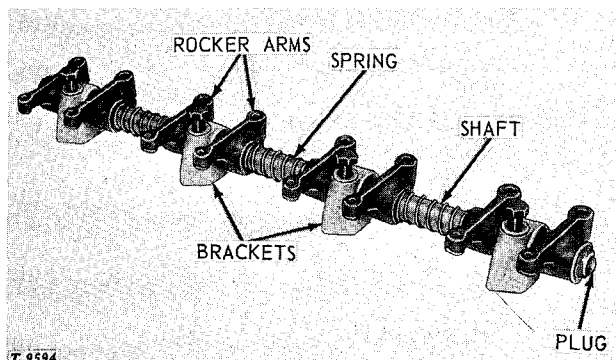


Fig. 3-Rocker Arm Assembly

Remove plug from one end of rocker arm shaft and slide all parts from end of shaft (Fig. 3). Identify rocker arm for reassembly.

Cylinder Head and Valves

Using a valve spring compressor, remove retainer locks, caps, valve springs, and related parts. Remove and identify each valve so that it can be reinstalled in the same guide and seat from which it was removed.

INSPECTION AND REPAIR

Cylinder Head

Clean carbon from cylinder head and inspect for cracks. If any cracks are found, the head must be replaced or repaired.

Measure inside diameter of valve guides. They should measure 0.3745 to 0.3755 in. Valves are available with standard or 0.003, 0.015 or 0.030 in. over-size stems.

Valve guides must be precision reamed to match oversize valves. Make sure valves fit freely in guides. Badly worn valve guides can be sized by knurling. Use knurling tool No. 1002 exactly as recommended by the manufacturer.

NOTE: On LP-Gas cylinder heads, check exhaust valve inserts for cracks or pits. Replace if worn.

Refacing Valves

Check valve face and stem for wear or damage. Reface or replace valves as necessary. Angle of valve face for gasoline and LP-Gas engines is 44 degrees and 43-1/2 degrees for diesel.



For information on valve refacing see "Basic Engines" of FOS Manual 30 - ENGINES.

Valve Springs

Inspect valve springs for alignment, wear, damage and compression. Place springs on a flat surface to see that they are square and parallel. Do not use springs that are cocked, crooked or contain broken or rusty coils. Free length of spring is 2.1250 in. A force of 52-64 lbs. should compress the spring to 1.8125 in. and a force of 129-157 lbs. should compress the spring to 1.7187 in.

Check compression strength of springs.

Valve Seats

Check valve seats for cracks or pits.

Check concentricity of valve seat with dial indicator. Total run-out on each seat should not exceed 0.0020 in.

NOTE: On LP-Gas engines, check exhaust valve inserts for cracks or pits. Replace if worn.



For information of valve seat refacing see "Basic Engines" of FOS MANUAL 30 - Engines.

Thank you very much for your reading. Please Click Here. Then Get COMPLETE MANUAL. NO WAITING



NOTE:

If there is no response to click on the link above, please download the PDF document first and then click on it.

Rocker Arm Assembly

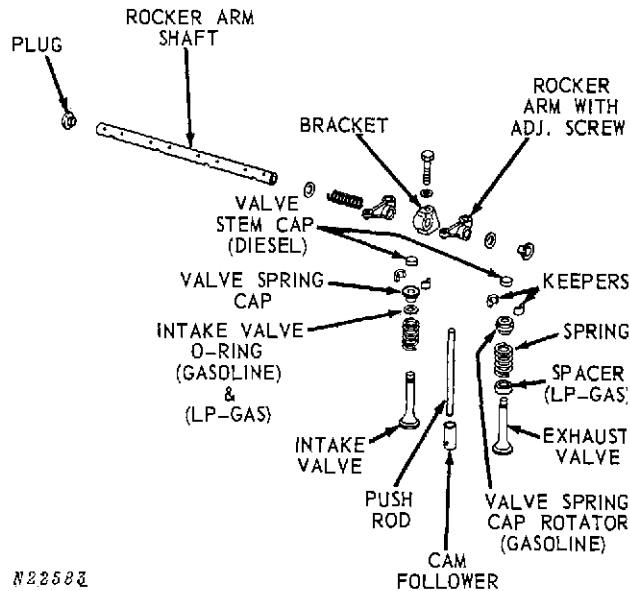


Fig. 4-Exploded View of Rocker Arm Assembly

Make sure that rocker arm oil holes are not plugged.

If ends of arms (Fig. 4) are worn, resurface them.

Thoroughly clean holes in rocker arm mounting brackets. This is especially important for the rear bracket, because it is through this hole that oil is fed to the rocker arm shaft.

On LP-Gas and gasoline engines, replace the intake valve O-ring.

IMPORTANT: If a failed valve has been replaced, also replace the rocker arm and push rod for that valve.

Valve Rotators (Gasoline Engines Only)

On gasoline engines, examine valve rotators for damage which might make them unserviceable. If rotator will not turn freely in one direction, replace with a new part.

ASSEMBLY

Rocker Arm Assembly

Assembly parts on rocker arm shaft in sequence that they were removed (Fig. 4).

Oil hole between rocker arm shaft and shaft support must face downward when assembly is installed on cylinder.

Apply John Deere valve stem lubricant or its equivalent to valve stems. Install valves in same ports from which they were removed, working them back and forth to make sure they slip through the ports easily and seat properly.

On gasoline and LP-Gas engines, place oil deflectors (O-rings) on intake valve stems and place rotocaps on exhaust valves (gasoline only).

1. Use new valve keepers.

2. When installing valve spring, make certain the cylinder head end of valve spring is located correctly in the machined counterbore of the cylinder head.

NOTE: On LP-Gas engines, install exhaust valve spring spacers with chamfered edge down.

3. After installing valve springs and keepers, "pop" each spring and valve assembly three or four times by tapping the end of each valve stem with a soft mallet to insure proper positioning of the keepers.

INSTALLATION

Coat new cylinder head gasket on both sides with permatrix No. 3 Sealing Compound and place gasket on cylinder block. Install cylinder head using flat washers under all cap screws.

Start cylinder head-to-cylinder block cap screws by hand and tighten evenly to 110 ft. lbs torque, following the exact sequence shown in Fig. 5.

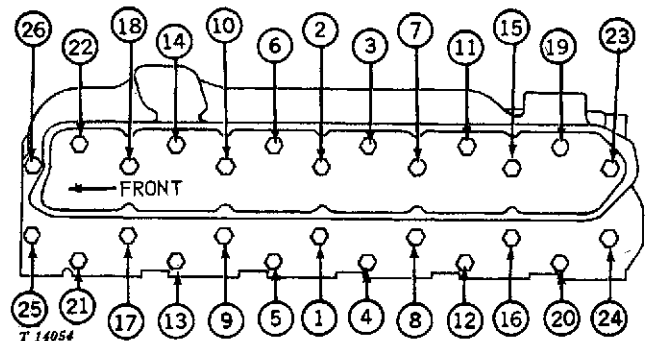


Fig. 5-Proper Sequence for Tightening Cylinder Head Cap Screws

IMPORTANT: Run engine for one hour at 2500 rpm with 1/2 load. Then, retighten cylinder head cap screws in sequence shown (Fig. 5) to 110 ft-lbs torque. Break the cap screws loose 5 to 10 degrees before retightening them.

Install the push rods through push rod holes in cylinder head in the same sequence they were removed.

On diesel engines, position valve stem caps over ends of valve stems. Make certain the caps rotate freely on the stems.

Install rocker arm and shaft into cylinder head. Tighten cap screws to 35 ft-lbs torque.

ADJUSTING VALVE CLEARANCE

The engine may be either hot or cold during valve adjustment. Adjust as follows:

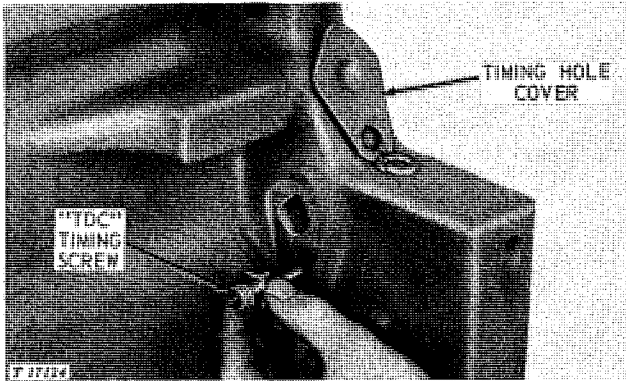


Fig. 6-Using Timing Screw to Set Engine at "Top Dead Center"

Set No. 1 piston at "top dead center" of its compression stroke by turning the engine. Remove the timing cover and screw from the flywheel housing, and, reversing the screw, insert it into the flywheel housing hole. Rock the flywheel until screw slides into hole in the flywheel.

With piston No. 1 at "top dead center" of its compression stroke, adjust the clearance on No. 1, 2 and 4 intake, and No. 1, 3, and 5 exhaust valves to specifications.

Valve clearance is.

Gasoline and LP-Gas-intake	0.014 in.
Gasoline and LP-Gas (NB329L) - exhaust	0.022 in.
Diesel-intake	0.014 in.
Diesel-exhaust	0.018 in.

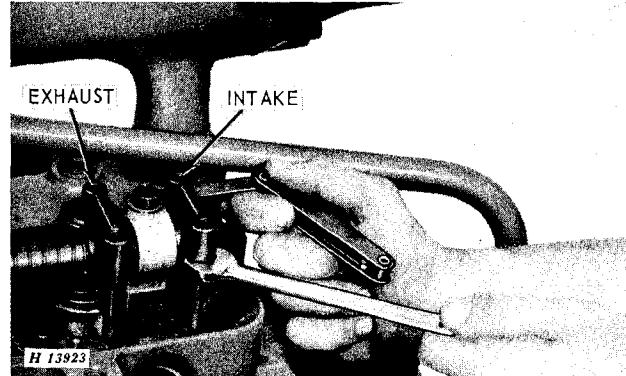


Fig. 7-Adjusting Valve Tappet Clearance

Using a feeler gauge to measure clearance (Fig. 7), turn valve adjusting nut up or down until clearance is correct.

Remove timing screw from flywheel. Rotate engine flywheel 360 degrees and reinsert timing screw into hole in flywheel rim.

Adjust the remaining valves, No. 3, 5, and 6 intake and No. 2, 4, and 6 exhaust valves to specifications.

Remove timing screw from flywheel and reinstall timing cover.

IMPORTANT: Valve clearance must be rechecked and adjusted to specified clearance after the engine has been in operation for one hour at 2500 rpm at 1/2 load, and after cylinder head cap screws have been retightened.

Make sure that the rocker arm cover gasket is in good condition. Cement gasket to rocker arm cover with sealing compound and install gasket, cover and vent tube.

On gasoline and LP-Gas engines, connect wires to ignition coil and spark plugs.

Connect water hoses.

Connect air intake hose.

Install intake and exhaust manifolds on cylinder head (if removed).

On diesel engines, install injection nozzles (see Section 30). Connect fuel injection lines to proper fittings at filters and nozzles. Fasten clamps over lines. Bleed fuel system before operating the engine.

Fill cooling system as specified in your Cotton Picker Operator's Manual.

CAMSHAFT

General Information

The camshaft is alloy iron. All cams are integral. The gasoline and LP-Gas engine camshafts are cast with an integral distributor drive gear.

The camshaft is driven at one-half engine speed by the top idler gear and is supported by four pressure-lubricated bores integral with the cylinder block. Camshaft thrust is taken by a thrust plate fastened to the rear of the cylinder block.

Removal

To repair camshaft and related parts, engine must be removed from cotton picker (See Section 20, Group 5).

Remove cylinder head. Using a wire with a 90-degree bend on the end, reach down through top of cylinder head and raise cam followers off camshaft lobes. Secure wires so that cam followers will not drag on camshaft during removal.

NOTE: If cylinder block is removed from machine and secured on an engine stand upside down, cam followers need not be wired up.

Remove top idler gear from engine front plate. This will allow camshaft to rotate when lining up camshaft attaching cap screws.

Remove cap screws and pull camshaft from block.

Repair

Determine if camshaft journals and bores measure 2.1997 to 2.2007 in.

Thrust plate thickness must be within 0.1560 to 0.1580 in. as the thrust plate determines camshaft endplay.

Replace camshaft drive gear, if necessary, by pressing shaft from gear. Press on gear until it is tight against flange on camshaft. Timing marks must face away from camshaft.

Support camshaft under its first bearing while pressing on gear.

Whenever a new camshaft is installed, replace the cam followers with new parts.

If replacing tachometer drive, press on new drive gear until shoulder of gear bottoms on rear of camshaft.

Installation

Coat entire camshaft with a light film of oil.

NOTE: When installing camshaft, do not permit cam lobes to drag on camshaft bores.

Turn the camshaft gear until the cap screws and locks which secure the thrust plate can be installed and tightened to 35 ft-lbs torque.

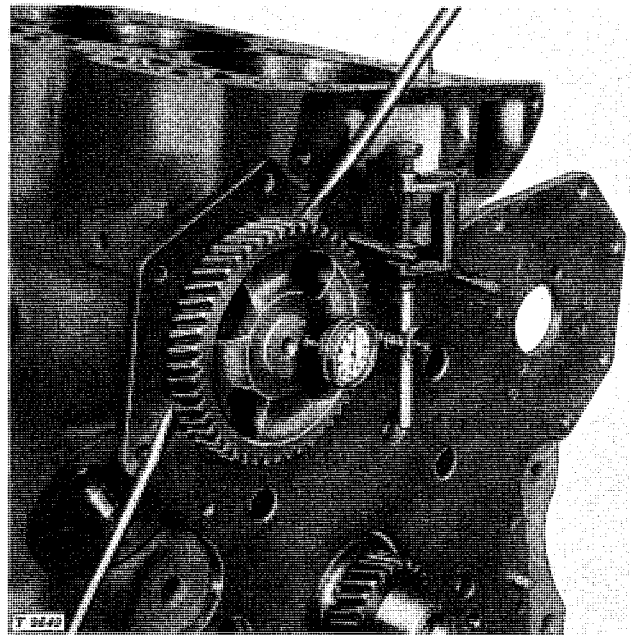


Fig. 8-Checking Camshaft End Play

The camshaft end play must be within 0.0025 to 0.0085 in. (Fig. 8). (New camshaft and thrust plate should restore this.)

Before installing the idler gear, set flywheel at "TDC" with No. 1 piston on the compression stroke. Align the timing marks on the camshaft drive gear with the center of the crankshaft, using timing tool JD-254.

With timing marks aligned, install top idler gear and secure to front plate with flat washer and cap screw. Tighten cap screw to 35 ft-lbs torque.

Install all parts previously removed.

After installing camshaft, retime the gear train. See page 20-20-4.