


**John Deere
JD644 and JD644-A
Loaders**

**TECHNICAL
MANUAL**

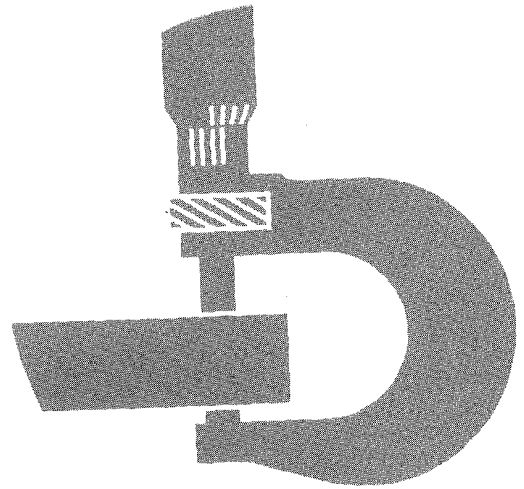

JD644 and JD644-A Loaders TECHNICAL MANUAL TM-1011 (Apr-74)


CONTENTS

- | | |
|---|---|
| <p>Section 10 - GENERAL</p> <ul style="list-style-type: none"> Group 5 Specifications Group 10 Predelivery, Delivery, and After-Sales Service Group 15 Tune-Up and Adjustment Group 20 Lubrication Group 25 Loader Separation <p>Section 20 - ENGINE</p> <ul style="list-style-type: none"> Group 5 Diagnosis Group 10 Basic Engine Group 15 Engine Lubrication Group 20 Speed Control Linkage Group 25 Engine Cooling Group 30 Specifications and Special Tools <p>Section 30 - FUEL SYSTEM</p> <ul style="list-style-type: none"> Group 5 System Diagnosis Group 10 Tank, Filters, and Transfer Pump Group 15 Air Intake System Group 20 Fuel Injection Pump Group 25 Roosa-Master Injection Nozzles <p>Section 40 - ELECTRICAL SYSTEM</p> <ul style="list-style-type: none"> Group 5 Wiring Diagrams Group 10 Charging System Group 15 Starting Circuit Group 20 Gauges and Switches | <p>Section 50 - POWER TRAIN</p> <ul style="list-style-type: none"> Group 5 System Diagnosis Group 10 Damper Assembly and Drive Shafts Group 15 Transmission Assembly Group 16 Disconnect Output Shaft Group 20 Axle Assemblies Group 25 Differentials <p>Section 60 - POWER STEERING AND BRAKE SYSTEMS</p> <ul style="list-style-type: none"> Group 5 General Information, Testing, and Diagnosis Group 10 Hydraulic Pump Group 15 Filters, Oil Cooler, and Accumulators Group 20 Steering System Group 25 Brake System <p>Section 70 - HYDRAULIC SYSTEM (Loader Functions)</p> <ul style="list-style-type: none"> Group 5 General Information, Testing, and Diagnosis Group 10 Reservoir and Filters Group 15 Hydraulic Pump Group 20 Control Valve Group 25 Return-to-Dig Valve Group 30 Backhoe Control Valve Group 35 Cylinders Group 40 Backhoe Swing Cylinder <p>Section 80 - MISCELLANEOUS COMPONENTS</p> <ul style="list-style-type: none"> Group 5 Frames Group 10 Buckets Group 15 Drott 4-in-1 Buckets Group 20 9305 Backhoe Group 25 Specifications and Special Tools |
|---|---|

INDEX

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and IEMC standards.

INTRODUCTION

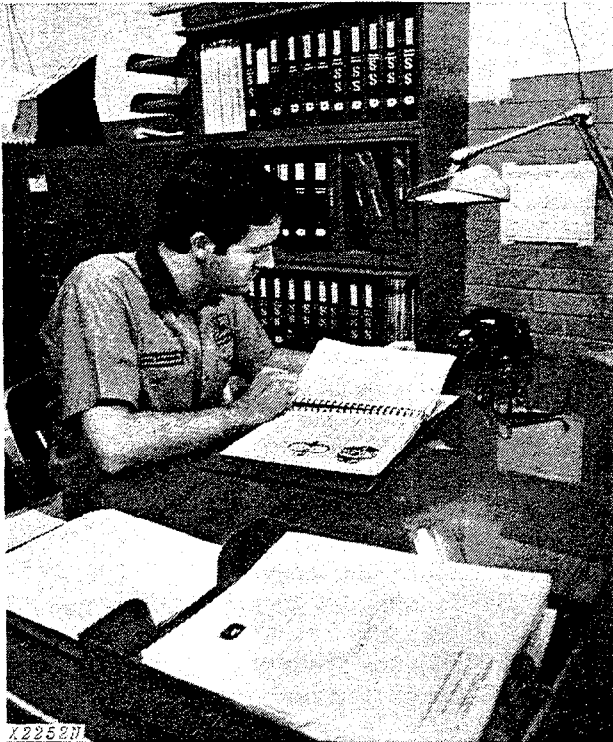

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

- **FOS Manuals—**for reference
- **Technical Manuals—**for actual service


The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new men and for reference by experienced men.

Technical Manuals are concise service guides for a *specific* machine. Technical Manuals are on-the-job guides containing only the vital information needed by a journeyman mechanic.



When a serviceman should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

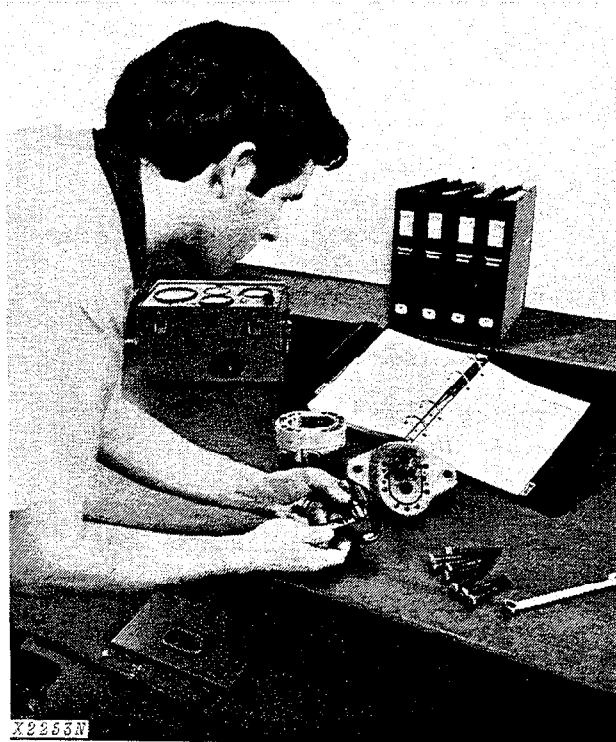

Use Technical Manuals for Actual Service

Some features of this technical manual:

- *Table of contents at front of manual*
- *Exploded views showing parts relationship*
- *Photos showing service techniques*
- *Specifications grouped for easy reference*

This technical manual was planned and written for you—a journeyman mechanic. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Section 10 GENERAL

CONTENTS OF THIS SECTION

	Page		Page
GROUP 5 - SPECIFICATIONS			
Engine	5-1	GROUP 15 - TUNE-UP AND ADJUSTMENT	
Air Intake System	5-1	Preliminary Engine Testing	15-1
Electrical System	5-1	Engine Tune-Up	15-1
Transmission	5-2	Loader Adjustments	15-3
Travel Speeds	5-2		
Differentials	5-2	GROUP 20 - LUBRICATION	
Drive Axles	5-2	Lubrication Chart (capacities	
Loader Hydraulic System	5-2	and lubricants)	20-1
Power Steering and Brakes Hydraulic		Engine Lubricating Oils	20-2
System	5-2	Transmission-Hydraulic Oil	20-2
Steering and Brakes	5-2	Loader Hydraulic Oil	20-2
Capacities	5-2	Greases	20-2
Tires	5-2		
Loader Operating Information	5-3	GROUP 25 - LOADER SEPARATION	
Loader Dimensions	5-3	Separating Loader and Engine Frames	25-1
		Removing and Installing Engine	25-2
GROUP 10 - PREDELIVERY, DELIVERY,		Removing and Installing Transmission	25-3
AND AFTER-SALES SERVICES		Removing Axle Housing and Differen-	
Predelivery Service	10-1	tial Assemblies	25-4
Delivery Service	10-3	Specifications and Special Tools	25-6
After-Sales Service	10-3		

Group 5 SPECIFICATIONS

ENGINE

Fuel Type	Diesel
Flywheel horsepower at 2400 rpm	131
Max. torque (ft-lbs) at 1600 rpm	
(observed) (nominal)	345
N.A.C.C. or A.M.A. horsepower rating	
for tax purposes	43.3
Number of cylinders	6
Bore and stroke	4.25 x 4.75 in.
Displacement	404 cu. in.
Compression ratio (JD644)	15.2 to 1
(JD644-A)	16.5 to 1
Firing order	1-5-3-6-2-4
Intake valve clearance	0.018 in.
Exhaust valve clearance	0.022 in.

Slow idle	750 rpm
Fast idle	2600 rpm
Governed speed range	750 to 2600 rpm

ENGINE AIR INTAKE SYSTEM

Air intake system consists of a two-stage dry-type air cleaner and exhaust gas driven turbocharger.

ELECTRICAL SYSTEM

Battery voltage (nominal)	12 volts
Battery specific gravity at full	
charge (corrected to 80° F.)	1.260 ± 0.010
Battery terminal grounded	Negative
Alternator regulation	Voltage regulator

TRANSMISSION

Make Allison
Type Torque converter and power shift
Converter oil pump Input driven, gear
 type
Transmission clutches . . Multi-disk, hy-
 draulically actuated,
 spring released,
 oil cooled, self-
 adjusting type.

TRAVEL SPEEDS (with 20.5 - 25 Tires)

Shift Lever Position	Speed
Low (L)	0 to 7 mph
High (H)	0 to 23 mph
Reverse (R)	0 to 9 mph

DIFFERENTIALS

Front Standard or optional No Spin
 (JD644)
 No Spin (JD644-A)
Rear Standard

DRIVE AXLES

Four-wheel drive with inboard mounted plan-
etary gears on both axles.

Front Fixed
Rear Oscillating (11° from horizontal)

LOADER HYDRAULIC SYSTEM

Type Open center, constant volume sys-
 tem to operate loader boom and
 bucket
Pump Transmission-mounted, vane type.

POWER STEERING AND BRAKES HYDRAULIC SYSTEM

Type Closed center, constant pressure
 system. Includes power steering,
 power brakes, and transmission
 cooling.
Pump Engine-driven eight-piston pump

STEERING

Full power steering.
Frame steered by two hydraulic cylinders.
Frame pivot from center 40°
Curb clearance circle 35 ft. 8 in.
Turning radius 15 ft. 5 in.

BRAKES

Hydraulic power-operated, inboard-mounted
disk type brake for each wheel. Brake pedal con-
trol of transmission clutches.


Mechanical 10 x 1-1/2-inch expanding shoe
parking brake on transmission output shaft.

CAPACITIES (U.S. Standard Measures)

Fuel tank 50 gal.
Cooling system 9 gal.
Engine crankcase with filter 15 qt.
 without filter 13 qt.
Transmission (includes steering
and brakes hydraulic
system) 12 gal. (approx.)
Front differential "No Spin" option 6 gal.
Regular 6-1/2 gal.
Rear differential 6-1/2 gal.
Loader hydraulic sump 17-1/2 gal.
Loader hydraulic system (sump,
lines, and cylinders) 33 gal.

TIRE OPTIONS

14.00 - 24, 12 ply rating (Grader Tread)
 (Early Models)
16.00 - 24, 12 ply rating (Grader Tread) |
 (Early Models)
16.00 - 24, 12 ply rating (Rock Grader
 Tread)
17.5 - 25, 12 ply rating (Dozer Tread)
 (Early Models)
20.5 - 25, 12 ply rating (Dozer Tread)
 (Early Models)
17.5 - 25, 12 ply rating (Loader Tread)
20.5 - 25, 12 ply rating (Loader Tread)
20.5 - 25, 16 ply rating (Rock Tread)

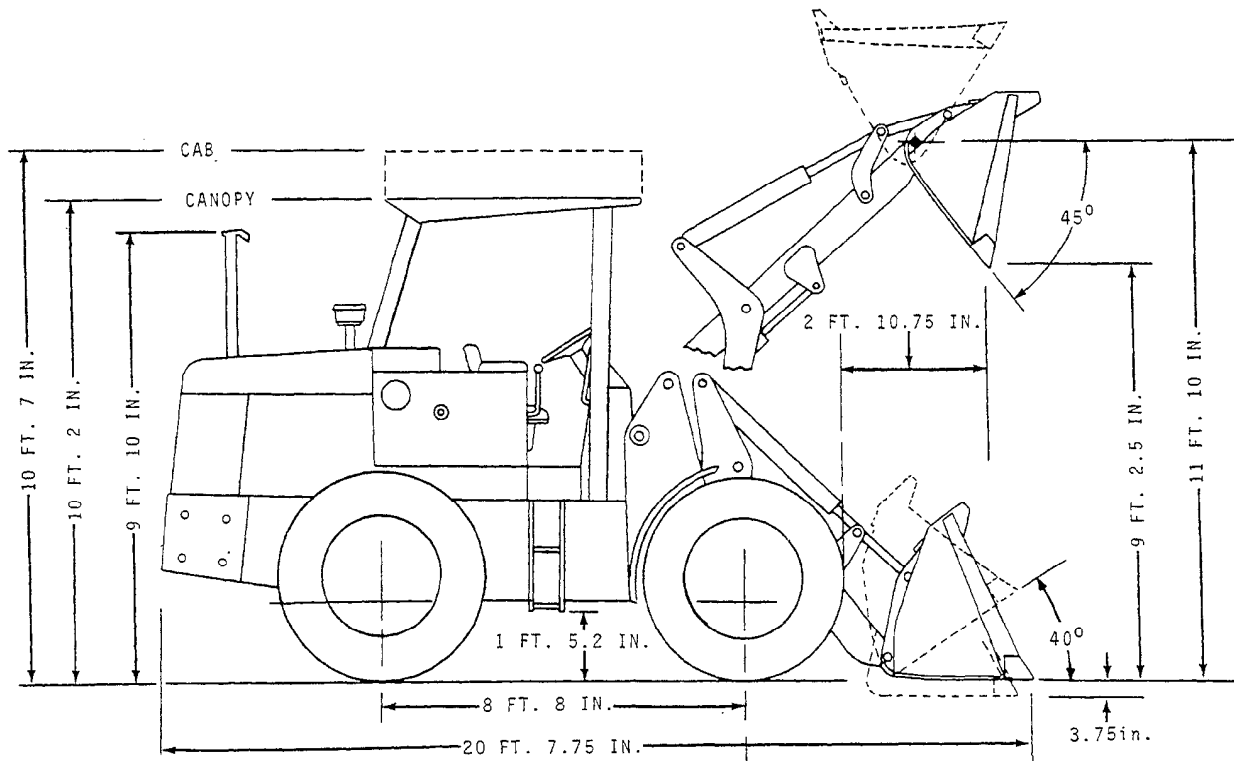

T29868

JD644 Loader Dimensions

LOADER OPERATING INFORMATION

Bucket Capacities ... 2-1/4 (early Models),
 2-1/2, 3, and
 4-1/2 cu. yd.
 Breakout force (SAE) (2-1/2 yd.) 23,945 lbs.
 3 yd. 20,960 lbs.
 4-1/2 yd. 16,125 lbs.
 2-1/4 yd (early models) 22,866 lbs.

LOADER DIMENSIONS (with 20.5 - 25 tires)

Height to top of stack 9 ft. 10 in.
 Overall height (to top of canopy) 10 ft. 2 in.
 Overall width 8 ft.
 Overall length (bucket level, no
 bucket teeth) 20 ft. 7.75 in.
 Ground clearance 1 ft. 5.2 in.
 Wheelbase 8 ft. 8 in.

Maximum bucket dump angle
 (full height) 45°
 Dumping reach (full height)
 (bucket at 45° angle) 2 ft. 10.75 in.
 Dumping clearance (full height)
 (bucket at 45° angle) 9 ft. 2.5 in.
 Maximum lift (bucket at full height)
 (at pivot pin) 11 ft. 10 in.
 Digging depth below ground
 (bucket level) 3.75 in.
 Bucket width (2-1/4 yd.)
 (Early Models) 8 ft. 10 in.
 (2-1/2 yd.) 8 ft. 8.6 in.
 (3 yd.) 8 ft. 8.6 in.
 (4-1/2 yd.) 9 ft. 2.6 in.
 Drott 4-in-1 8 ft. 10 in.
 Bucket roll-back (ground level) 40°
 Operating weight (2-1/2 yd.)
 (with cab) (approx.) 26,472 lbs.

The specifications and design information contained in this manual were correct at the time this machine was manufactured. It is John Deere's policy to continually improve and update our machines. Therefore the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and IEMC standards.

**Thank you very much
for your reading. Please
Click Here Then Get
More Information.**

NOTE:

**If there is no response to
click on the link above,
please download the PDF
document first and then
click on it.**

Group 10

PREDELIVERY, DELIVERY, AND AFTER-SALES SERVICES

PREDELIVERY SERVICE

Because of the shipping factors involved, plus extra finishing touches that are necessary to promote customer satisfaction, proper delivery service is of prime importance to the dealer.

A tag pointing out the factory-recommended procedure for predelivery service is attached to each new loader before it leaves the factory.

After completing the factory-recommended dealer checks and services listed on the predelivery tag, remove the tag from the loader and file it with the shop order for the job. The tag will then serve as a basis for certifying that the loader has received the proper predelivery service when that portion of the customer's John Deere Delivery Receipt is completed.

TEMPORARY LOADER STORAGE

Service	Specifications	Reference
Check radiator for coolant loss and antifreeze protection.	Bottom of filler neck.
Reduce shipping pressure of tires.	Operator's Manual
Cover loader and tires for protection and cleanliness.

PREDELIVERY INSPECTION

COOLING SYSTEM		
Inspect radiator for coolant loss.	Bottom of filler neck.
Check antifreeze protection.
ELECTRICAL SYSTEM		
Check battery terminals to be sure they are tight.
Remove brake fuse from spare fuse holder and insert into fuse block. Test lights.	Section 40, Group 10
TIRES AND WHEELS		
Adjust tire pressure.	Operator's Manual.
Check all wheel retainers for tightness.	275 ft-lbs torque.	Operator's Manual.

BEFORE DELIVERING LOADER—Continued

Service	Specification	Reference
TIRES AND WHEELS		
Adjust tire pressure.	Operator's Manual.
Check all wheel retainers for tightness.	275 ft-lbs torque.	Operator's Manual.
LUBRICATION		
Check crankcase oil level.	To top mark on dipstick.	Operator's Manual.
Loader hydraulic system oil level.	Check oil level at window (JD303 Special-Purpose Oil).	Operator's Manual.
Check oil level in front and rear differentials.	To level of check plug (cold) (JD303 Special-Purpose Oil).	Operator's Manual.
Check transmission oil level.	To top mark on dipstick (Hydraulic Transmission Fluid Type C-2).	Operator's Manual.
Lubricate grease fittings.	SAE multipurpose grease.	Operator's Manual.
ENGINE		
Check air cleaner.	Operator's Manual.
Fill fuel tank and start engine.	50 U.S. gallons.	Operator's Manual.
Check operation of lights, gauges and indicator lights.	Operator's Manual.
Check speed control linkage.	Section 20, Group 15.
Check engine speeds.	Section 20, Group 15.
OPERATION		
Shift transmission through all ranges.	Operator's Manual.
Check hydraulic system operation.	Section 60, Group 5.
Check clutch cutoff control disconnect.	Section 60, Group 5.
Check brake operation.	Section 60, Group 5.
Check steering operation.	Section 60, Group 5.
Check seat operation.	Operator's Manual.
GENERAL		
Tighten accessible nuts and cap screws.
Clean loader and touch up paint.

DELIVERY SERVICE

A thorough discussion of the operation and service of a new loader at the time of delivery helps to assure customer satisfaction. Proper delivery should be an important phase of a dealer's program. A portion of the John Deere Delivery Receipt emphasizes the importance of proper delivery service.

It is a well-known fact that many complaints have arisen simply because the owner was not shown how to operate and service his new unit properly. Enough time should be devoted, at the customer's convenience, to introducing the owner to his new loader and explaining to him how to operate and service it.

The following procedure is recommended before the service man and the owner complete the delivery acknowledgments portion of the delivery receipt.

Using the loader operator's manual as a guide, be sure that the owner understands these points thoroughly:

1. Controls and Instruments.
2. How to start and stop the engine.
3. The importance of the break-in period.
4. All functions of the hydraulic system.
5. The importance of safety.
6. The importance of lubrication and periodic services.

After explaining and demonstrating the above features, have the owner sign the delivery receipt and give him the operator's manual.

AFTER-SALES SERVICE

The purchaser of a new John Deere loader is entitled to a free inspection at some mutually agreeable time within the warranty period after the equipment has been "run in." The terms of this after-sales inspection are outlined on the back of the customer's John Deere delivery receipt.

The purpose of this inspection is to make sure that the customer is receiving satisfactory performance from his loader. At the same time, the inspection should reveal whether or not the loader is being operated, lubricated, and serviced properly.

If the recommended after-sales service inspection is followed, the dealer can eliminate a needless volume of service work by preventing minor irregularities from developing into serious problems later on. This will promote strong dealer - customer relations and present the dealer an opportunity to answer questions that may have arisen during the first few days of operation. During the inspection service, the dealer has the further opportunity of promoting the possible sale of other new equipment.

AFTER-SALES INSPECTION

Service	Specifications	Reference
COOLING SYSTEM		
Check radiator coolant level.	Bottom of filler neck.
Check hoses and connections for leaks.
FUEL SYSTEM		
Bleed fuel system.	Operator's Manual.
Check fuel line connections.
Check air cleaner element and unloading valve. Clean element if necessary.	Operator's Manual.

AFTER-SALES INSPECTION—Continued

Service	Specification	Reference
ELECTRICAL SYSTEM		
Check specific gravity of batteries.	Full charge - 1.260 at 80° F.	Operator's Manual.
Check level of battery electrolyte.	To bottom of filler neck in each cell.	Operator's Manual.
Check alternator belt tension.	75 to 85 lbs. tension. After 3 minutes of operation, tension should be 60 lbs. minimum.	Operator's Manual.
Check fan belts tension.	100 to 110 lbs. tension. After 3 minutes of operation, tension should be 80 lbs. minimum.	Operator's Manual.
Start engine and check action of starter, lights, and indicator lamps.	Operator's Manual.
LUBRICATION		
Check engine crankcase oil level.	To top mark on dipstick.	Operator's Manual.
Check transmission oil level.	To top mark on dipstick (J. D. Torque Converter Fluid Type C-2).	Operator's Manual.
Check hydraulic system oil level.	Check oil level at window (JD303 Special-Purpose Oil).	Operator's Manual.
Check oil levels in front and rear differentials.	To level of check plug (Cold oil) (JD303 Special-Purpose Oil).	Operator's Manual.
ENGINE		
Check engine valve tappet clearance.	Intake - 0.018-inch. Exhaust - 0.022-inch.	Section 20, Group 5.
CONTROLS		
Check clutch cutoff disconnect.	Section 50, Group 16.
Check return-to-dig valve operation.	Check oil level and adjust (JD303 Special-Purpose Oil).	Operator's Manual.
HYDRAULIC SYSTEM		
Check power steering.	Section 60, Group 5.
Check power brakes.	Less than 2 inches of travel.	Operator's Manual.
Check brakes accumulator.	20 brake pedal applications with engine stopped.	Section 60, Group 5.
TRANSMISSION		
Check general operation	Operator's Manual
Check torque on front output shaft yoke retaining nut.	600-700 lb-ft	Operator's Manual

Group 15 TUNE-UP AND ADJUSTMENT

GENERAL INFORMATION

Before tuning up an engine, determine if it is in condition so that performance can be restored by tune-up. Perform the following tests:

PRELIMINARY ENGINE TESTING

Operation	Specification	Reference
Vacuum test (at air cleaner)	8 to 25 inches of water at fast idle	FOS Manual - ENGINES Section 20, Group 5
Check radiator for air bubbles and indication of oil	Section 20, Group 20
Cylinder compression	400 psi minimum*	FOS Manual - ENGINES Section 20, Group 5

ENGINE TUNE-UP

AIR INTAKE SYSTEM

Air cleaner - clean primary element and dust cup	Operator's Manual
Check breather pipe for restrictions
Retighten cylinder head cap screws	130 ft-lbs.	Section 20, Group 5
Check valve clearance	0.022 in. - Exhaust 0.018 in. - Intake	Section 20, Group 5

**The most important factor in compression readings is the difference between cylinders. This difference should be no more than 25 psi.*