


**JD500 Series-A  
Loader  
SN (123,000- )**

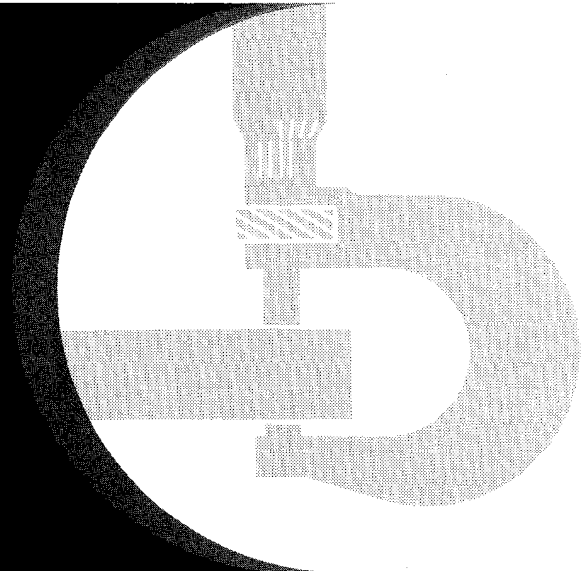

**Technical Manual**

**JD500 Series-A LOADER**  
**Serial No. (123,000- )**  
**Technical Manual**  
**TM-1025 (Feb-74)**

**SECTION 10 - GENERAL**

- Group 5 - Specifications
- Group 10 - Predelivery, Delivery, and After-Sale Services
- Group 15 - Tune-up
- Group 20 - Lubrication
- Group 25 - Separation

**SECTION 20 - ENGINE**

- Group 5 - General Information and Diagnosis
- Group 10 - Cylinder Head, Valves, and Camshaft
- Group 15 - Cylinder Block, Liners, Pistons, and Rods
- Group 20 - Crankshaft, Main Bearings, Flywheel, and Balancer
- Group 25 - Lubrication System
- Group 30 - Cooling System
- Group 35 - Governor and Speed Control Linkage

**SECTION 30 - FUEL SYSTEMS**

- Group 5 - Diagnosing Malfunctions
- Group 10 - Diesel Fuel System
- Group 15 - Gasoline Fuel System

**SECTION 40 - ELECTRICAL SYSTEM**

- Group 5 - Information and Diagrams
- Group 10 - Charging Circuit
- Group 15 - Starting Circuit
- Group 20 - Ignition System
- Group 25 - Lighting and Accessory Circuits

**SECTION 50 - POWER TRAIN**

- Group 5 - Collar-Shift Transmission and PTO Clutches
- Group 10 - Collar-Shift Transmission
- Group 15 - Engine Disconnect Clutch
- Group 20 - Power Shift Transmission
- Group 25 - Differential
- Group 30 - Final Drive
- Group 35 - Collar-Shift PTO
- Group 40 - Powershift PTO

**SECTION 60 - STEERING AND BRAKES**

- Group 5 - General Information


**SECTION 70 - HYDRAULIC SYSTEM**

- Group 5 - General Information, Diagnosis, and Tests
- Group 10 - Hydraulic Components
- Group 15 - Hydraulic Pumps
- Group 20 - Power Steering
- Group 25 - Power Brakes
- Group 30 - Loader Control Valve
- Group 35 - Backhoe Control Valve
- Group 40 - Cylinders
- Group 45 - Swing Cylinder

**INDEX**

*The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and IEMC standards.*

## INTRODUCTION

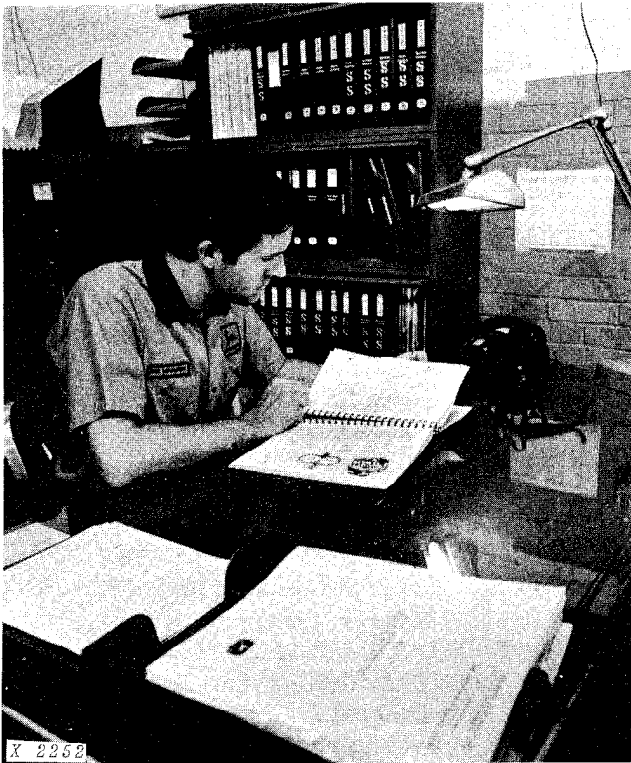

Use FOS Manuals for Reference



Use Technical Manuals for Actual Service

This technical manual is part of a twin concept of service:

- **FOS Manuals—for reference**
- **Technical Manuals—for actual service**

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

*Fundamentals of Service (FOS) Manuals* cover *basic* theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new men and for reference by experienced men.

*Technical Manuals* are *concise* service guides for a *specific* machine. Technical Manuals are on-the-job guides containing only the vital information needed by a journeyman mechanic.



When a serviceman should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

Some features of this technical manual:

- *Table of contents at front of manual*
- *Exploded views showing parts relationship*
- *Photos showing service techniques*
- *Specifications grouped for easy reference*

This technical manual was planned and written for you—a journeyman mechanic. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

# Section 10 GENERAL

CONTENTS OF THIS SECTION			
	Page		Page
<b>GROUP 5 - SPECIFICATIONS</b>		<b>Greases . . . . .</b>	<b>20-2</b>
General Machine Specifications . . . . .	5-1	<b>Storing Lubricants . . . . .</b>	<b>20-2</b>
<b>GROUP 10 - PREDELIVERY, DELIVERY, AND AFTER-SALE SERVICES</b>		<b>GROUP 25 - SEPARATION</b>	
Predelivery Service . . . . .	10-1	Removing Backhoe . . . . .	25-1
Delivery Service . . . . .	10-3	Removing Loader . . . . .	25-2
After-Sale Inspection . . . . .	10-4	Separating Engine and Tractor Front End From Clutch Housing . . . . .	25-3
<b>GROUP 15 - TUNE-UP</b>		Removing Engine From Tractor Front End . . . . .	25-3
Preliminary Engine Testing . . . . .	15-1	Separating Front End From Engine and Tractor . . . . .	25-4
Engine Tune-Up . . . . .	15-1	Separating Clutch Housing From Power Shift Transmission Case . . . . .	25-5
Final Engine Test . . . . .	15-3	Separating Clutch Housing From Collar Shift Transmission Case . . . . .	25-7
Tractor Tune-Up . . . . .	15-3	Removing Final Drive Assembly . . . . .	25-7
<b>Group 20 - LUBRICATION</b>		Torques For Hardware . . . . .	25-8
Lubrication Chart . . . . .	20-1	Special Tools . . . . .	25-8
Engine Lubricating Oil . . . . .	20-2		
Transmission-Hydraulic Oil. . . . .	20-2		

## Group 5 GENERAL MACHINE SPECIFICATIONS

**HORSEPOWER** (at 2500 engine rpm)  
 Net engine flywheel (at 500 ft. altitude and 85 F. temperature); engine equipped with fan, air cleaner, water pump, lubricating oil pump, fuel pump, and alternator:

Gasoline . . . . . 77.7 hp.  
 Diesel . . . . . 80.0 hp.

**ENGINE**

Type . . . . . 4-stroke cycle, 4-cylinder in-line, valve-in-head

**Bore and Stroke:**

Diesel . . . . . 4-1/4 x 4-3/4 in.  
 Gasoline . . . . . 4-1/4 x 4-1/4 in.

**Displacement:**

Diesel . . . . . 269 cu. in.  
 Gasoline . . . . . 241 cu. in.

**Compression ratio:**

Diesel . . . . . 16.5 to 1  
 Gasoline . . . . . 7.5 to 1

Firing order . . . . . 1-3-4-2

**Maximum torque:**

Diesel . . . . . 189 ft-lb  
 Gasoline . . . . . 186 ft-lb

**Rpm at maximum torque:**

Diesel . . . . . 1,400  
 Gasoline . . . . . 1,800

**Main bearings:**

Diesel . . . . . 5  
 Gasoline . . . . . 3

**Main bearing length and diameter:**

Diesel and gasoline . . . . . 1.385 in.-3.375 in.

**Valve clearance:**

**Diesel**

Intake . . . . . 0.018 in.  
 Exhaust . . . . . 0.018 in.

**Gasoline:**

Intake . . . . . 0.015 in.  
 Exhaust . . . . . 0.031 in. (cold)

**Governor:**

Diesel . . . . . Integral with injection pump.

ENGINE (continued)

Injection pump timing . . . . . TDC  
Distributor timing:  
2200 rpm engine speed . . . 20 degrees  
BTDC  
Distributor point gap . . . . . 0.022 in.  
Spark plug gap . . . . . 0.025 in.  
Engine speeds:  
Normal slow idle . . . . . 800 rpm  
Working range . . . . . 1500 to 2500 rpm

LUBRICATION SYSTEM

Type . . Force-feed, pressurized with full-flow oil filter.

FUEL SYSTEM

Diesel . Direct injection, inlet metering, distributing-type.  
Diaphragm-type fuel pump.  
Gasoline Pressure system, diaphragm-type fuel pump, single barrel, up-draft carburetor.

COOLING SYSTEM

Type . Pressurized system with centrifugal pump. Output of pump - 60 gpm.  
Engine temperature control . Heavy-duty thermostat

ELECTRICAL SYSTEM

Starter, alternator, lights, and accessory voltage . . . . . 12 volts  
Charging system capacity . . . . . 55 amps  
Battery:  
Gasoline . . . One, 12-volt, 78-plate 75-ampere-hour  
Diesel . . . . Two, 6-volt, 75-plate 172-ampere-hour

HYDRAULIC SYSTEM:

Type . . Closed center, constant pressure. Includes power steering, power brakes and equipment control.  
Standby pressure . . . . . 2350 psi

COLLAR SHIFT TRANSMISSION

Transmission clutch . . . . . Dry-disk, foot operated, spring loaded type. Single plate (12 in.) with 149 inches of facing area. Torque capacity of 4,490 in.-lb. at 2,500 engine rpm.

Transmission type . . . . . Constant mesh manual transmission. Eight forward speeds and 2 reverse. Left-hand reverser lever.

Ground speed (at 2500 engine rpm with 16.9-28 tires):

1st . . . . . 1.7 mph  
2nd . . . . . 2.7 mph  
3rd . . . . . 3.6 mph  
4th . . . . . 4.6 mph  
5th . . . . . 5.6 mph  
6th . . . . . 7.5 mph  
7th . . . . . 9.4 mph  
8th . . . . . 15.3 mph  
1st Reverse . . . . . 3.5 mph  
2nd Reverse . . . . . 5.4 mph

POWER SHIFT TRANSMISSION

Engine disconnect . . . One dry-disk, lever operated clutch

Transmission type . . . . . Planetary gears, clutches and brakes wet disk, hydraulically actuated, controlled by speed selector. Eight speeds forward and 4 reverse. Left-hand reverser lever.

Ground speed (at 2500 engine rpm with 16.9-28 tires):

1st . . . . . 1.6 mph  
2nd . . . . . 2.3 mph  
3rd . . . . . 3.6 mph  
4th . . . . . 4.6 mph  
5th . . . . . 6.0 mph  
6th . . . . . 7.7 mph  
7th . . . . . 10.2 mph  
8th . . . . . 17.0 mph  
1st Reverse . . . . . 1.9 mph  
2nd Reverse . . . . . 2.7 mph  
3rd Reverse . . . . . 4.2 mph  
4th Reverse . . . . . 5.4 mph

**FINAL DRIVE**

Type . . . . . Planetary  
Power Shift gear  
reduction in . . . . . 1st gear--229 to 1  
8th gear--21.8 to 1  
Collar Shift gear  
reduction in . . . . . 1st gear--214 to 1  
8th gear--24.2 to 1

**POWER**

**TAKE-OFF** . Special equipment. Hand lever control. Mid PTO-1000 rpm; Single speed rear - 1000 rpm; Dual speed rear - 540 or 1000 rpm.

**STEERING.** . Full power, hydrostatic type. Provision for manual operation  
Number of turns (far left to far right) . . . . . 4.67

**BRAKES.** . . Hydraulically power actuated, disk-type operating in oil  
Provision for manual operation with brake accumulator to supply oil for an emergency application.

**FRONT TIRES**

Size . . . . . 8.25-16, 10-ply  
14.00-17.5, 10-ply

**REAR TIRES**

Size . . . . . 16.9-28, 8-ply  
18.4-28, 6-ply

**WHEEL TREAD**

Front . . 56 in. (8.25-16), 66 in. (14.00-17.5)  
Rear . . 64 in. (16.9-28), 65.5 in. (18.4-28)

**CAPACITIES**

Cooling system . . . . . 19 qt.  
Fuel tank (diesel and gasoline) . . . 25 gal.  
Engine lubrication (including filter) . 8 qt.  
Hydraulic system (U.S. gals.)  
Transmission reservoir:  
Power Shift . . . . . 11  
Collar Shift . . . . . 8  
Loader reservoir . . . . . 3  
Backhoe reservoir. . . . . 7.5

**LOADER**

Breakout force . . . . . 5,100 lb.  
Lifting capacity at full height . . . 3,700 lb.  
Raising time to full height . . . . 4.0 sec.  
Bucket dumping time . . . . . 1.5 sec.  
Lowering time. . . . . 2.75 sec.  
Boom  
cylinders: Double-acting, 2-3/4-in. bore,  
30-in. stroke, 1-1/2-in. dia.  
piston rod.  
Bucket  
cylinders: Double-acting, 2-3/4-in. bore,  
15-in. stroke, 1-1/2-in. dia.  
piston rod.

**BACKHOE**

Swing arc . . . . . 180 deg.  
Digging force (24-in. standard bucket) . . . . . 9,700 lb.  
Reach from center of rear axle using 24-inch standard bucket . 20 ft. 5 in.  
Stabilizer spread . . . . . 9 ft.  
Boom  
cylinder . . 4-1/2 in. bore, 32 in. stroke,  
Piston rod dia. 2-1/4 in.  
Crowd  
cylinder . . 4-in. bore, 32-5/16-in stroke;  
Piston rod dia. 2-1/4 in.  
Bucket  
cylinder . . 3-1/2-in. bore, 27-1/4-in.  
stroke; Piston rod dia. 2-1/4 in.  
Swing  
cylinder. . . Piston and rod type  
Stabilizer  
cylinders . . 3-1/2-in. bore, 27-5/16-in.  
stroke; Piston rod dia. 1-3/4 in.

**LOADER BACKHOE DIMENSIONS**

Wheelbase . . . . .	82 in.
Overall length . . . . .	274 in.
Overall height (to top of canopy) . . .	103 in.
Transport height (to dipperstick). . .	11 ft. max.
Height to top of hood . . . . .	63.9 in.
Overall width . . . . .	81 in.
Ground clearance . . . . .	13 in.
Turning radius (brakes released) . . .	150 in.
Turning clearance circle (loader hinge pin 3 ft. above ground level, bucket rolled back, and brakes released) . . . . .	30 ft. dia.
Vehicle clearance circle:	
With brakes . . . . .	280 in.
Without brakes . . . . .	310 in.

**SHIPPING WEIGHT** (Equipped with Power Shift transmission, less fuel and ballast. Deduct 255 lbs. if equipped with a Collar Shift transmission. If equipped with multiposition backhoe, add 800 lbs. Loader equipped with 7/8 cu. yd. bucket and backhoe equipped with 24 in. standard bucket, without Roll-Gard):

Diesel . . . . .	12,980 lb.
Gasoline . . . . .	12,840 lb.
Roll-Gard (includes canopy) . . . . .	420 lb.
Loader bucket (7/8 cu. yd.) . . . . .	591 lb.
Loader bucket (1 cu. yd.) . . . . .	665 lb.
Loader bucket (1-1/4 cu. yd.) . . . . .	669 lb.
Drott 4 in 1 bucket . . . . .	1,045 lb.
Standard 24 in. backhoe bucket . . . . .	239 lb.
Backhoe dipperstick extension . . . . .	239 lb.

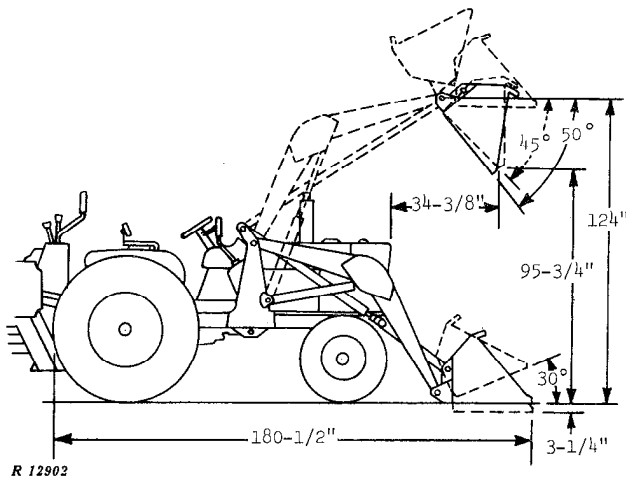


Fig. 1 - Loader Equipped with 7/8 Yard Bucket

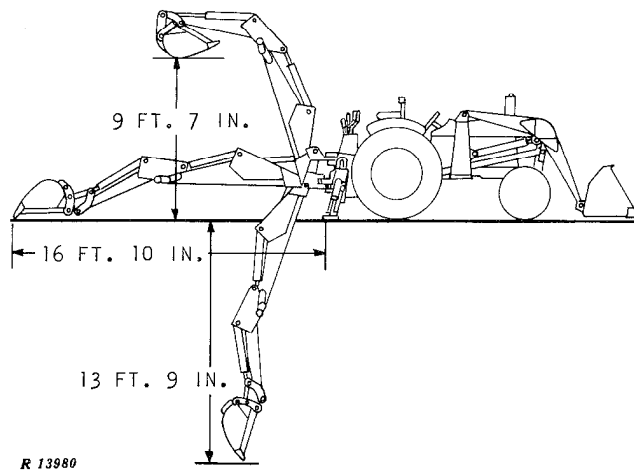


Fig. 2 - Backhoe Equipped with 24 In. Standard Bucket

*(Specifications and design subject to change without notice. Whenever applicable, specifications are in accordance with IEMC and SAE standards.)*

**Thank you very much  
for your reading. Please  
Click Here Then Get  
More Information.**

**NOTE:**

**If there is no response to  
click on the link above,  
please download the PDF  
document first and then  
click on it.**



## Group 10 PREDELIVERY, DELIVERY, AND AFTER SALE SERVICES

### PREDELIVERY SERVICE

Because of the shipping factors involved, plus extra finishing touches that are necessary to promote customer satisfaction, proper predelivery service is of prime importance to the dealer.

Machines shipped from the factory with the alternator completely disconnected, require an AR47860 Auxiliary Ignition Battery Kit to supply power for the ignition system (gasoline models) and the fuel shutoff solenoid (all models). The adapter on the battery kit harness plugs into the cigar lighter. Be sure to read the instruc-

tions attached to the machine before starting the engine.

After completing the factory-recommended predelivery services listed on the predelivery tag, remove the tag from the machine and file it with the shop order for the job. The tag will then serve as a basis for certifying that the machine has received the proper predelivery service when that portion of the customer's John Deere Delivery Receipt is completed.

### TEMPORARY MACHINE STORAGE

Service	Specifications	Reference
Check radiator for coolant loss and antifreeze protection.	1-1/2 inches above baffle.	. . . . .
Drain fuel system (gasoline).	. . . . .	Operator's manual
Remove and store battery electrolyte.	Store at room temperature.	. . . . .
Reduce shipping pressure of tires.	. . . . .	Operator's manual
Cover tractor and tires for protection and cleanliness.	. . . . .	. . . . .

### BEFORE DELIVERING MACHINE

<u>Cooling System</u>		
Inspect radiator for coolant loss.	1-1/2 inches above baffle.	. . . . .
Check antifreeze protection.	. . . . .	. . . . .
<u>Electrical System</u>		
Install electrolyte and charge batteries.	. . . . .	FOS-20 Manual
Stamp date code on battery.	. . . . .	FOS-20 Manual
Connect alternator. Do not attempt to polarize. Remove resistor if present.	. . . . .	Section 40, Group 10
Install light switch knob.	. . . . .	. . . . .
Clean terminals and connect battery cables.	. . . . .	Section 40, Group 5

**BEFORE DELIVERING MACHINE -Continued**

Service	Specifications	Reference
<u>Tires and Wheels</u>		
Adjust pressure of tires.	. . . . .	Operator's manual
Check front wheel hub bolts, rear wheel rim retainer nuts, and rear wheel retainer cap screws for tightness.	Front hub bolts - 275 ft-lbs Rim retainer nuts - 275 ft-lbs Rear hub bolts - 170 ft-lbs	Operator's manual
<u>Lubrication</u>		
Check crankcase oil level.	To upper marks on dipstick.	Operator's manual
Check transmission-hydraulic system oil level.	To top of "SAFE" range on dipstick. Type 303 Special-Purpose Oil.	Operator's manual
Lubricate grease fittings.	SAE multipurpose-type grease	Operator's manual
Check distributor lubrication.	Distributor cam lubricant	Section 40, Group 20
<u>Engine</u>		
Check air cleaner.	. . . . .	Operator's manual
Fill fuel tank and start engine.	Capacity - 25 U.S. gallons	Operator's manual
Check operation of lights, gauges, and indicator lamps.	. . . . .	Operator's manual
Check governor linkage for free operation.	. . . . .	Section 15, Group 40
Check engine timing.	. . . . .	Section 40, Group 20
Check engine idle speeds.	. . . . .	Section 15, Group 40
<u>Operation</u>		
Shift transmission through all speeds.	. . . . .	Operator's manual
Check inching pedal for smooth engagement.	. . . . .	. . . . .
Check engine disconnect clutch.	No tendency for machine to creep when clutch is disengaged (2-1/4 inch average free travel)	Section 50, Group 5
Check power takeoff operation.	. . . . .	Operator's manual
Check differential lock operation.	. . . . .	Operator's manual

**BEFORE DELIVERING MACHINE -Continued**

Service	Specifications	Reference
Check operation of steering, brakes, and hydraulic systems.	. . . . .	Operator's manual
Check seat operation.	. . . . .	Operator's manual
<u>General</u>		
Tighten accessible nuts and cap screws.	. . . . .	. . . . .
Clean tractor and touch up paint.	. . . . .	. . . . .

**DELIVERY SERVICE**

A thorough discussion of the operation and service of a new machine at the time of delivery helps to assure complete customer satisfaction. Proper delivery should be an important phase of a dealer's program. A portion of the John Deere Delivery Receipt emphasizes the importance of proper delivery service.

It is a well-known fact that many complaints have arisen simply because the owner was not shown how to operate and service his new machine properly. Enough time should be devoted, at the customer's convenience, to introducing the owner to his new machine and explaining to him how to operate and service it.

The following procedure is recommended before the serviceman and owner complete the delivery acknowledgments portion of the delivery receipt.

Using the machine operator's manual as a guide, be sure that the owner understands these points thoroughly:

1. Controls and Instruments.
2. How to start and stop the engine.
3. The importance of the break-in period.
4. How to use liquid or cast-iron ballast.
5. All functions of the hydraulic system.
6. Using the power takeoff.
7. The importance of safety.
8. The importance of lubrication and periodic services.

After explaining and demonstrating the above features, have the owner sign the delivery receipt and give him the operator's manual.

### AFTER SALE INSPECTION

The purchaser of a new John Deere Loader is entitled to a free inspection at some mutually agreeable time within the warranty period after the equipment has been "run in." The terms of this after-sale inspection are outlined on the back of the customer's John Deere Delivery Receipt.

The purpose of this inspection is to make sure that the customer is receiving satisfactory performance from his machine. At the same time, the inspection should reveal whether or not the machine is being operated, lubricated, and serviced properly.

If the recommended after-sale service inspection is followed, the dealer can eliminate a needless volume of service work by preventing minor irregularities from developing into serious problems later on. This will promote strong dealer-customer relations and present the dealer an opportunity to answer questions that may have arisen during the first few days of operation. During the inspection service, the dealer has the further opportunity of promoting the possible sale of other new equipment.

The following inspection program is recommended within the first 100 hours of machine operation.

### INSPECTION PROCEDURES

Service	Specifications	Reference
<u>Cooling System</u>		
Check radiator coolant level.	1-1/2 inches above baffle.	. . . . .
Clean external surface of radiator core.	. . . . .	. . . . .
Check hoses and connections for leaks.	. . . . .	. . . . .
<u>Fuel System</u>		
Remove water and foreign matter from fuel pump and filter sediment bowls.	. . . . .	Operator's manual
Bleed fuel system.	. . . . .	Operator's manual
Tighten loose connections and check entire system for leaks, correct if necessary.	. . . . .	. . . . .
Check air cleaner cup, element, and unloading valve. Clean element if necessary.	. . . . .	Operator's manual

INSPECTION PROCEDURES-Continued

Service	Specifications	Reference
<u>Electrical System</u>		
Check specific gravity of battery(s).	Full charge - 1.260 to 1.290 at 80° F.	Operator's manual
Check level of battery electrolyte.	To bottom of filler neck in each cell.	Operator's manual
Check belt tension.	1-inch deflection with a 20-pound force.	Operator's manual
Start engine and check action of starter, lights, and indicator lamps.	. . . . .	Operator's manual
<u>Lubrication</u>		
Check crankcase oil level.	To upper marks on dipstick.	Operator's manual
Check transmission-hydraulic system oil level.	In "SAFE" range on dipstick. Use John Deere Type 303 Special-Purpose Oil.	Operator's manual
Check distributor lubrication.	Distributor cam lubricant.	Section 40, Group 20
<u>Engine</u>		
Check valve clearance.	Intake: Diesel - 0.018 in. Gasoline - 0.015 in. Exhaust: Diesel - 0.018 in. Gasoline - 0.028 in. (hot)	Operator's manual
Check engine speed under load, fuel consumption, and horsepower.	Specification.	Group 15 of this Section.
<u>Clutches and differential lock</u>		
Shift transmission through all speeds.	. . . . .	Operator's manual
Check transmission clutch free travel (Collar-Shift transmission).	Approximately 1-1/2-inch free travel.	Operator's manual
Check engine disconnect clutch (Power Shift transmission).	No tendency for machine to creep when clutch is disengaged (2-1/4 in. average free travel).	Section 50, Group 15

INSPECTION PROCEDURES-Continued

Service	Specifications	Reference
Check PTO clutch and brake operation.	.....	Section 50, Groups 40 & 45
Check differential lock operation.	.....	Operator's manual
<u>Hydraulic System</u>		
Check hydraulic cylinder operations, fittings, and hose positions.	.....	Operator's manual
Check power steering.	Smooth, easy operation.	Section 60, Group 5
Check operation of power brakes and accumulator.	Bleed the power brakes after every 200 hours of operation or whenever brake pedal travel exceeds 3 inches immediately after stopping the engine.	Operator's manual
Check operation of hydraulic function accumulator.	.....	Operator's manual
<u>Nuts and Cap Screws</u>		
Tighten accessible nuts and cap screws that seem to require adjustment.	.....	.....

## Group 15 TUNE-UP

### GENERAL INFORMATION

Before tuning up a tractor, determine whether a tune-up will restore operating efficiency. When there is doubt, the following preliminary tests

will help to determine if the engine can be tuned-up. If the condition is satisfactory, proceed with the tune-up. Choose from the following procedures only those necessary to restore the unit.

### PRELIMINARY ENGINE TESTING

Operation	Specification	Section-Group Reference
Dynamometer Test (at 2500 engine rpm)	Compare with previous recorded output; compare with output after tune-up	FOS 30 Manual, Chapter 12
Compression Test Diesel Gasoline	400 psi at 275 rpm 180 psi at 170 rpm	FOS 30 Manual, Chapter 12
Vapor Flow Test (average engine condition) Diesel Gasoline	Normal blowby - 60-100 cu. ft./hr. Excessive blowby - 150 cu. ft./hr. Normal blowby - 30-60 cu. ft./hr. Excessive blowby - 100 cu. ft./hr.	FOS 30 Manual, Chapter 12
Manifold Depression Test (gasoline)	18-20 inches Mercury	FOS 30 Manual, Chapter 12
Engine Coolant Check Test	No air bubbles or oil film in radiator	FOS 30 Manual, Chapter 12

### ENGINE TUNE-UP

Operation	Specification	Section-Group Reference
Air Intake System		
Service air cleaner and check system for leaks	.....	FOS 30 Manual, Chapter 12
Check system for restrictions using water manometer	.....	FOS 30 Manual, Chapter 12
Normal reading (inches of water):		
Diesel - with precleaner and extension	9 in. at 2500 rpm	.....
without precleaner and extension	4 in. at 2500 rpm	.....
Gasoline - with precleaner and extension	7 in. at 2500 rpm (full load)	.....
without precleaner and extension	3 in. at 2500 rpm (full load)	.....
Maximum permitted reading	20 in. at 2500 rpm (full load)	.....
Check restriction indicator light operation.	19-21 in. at 2500 rpm (full load)	.....